710F0–01

REPLACEMENT







1. TABLE OF BOLT, SCREW AND NUT

HINT:

- Indicate the bolts, screws and nuts, which are necessary for installation and removal of the instrument panel, in the illustration and the text with alphabets.
- The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.

2. DISCONNECT BATTERY NEGATIVE TERMINAL

mm (in.)

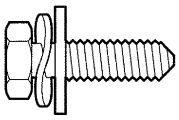Code	Shape	Code	Shape	Code	Shape
<A>	 φ 17.5 (0.6948) L = 25 (0.9925) B33595 55394-37010	<B>	 φ 6 (0.2382) L = 22 (0.8734) B33319 90119-06022	<C>	 φ 5.22 (0.2072) L = 16 (0.6352) B30768 93567 – 15016
<D>	 φ 5.22 (0.2072) L = 16 (0.6352) B30768 93567-55016	<E>	 φ 8 (0.3176) L = 18 (0.7146) E34413 93568 – 15012	<F>	 φ 6 (0.2382) B34041 90179 – 06009

P

3. INSPECT CENTER FRONT WHEEL


4. REMOVE HORN BUTTON ASSY (W/O SRS AIRBAG) (See page 50–8)

5. REMOVE HORN BUTTON ASSY (W/ SRS AIRBAG) (See page 50–8)

B53704

6. REMOVE STEERING WHEEL ASSY (See page 50–8)

SST 09950–50012 (09951–05010, 09952–05010, 09953–05020, 09954–05020)

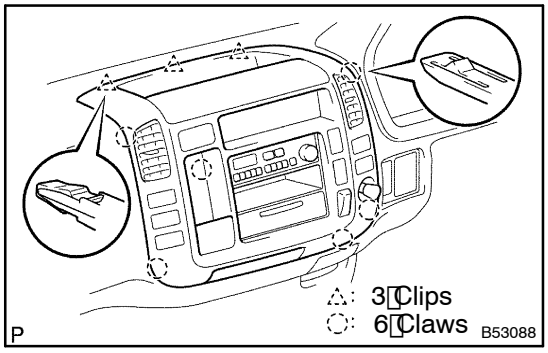

7. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB–ASSY CENTER

(a) Disengage the 3 clips and 6 claws.


(b) Disconnect the connectors and remove the instrument cluster finish panel.

8. REMOVE HEATER CONTROL LEVER KNOB (See page 55–24)

9. REMOVE HEATER CONTROL NAME PLATE (See page 55–24)

10. REMOVE HEATER OR BOOST VENTILATOR CONTROL ASSY (See page 55–24)


11. REMOVE RADIO BRACKET NO. 1 & NO. 2 (See page 67–2)

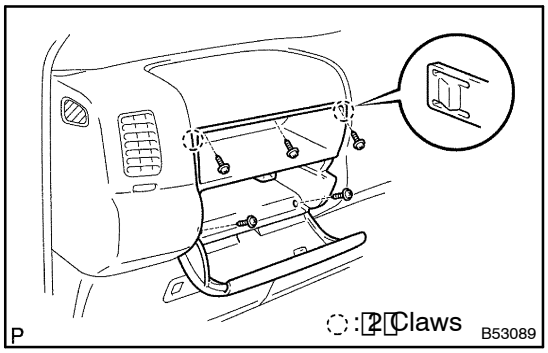

12. REMOVE GLOVE COMPARTMENT DOOR ASSY

(a) Remove the 5 screws <D>.


(b) Disengage the 2 claws and remove the glove compartment door.

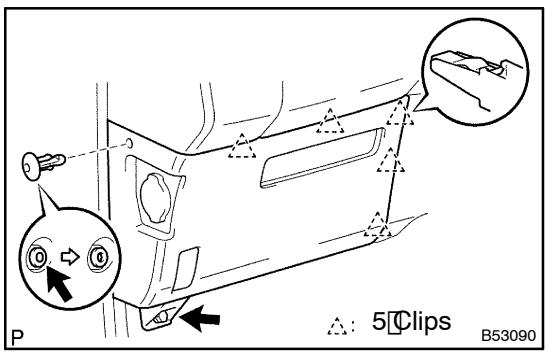

13. REMOVE INSTRUMENT COVER LWR

(a) Remove the clip and bolt.


(b) Disengage the 5 clips and remove the instrument cover.

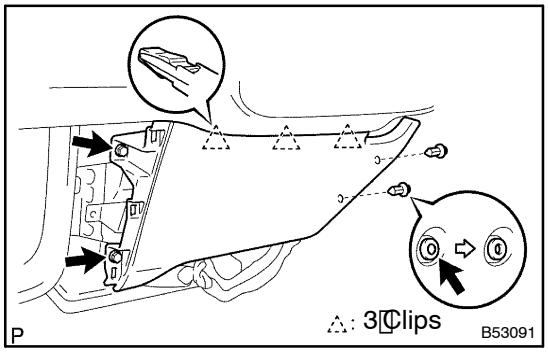

14. REMOVE INSTRUMENT COVER LOWER CENTER


(a) Remove the 2 clips and 2 bolts.

(b) Disengage the 3 clips and remove the instrument cover.

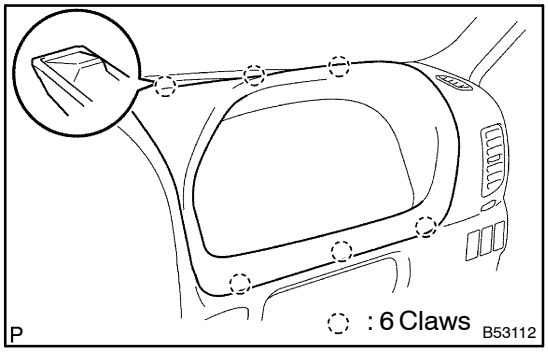

15. REMOVE INSTRUMENT CLUSTER FINISH PANEL


(a) Using a moulding remover, disengage the 6 claws and remove the finish panel.

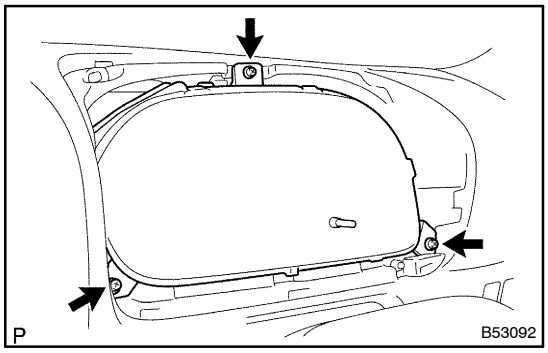

16. REMOVE COMBINATION METER ASSEMBLY

(a) Remove the 3 screws.

(b) Disconnect the connectors and remove the combination meter.

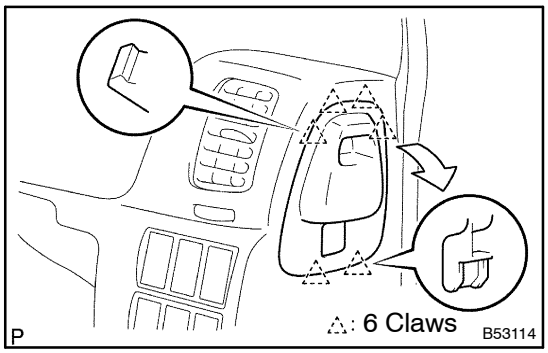

17. REMOVE OIL RESERVOIR TANK COVER RH


(a) Disengage the 6 claws and remove the reservoir tank cover.

18. REMOVE INSTRUMENT PANEL SUB–ASSY

(a) Remove the 2 clips.

(b) Remove the 2 nuts <F> and 7 bolts <A> <B>.

(c) Disconnect the connectors and remove the instrument panel.

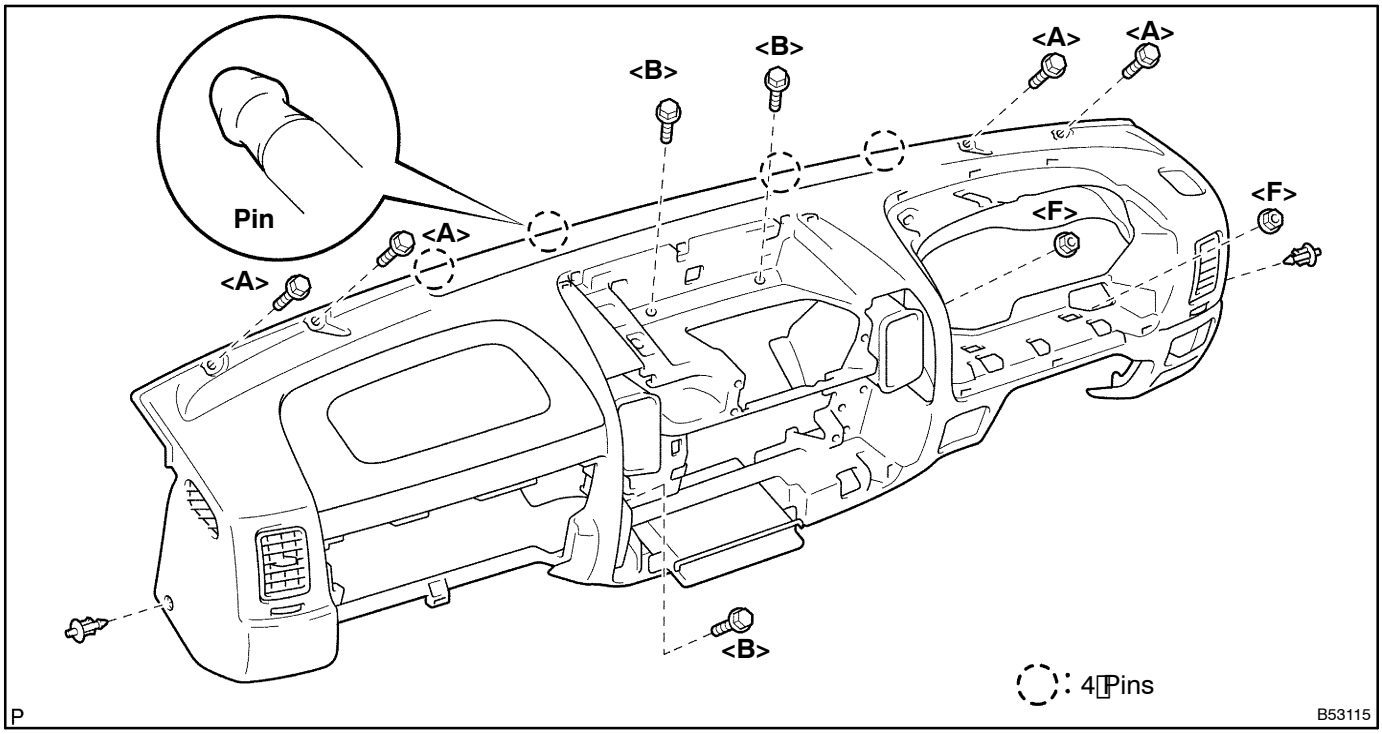

19. REMOVE INSTRUMENT PANEL CUP HOLDER ASSY

(a) Remove the 2 screws <C> and cup holder.

20. REMOVE CUP HOLDER HOLE COVER

21. REMOVE FRONT ASH RECEPTACLE RETAINER SUB–ASSY

(a) Remove the 3 screws <C> and ash receptacle retainer.

22. REMOVE HEATER TO REGISTER DUCT NO.1

(a) Remove the 2 screws <C> and heater to register duct.

23. REMOVE HEATER TO REGISTER DUCT NO.4

24. REMOVE HEATER TO REGISTER DUCT CENTER

(a) Remove the 2 screws <C> and heater to register duct center for RH.

25. REMOVE HEATER TO REGISTER DUCT CENTER

(a) Remove the 2 screws <C> and heater to register duct center for LH.

26. REMOVE SIDE DEFROSTER DUCT ASSY RH

(a) Remove the screw <C> and defroster duct.

27. REMOVE SIDE DEFROSTER DUCT ASSY LH

28. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.1 (RH)

29. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.1 (LH)

30. REMOVE INSTRUMENT PANEL WIRE

31. REMOVE SIDE DEFROSTER NOZZLE NO.1

32. REMOVE INSTRUMENT SIDE PANEL RH

33. CENTER SPIRAL CABLE (W/ SRS AIRBAG) (See page 50–8)

34. INSTALL STEERING WHEEL ASSY (See page 50–8)

35. INSPECT STEERING WHEEL CENTER POINT (See page 50–8)

36. INSTALL HORN BUTTON ASSY (W/O SRS AIRBAG) (See page 50–8)

37. INSTALL HORN BUTTON ASSY (W/ SRS AIRBAG) (See page 50–8)

38. INSPECT HORN BUTTON ASSY (W/ SRS AIRBAG) (See page 50–8)

39. INSPECT SRS WARNING LIGHT (W/ SRS AIRBAG) (See page 05–312)