
720HI–01

OVERHAUL


HINT:

The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.

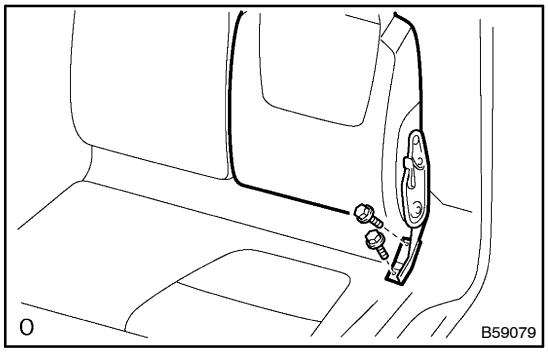


1. REMOVE FRONT SEAT BACK ASSEMBLY LH

(a) Remove the 2 bolts and front seat back.

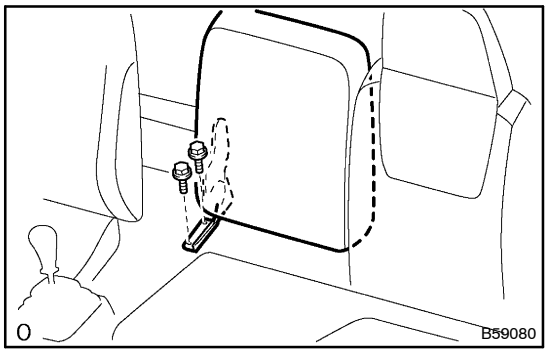

2. REMOVE FRONT SEAT BACK CENTER ASSEMBLY


(a) Remove the 2 bolts and front seat back.

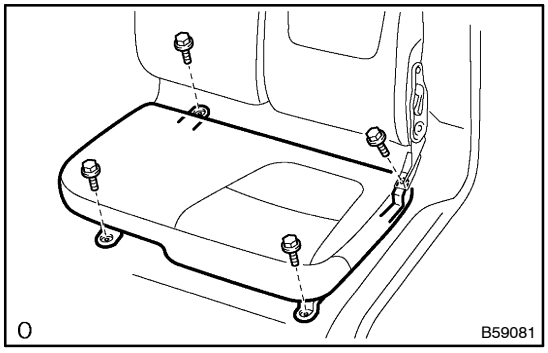

3. REMOVE FRONT SEAT CUSHION ASSEMBLY LH

(a) Remove the seat track cover.

(b) Remove the 4 bolts and front seat cushion.

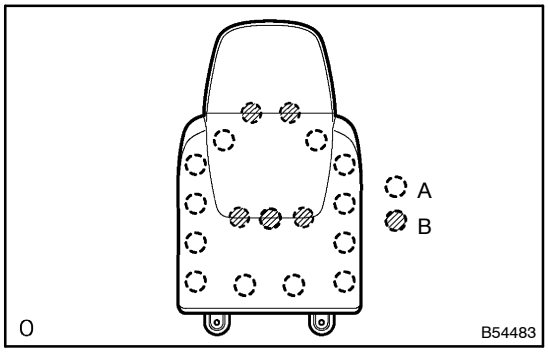

4. REMOVE SEPARATE TYPE FRONT SEAT BACK COVER

(a) Remove the 12 hog rings "A", as shown in the illustration.

(b) Remove the 5 hog rings "B", as shown in the illustration.


(c) Remove the front seat back cover.

5. REMOVE SEPARATE TYPE FRONT SEAT BACK PAD

(a) Remove the seat back pad from the seat back spring.

6. REMOVE CONSOLE COVER LOWER

(a) Remove the screw and reclining remote control lever from the seat back.

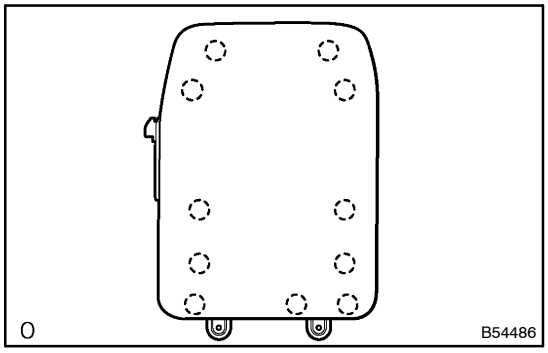


7. REMOVE FRONT SEAT BACK COVER CENTER

(a) Remove the 11 hog rings and seat back cover center, as shown in the illustration.

8. REMOVE CENTER SEAT BACK PAD

(a) Remove the center seatback pad from the center seat back frame.

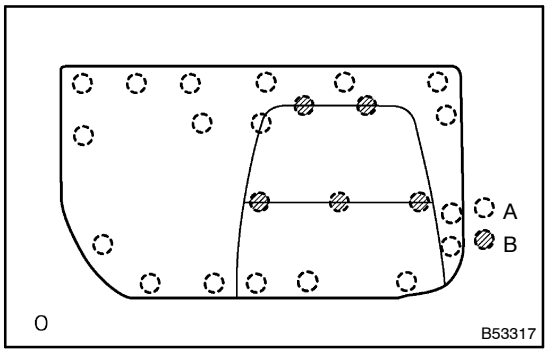


9. REMOVE SEPARATE TYPE FRONT SEAT CUSHION COVER

(a) Remove the 18 hog rings ”A”, as shown in the illustration.
(b) Remove the 5 hog rings ”B”, as shown in the illustration.
(c) Remove the seat cushion cover.


10. REMOVE SEPARATE TYPE FRONT SEAT CUSHION PAD

(a) Remove the seat cushion pad from the cushion frame.

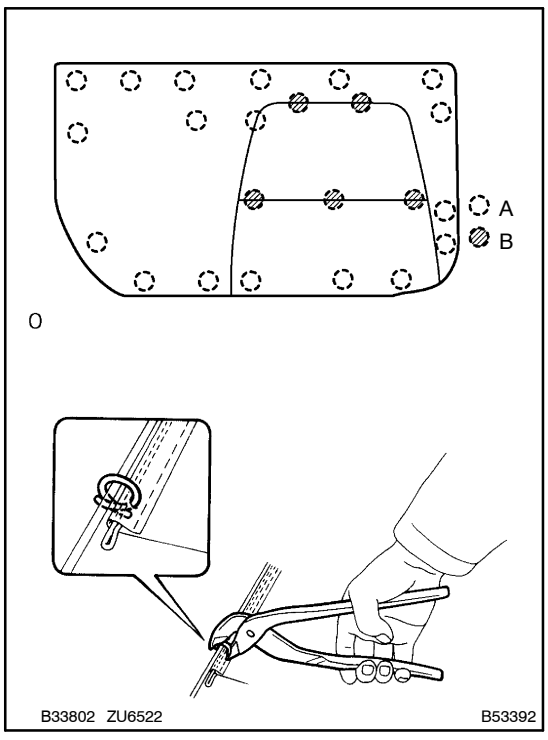

11. INSTALL SEPARATE TYPE FRONT SEAT CUSHION COVER


(a) Install the seat cushion cover to the seat cushion pad.
(b) Using hog ring pliers, install the seat cushion cover with pad with new hog rings ”B”, as shown in the illustration.
(c) Using hog ring pliers, install the seat cushion cover with pad with new hog rings ”A”, as shown in the illustration.

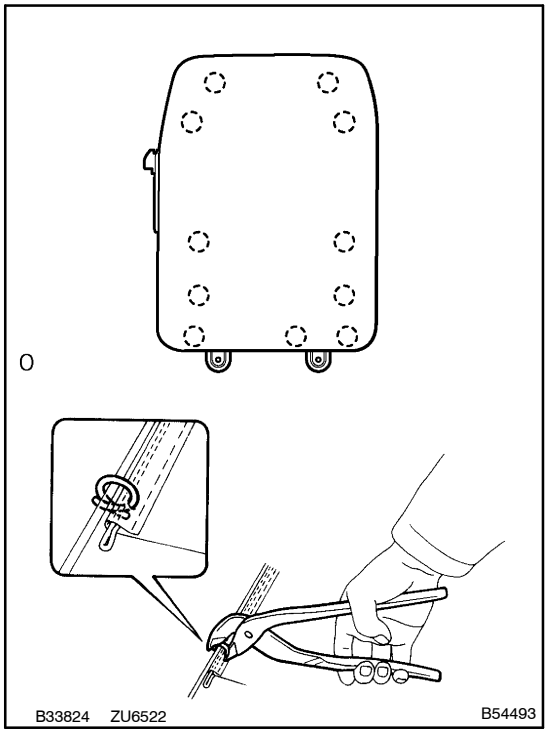

12. INSTALL FRONT SEAT BACK COVER CENTER

(a) Install the seatback cover to the center seat back pad.

(b) Using hog ring pliers, install the seatback cover center with pad with new hog rings, as shown in the illustration.

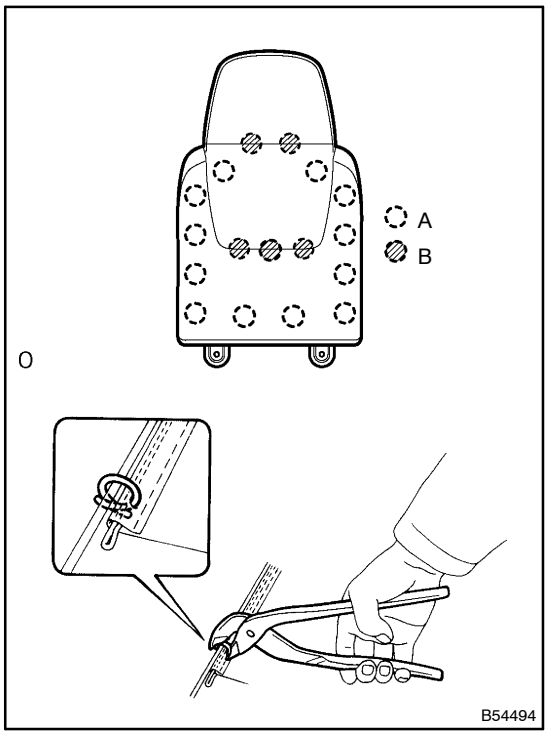

13. INSTALL SEPARATE TYPE FRONT SEAT BACK COVER

(a) Install the seatback cover LH to the seatback pad.

(b) Using hog ring pliers, install the seatback cover with pad with new hog rings ”B”, as shown in the illustration.

(c) Using hog ring pliers, install the seatback cover with pad with new hog rings ”A”, as shown in the illustration.

(d) Install the seat support cushion to seat back assy with the screw.

(e) Fix the pin and spring to seat back assy LH with the E–ring.

14. INSTALL FRONT SEAT CUSHION ASSEMBLY LH

15. INSTALL FRONT SEAT BACK CENTER ASSEMBLY

16. INSTALL FRONT SEAT BACK ASSEMBLY LH