
720HK–01

REPLACEMENT


HINT:

The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.

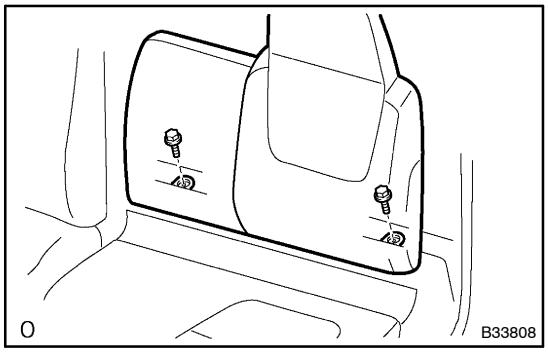


1. REMOVE FRONT SEATBACK ASSY LH

(a) Remove the 2 bolts and front seatback.

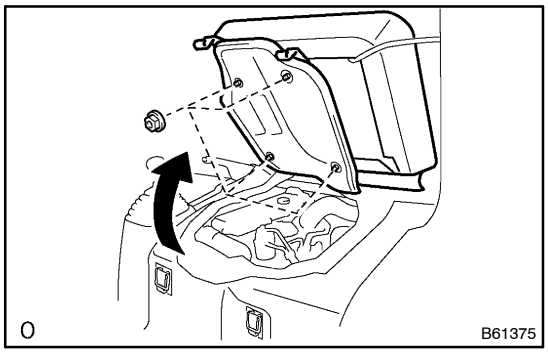

2. REMOVE FRONT SEAT CUSHION ASSY LH

(a) Remove the 4 nuts and front seat cushion.

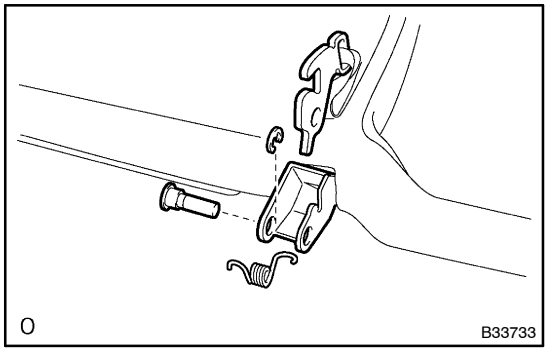


3. REMOVE FRONT SEATBACK COVER LH

(a) Remove the E–ring, pin and spring from seatback.

(b) Remove the 2 screws and 2 seat support cushions from the seatback.

4. REMOVE FRONT SEATBACK PAD LH

(a) Remove the seatback pad from the seatback spring.

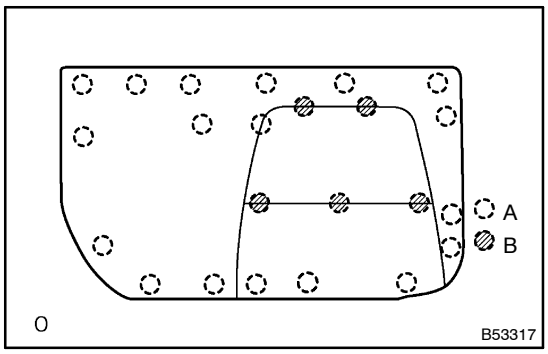


5. REMOVE FRONT SEAT CUSHION COVER LH

(a) Remove the 18 hog rings ”A”, as shown in the illustration.

(b) Remove the seat cushion cover.

6. REMOVE FRONT SEAT CUSHION PAD LH


(a) Remove the seat cushion pad from the cushion frame.

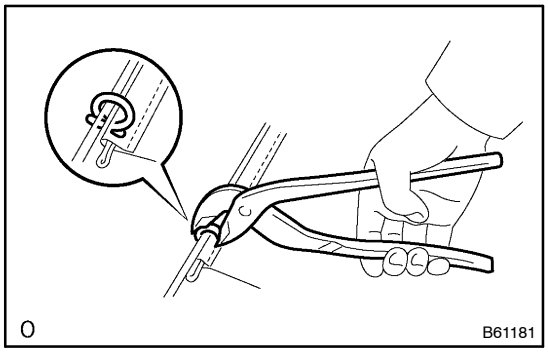

7. INSTALL FRONT SEAT CUSHION COVER LH

(a) Install the seat cushion cover to the seat cushion pad.

(b) Using hog ring pliers, install the seat cushion cover to the pad with new hog rings.

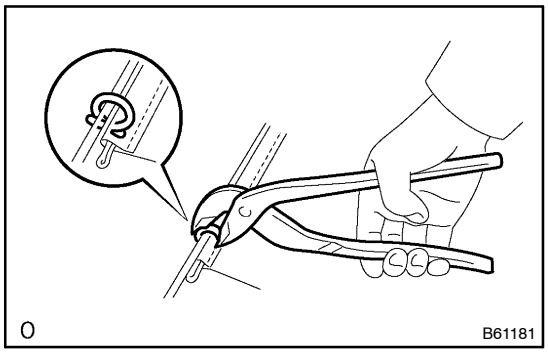

8. INSTALL FRONT SEATBACK COVER LH

(a) Install the seatback cover to the seatback pad.

(b) Using hog ring pliers, install the seatback cover to the pad with new hog rings.

(c) Install the 2 seat support cushions to the seatback with the 2 screws.

(d) Fix the pin and spring to the seatback with the E–ring.

9. INSTALL FRONT SEAT CUSHION ASSY LH

10. INSTALL FRONT SEATBACK ASSY LH