
730A7–02

INSPECTION

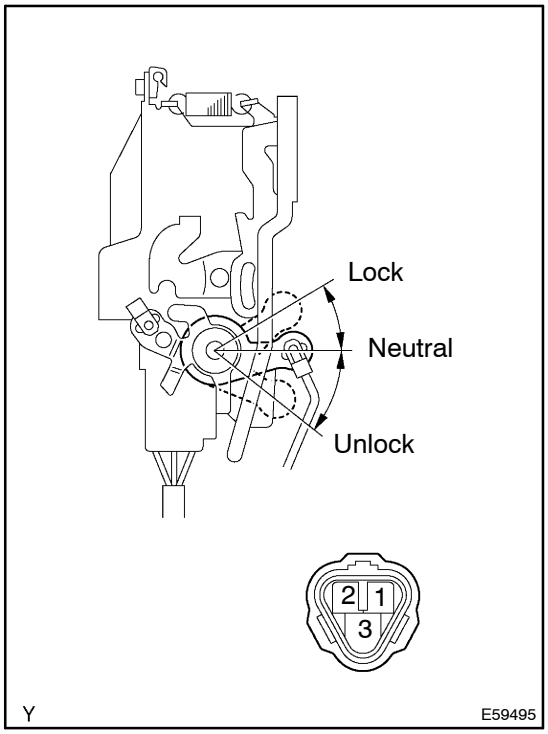


1. LHD Models:
INSPECT FRONT DOOR LOCK ASSY LH

(a) Inspect the door lock control switch continuity.
Standard:

Terminal No.	Switch Position	Specified Condition
1 ⇔ 2	Lock	Continuity
–	Neutral	—
2 ⇔ 3	Unlock	Continuity

If the result is not as specified, replace the front door lock assy.

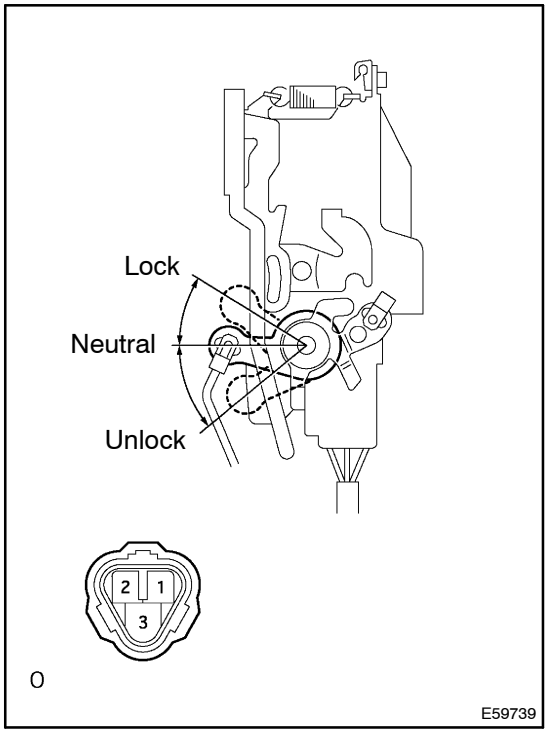


2. RHD Models:
INSPECT FRONT DOOR LOCK ASSY RH

(a) Inspect the door lock control switch continuity.
Standard:

Terminal No.	Switch Position	Specified Condition
1 ⇔ 2	Lock	Continuity
–	Neutral	—
2 ⇔ 3	Unlock	Continuity

If the result is not as specified, replace the front door lock assy.

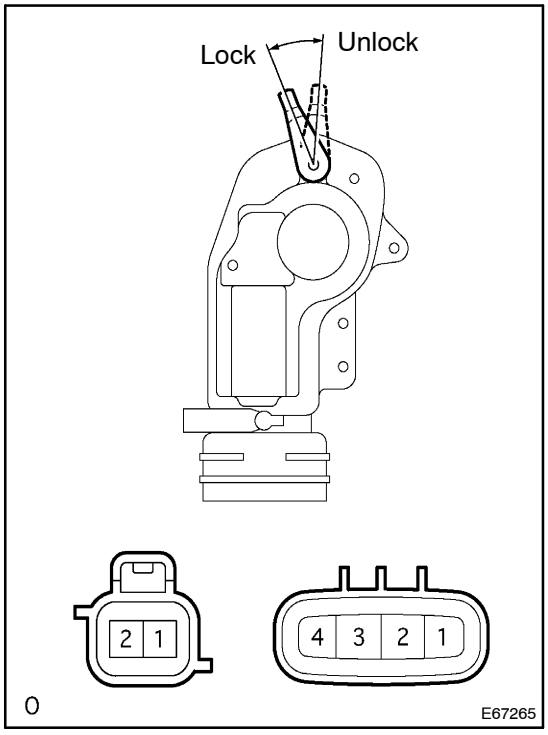

3. LHD Models:

INSPECT FRONT DOOR LOCK ACTUATOR ASSY LH

(a) Inspect operation of the door lock actuator.


(1) Check operation of the door lock actuator when the battery voltage is applied between the terminals of the actuator inside the door lock.

Standard:

Terminal No.	Operation
Battery positive → 1 (2) Battery negative → 2 (3)	Lock
Battery positive → 2 (3) Battery negative → 1 (2)	Unlock

( ): 4 pin type

If the result is not as specified, replace the front door lock actuator assy.

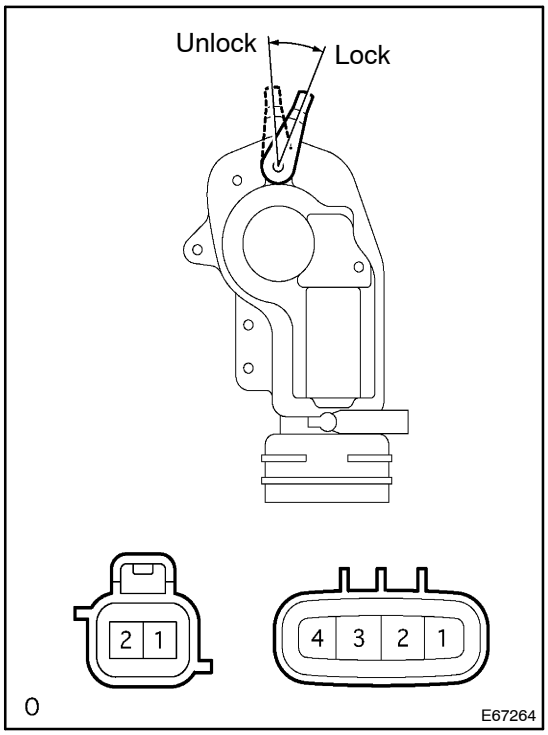

4. RHD Models:

INSPECT FRONT DOOR LOCK ACTUATOR ASSY RH

(a) Inspect operation of the door lock actuator.

(1) Check operation of the door lock actuator when the battery voltage is applied between the terminals of the actuator inside the door lock.

Standard:

Terminal No.	Operation
Battery positive → 1 (2) Battery negative → 2 (3)	Lock
Battery positive → 2 (3) Battery negative → 1 (2)	Unlock

( ): 4 pin type

If the result is not as specified, replace the front door lock actuator assy.