750L4–01


ADJUSTMENT

HINT:

- The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.
- On the RH side, use the same procedures as on the LH side.

1. INSPECT FRONT DOOR PANEL SUB–ASSY LH


(a) Check that the clearance is within the standard range.

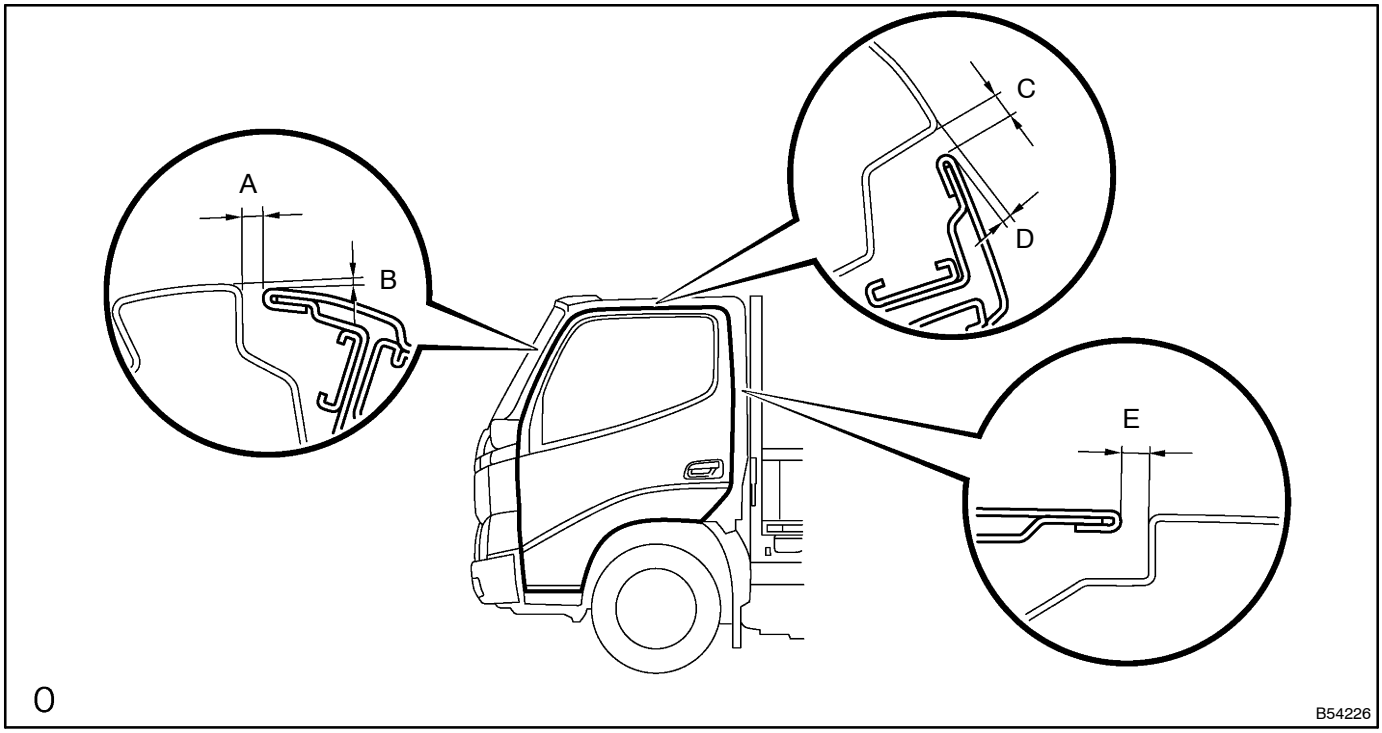

Dimension:


A	4.1 – 7.1 mm (0.161 – 0.279 in.)
B	0.3 – 3.3 mm (0.011 – 0.129 in.)
C	4.1 – 6.9 mm (0.161 – 0.271 in.)
D	0 – 3 mm (0 – 0.118 in.)
E	4.1 – 7.1 mm (0.161 – 0.279 in.)

2. REMOVE RADIATOR GRILLE (See page 76–3)
3. REMOVE FRONT VALANCE PANEL LH (See page 76–8)
4. REMOVE CLEARANCE LAMP LENS & BODY LH (See page 76–8)
5. REMOVE FRONT SIDE PANEL SUB–ASSY LH (See page 76–8)
6. REMOVE OUTER MIRROR GROMMET (See page 70–19)
7. REMOVE OUTER MIRROR BEZEL (See page 70–18)
8. REMOVE OUTER MIRROR COVER LH (See page 70–18 or 70–19)
9. REMOVE OUTER REAR VIEW MIRROR ASSY LH (See page 70–18 or 70–19)

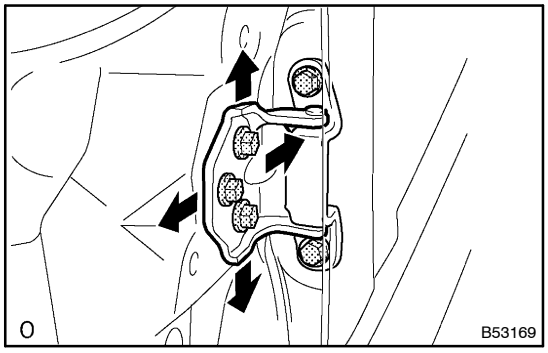


10. ADJUST FRONT DOOR PANEL SUB–ASSY LH

(a) Adjust the door by loosening the body side hinge bolts.
Torque: 23 N·m (235 kgf·cm, 17 ft·lbf)

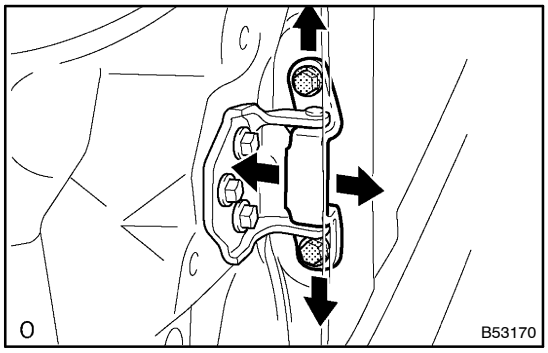

(b) Adjust the door by loosening the door side hinge bolts.
Torque: 23 N·m (235 kgf·cm, 17 ft·lbf)

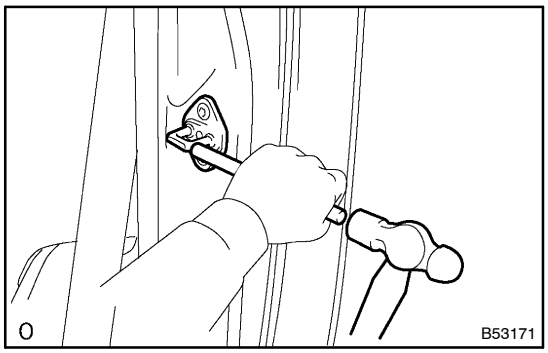

(c) Adjust the striker position by slightly loosening the striker mounting screws, and hitting the striker with a plastic hammer.

(d) Tighten the striker mounting screws again.
Torque: 23 N·m (235 kgf·cm, 17 ft·lbf)