
760U1–01

REPLACEMENT

HINT:

The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.

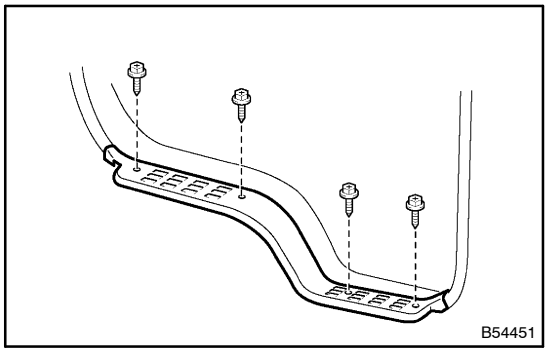


1. REMOVE FRONT DOOR SCUFF PLATE LH

(a) Remove the 4 screws and scuff plate.

2. REMOVE FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures described above for the LH side.

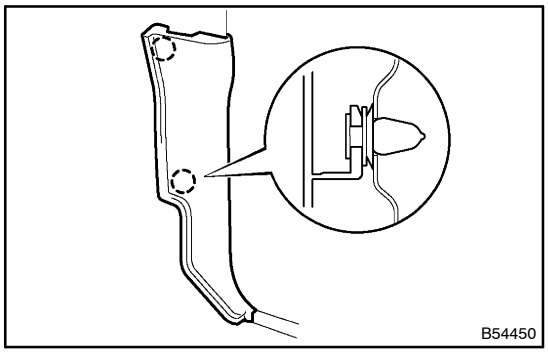


3. REMOVE QUARTER TRIM PANEL LOWER LH

(a) Disengage the 2 clips and remove the quarter trim panel.

4. REMOVE QUARTER TRIM PANEL LOWER RH

HINT:

Use the same procedures described above for the LH side.

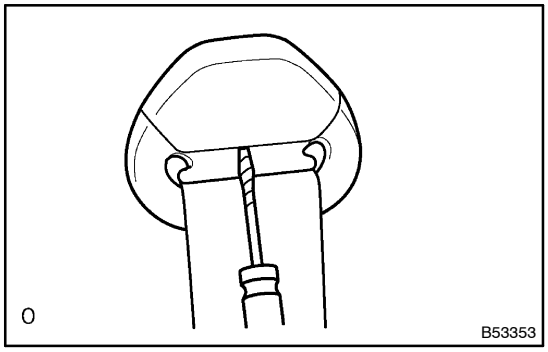

5. REMOVE FRONT SEAT OUTER BELT ASSY LH

(a) Using a screwdriver, pry the seat belt anchor cover cap.

HINT:

Tape the screwdriver tip before use.

(b) Remove the bolt and shoulder anchor LH.

6. REMOVE FRONT SEAT OUTER BELT ASSY RH

HINT:

Use the same procedures described above for the LH side.


7. REMOVE ASSIST GRIP PLUG

8. REMOVE ASSIST GRIP ASSY NO.2 LH

(a) Remove the 2 screws and assist grip.

9. REMOVE ASSIST GRIP ASSY NO.2 RH

(a) Remove the 2 screws and assist grip.

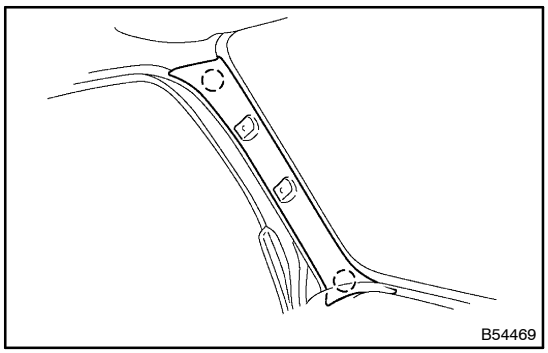

10. REMOVE FRONT PILLAR GARNISH LH

(a) Using a screwdriver, remove the pillar garnish.

HINT:

Tape the screwdriver tip before use.

11. REMOVE FRONT PILLAR GARNISH RH

HINT:

Use the same procedures described above for the LH side.

12. REMOVE FRONT DOOR OPENING TRIM LH

13. REMOVE FRONT DOOR OPENING TRIM RH

14. REMOVE COAT HOOK

(a) Remove the 2 screws.

(b) Using a roof moulding remover, remove the 2 coat hooks.

15. REMOVE LH VISOR ASSY

(a) Remove the 2 screws and visor.

16. REMOVE RH VISOR ASSY

(a) Remove the 2 screws and visor.

17. REMOVE VISOR HOLDER


18. REMOVE ASSIST GRIP SUB–ASSY

(a) Remove the 2 screws and remove the assist grip.

19. REMOVE INNER REAR VIEW MIRROR ASSY

(a) Remove the claw and cover.

(b) Remove the 2 screws and view mirror.

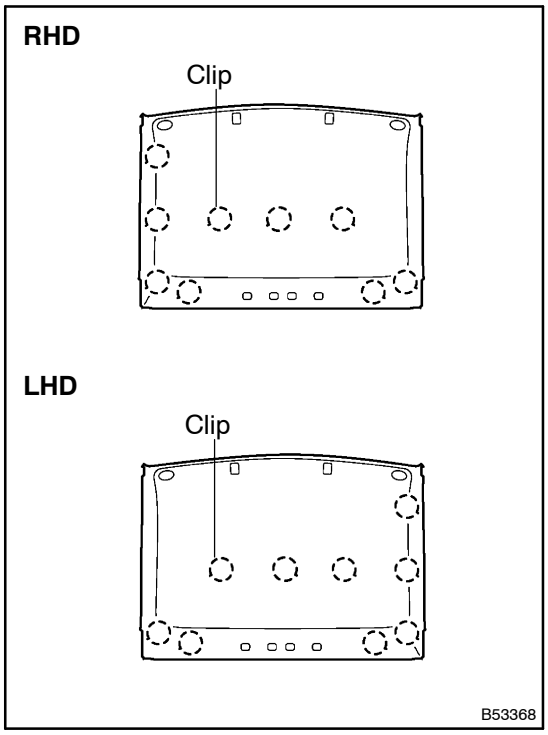

20. REMOVE ROOF HEADLINING ASSY

(a) Using a clip remover, remove the 9 clips and roof headlining.

21. INSTALL FRONT SEAT OUTER BELT ASSY LH

22. INSTALL FRONT SEAT OUTER BELT ASSY RH