FRONT SIDE PANEL SUB–ASSY LH

760U3–01


REPLACEMENT

HINT:

- The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.
- On the RH side, use the same procedures as on the LH side.

1. REMOVE FRONT BUMPER BAR (See page 76–2)

2. REMOVE RADIATOR GRILLE (See page 76–3)

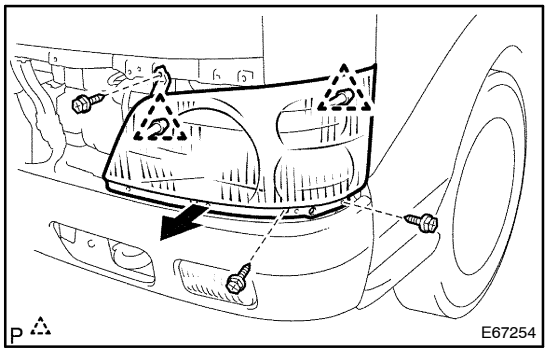


3. REMOVE HEADLAMP UNIT LH (RHD STEERING POSITION TYPE)

(a) Remove the 3 bolts.


(b) Pull out the headlamp forward while disengaging the 2 pins of the headlamp.

(c) Disconnect the connectors and remove the headlamp.

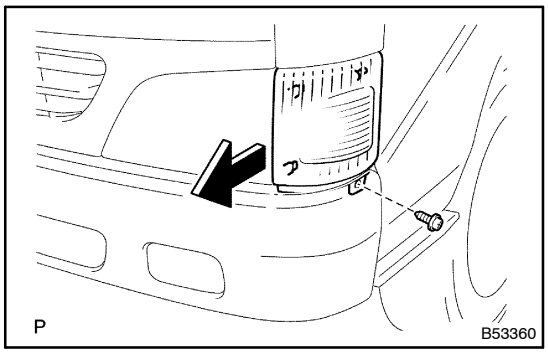

4. REMOVE CLEARANCE LAMP ASSY LH (LHD STEERING POSITION TYPE)

(a) Remove the screw and clearance lamp.

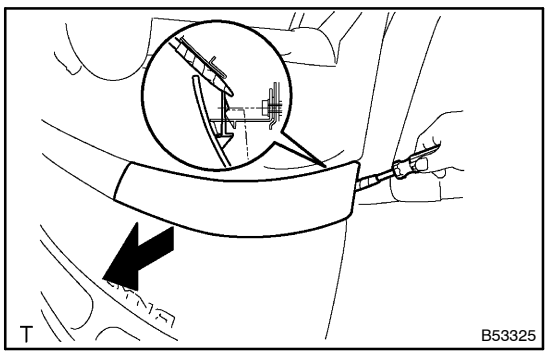

5. REMOVE FRONT VALANCE PANEL LH

(a) Using a screwdriver, remove the valance panel.

HINT:

Tape the screwdriver tip before use.

6. REMOVE FRONT SIDE PANEL SUB–ASSY LH

(a) Remove the 2 bolts, screw and side panel.

7. INSTALL FRONT SIDE PANEL SUB–ASSY LH

(a) Install the side panel with the 2 bolts and screw.

Torque: 8.5 N·m (85 kgf·cm, 74 in·lbf)

8. INSTALL FRONT BUMPER BAR (See page 76–2)