OUTER MIRROR COVER RH


760U5–01

REPLACEMENT

HINT:

- The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.
- On the RH side, use the same procedures as on the LH side.

1. REMOVE FRONT VALANCE PANEL RH
2. REMOVE WINDSHIELD WIPER ARM COVER
3. REMOVE FR WIPER ARM RH
4. REMOVE OUTER MIRROR GROMMET

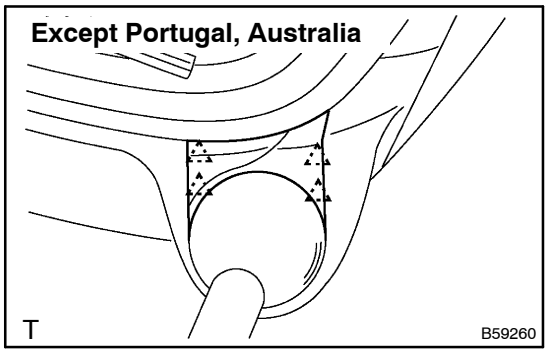


5. REMOVE OUTER MIRROR BEZEL (EXCEPT PORTUGAL, AUSTRALIA)

(a) Using a screwdriver, disengage the 4 clips and remove the outer mirror bezel.

HINT:

Tape the screwdriver, tip before use.

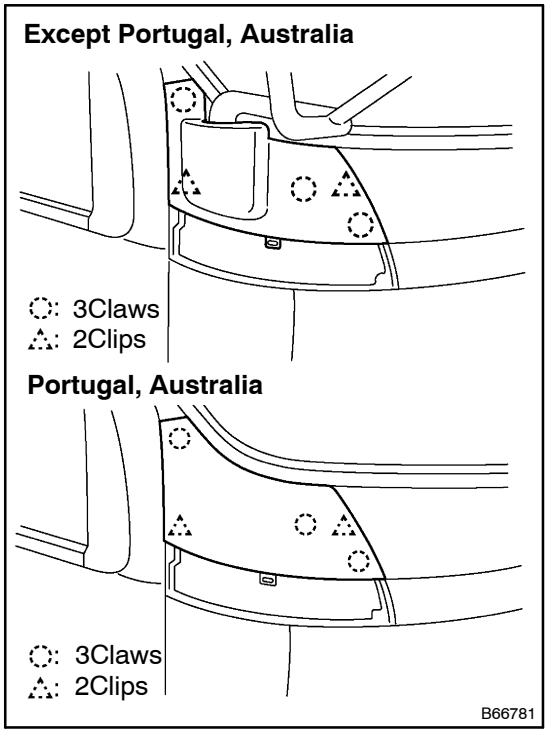

6. REMOVE OUTER MIRROR COVER RH

(a) Disengage the clips and remove the outer mirror cover.