
8002G–03

INSPECTION

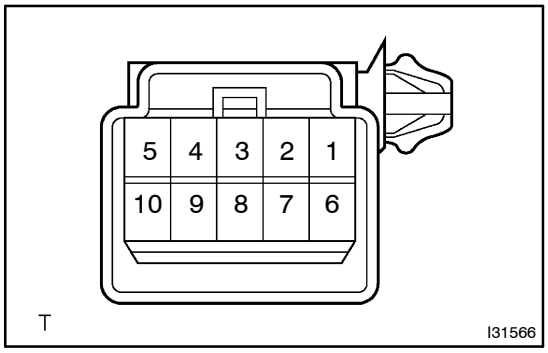

1. INSPECT IGNITION OR STARTER SWITCH ASSY

(a) Inspect the switch continuity.

Standard:

Terminal No.	Switch Position	Specified Condition
–	LOCK	No continuity
4 ⇔ 9	ACC	Continuity
4 ⇔ 9 ⇔ 10 5 ⇔ 8	ON	Continuity
3 ⇔ 9 ⇔ 10 5 ⇔ 8	START	Continuity

If the result is not as specified, replace the switch assy.