
8700L–01

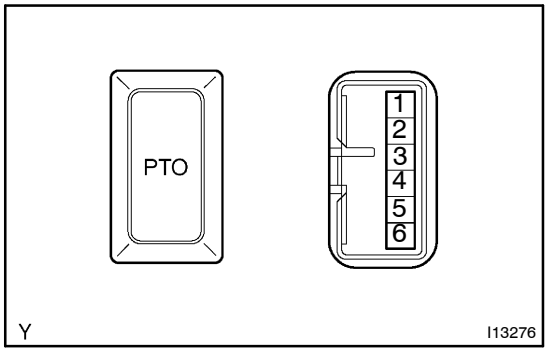

INSPECTION

1. INSPECT POWER TAKE–OFF SWITCH

(a) Inspect the power take–off switch continuity.

Switch position	Tester connector	Specified condition
OFF	–	No continuity
ON	3 ⇔ 4	Continuity

If the result is not as specified, replace the switch.