170CX–01


OVERHAUL

1. REMOVE PLUG

(a) Remove the plug and gasket.

2. REMOVE OIL COOLER ASSY

(a) Remove the 4 nuts, oil cooler and 2 gaskets.

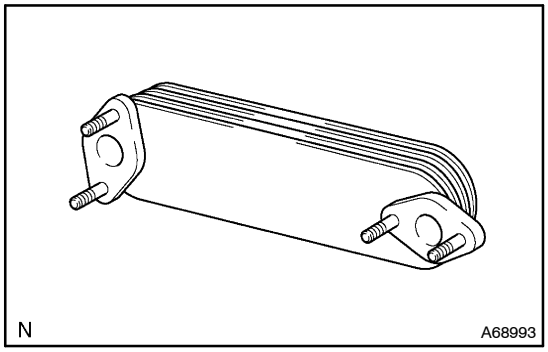

3. INSPECT OIL COOLER ASSY

(a) Check the oil cooler for damage or clogging.

If necessary, replace the oil cooler.

4. INSTALL OIL COOLER ASSY

(a) Install 2 new gaskets and the oil cooler with the 4 nuts.
Torque: 16 N·m (163 kgf·cm, 12 ft·lbf)

5. INSTALL PLUG

(a) Install a new gasket and the plug.
Torque: 53 N·m (540 kgf·cm, 39 ft·lbf)