
OIL NOZZLE (14B)

INSPECTION


170CY–01

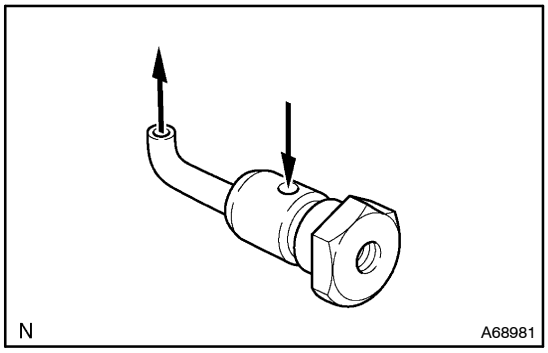

1. INSPECT SUB–ASSY OIL NOZZLE NO.1

(a) Check the oil nozzle for damage or clogging.

If necessary, replace the oil nozzle.

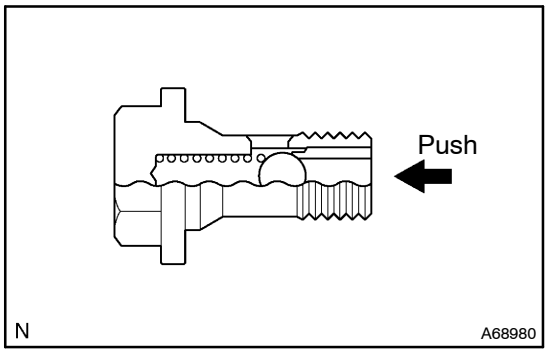

2. INSPECT OIL CHECK VALVE SUB–ASSY

(a) Push the valve with a wooden stick to check if it is stuck.

If stuck, replace the check valve.