
CAMSHAFT HOUSING AND CYLINDER HEAD


COMPONENTS

1417J–01

S05C–TB

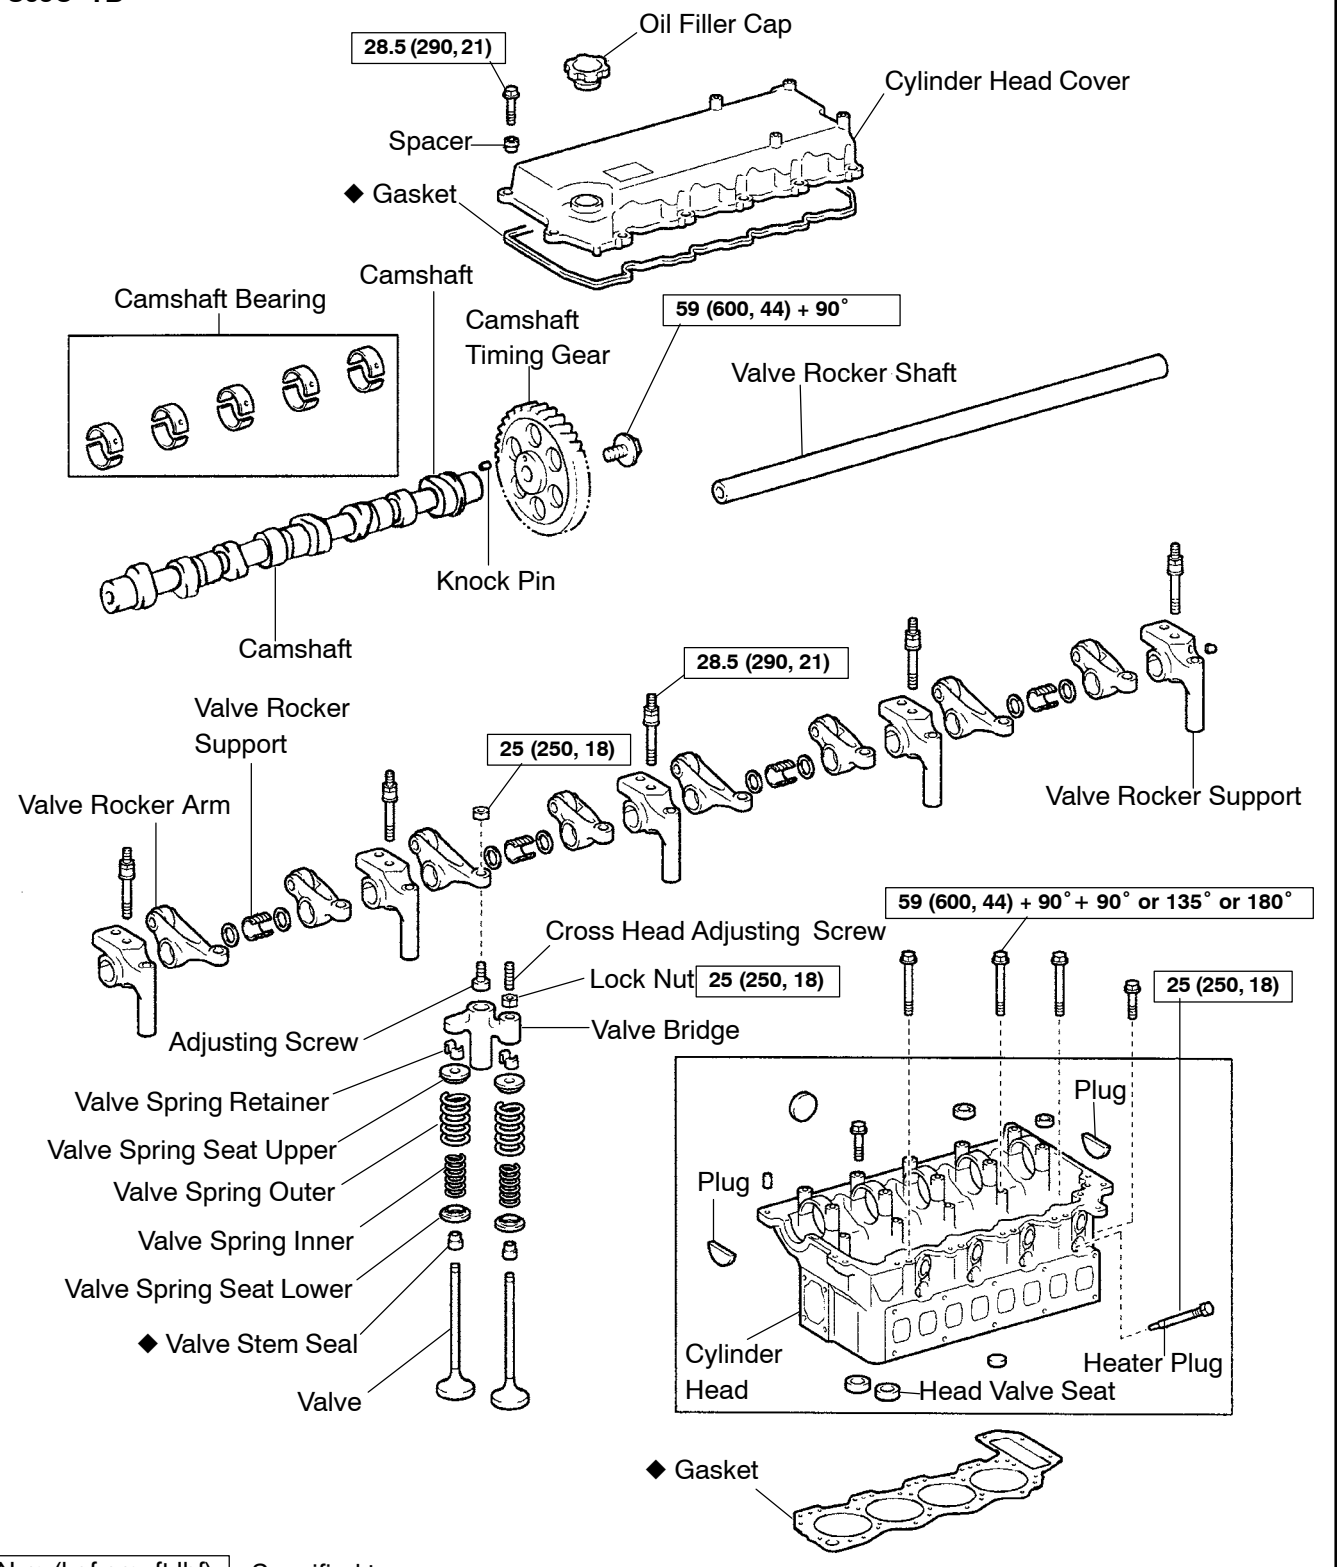

N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part

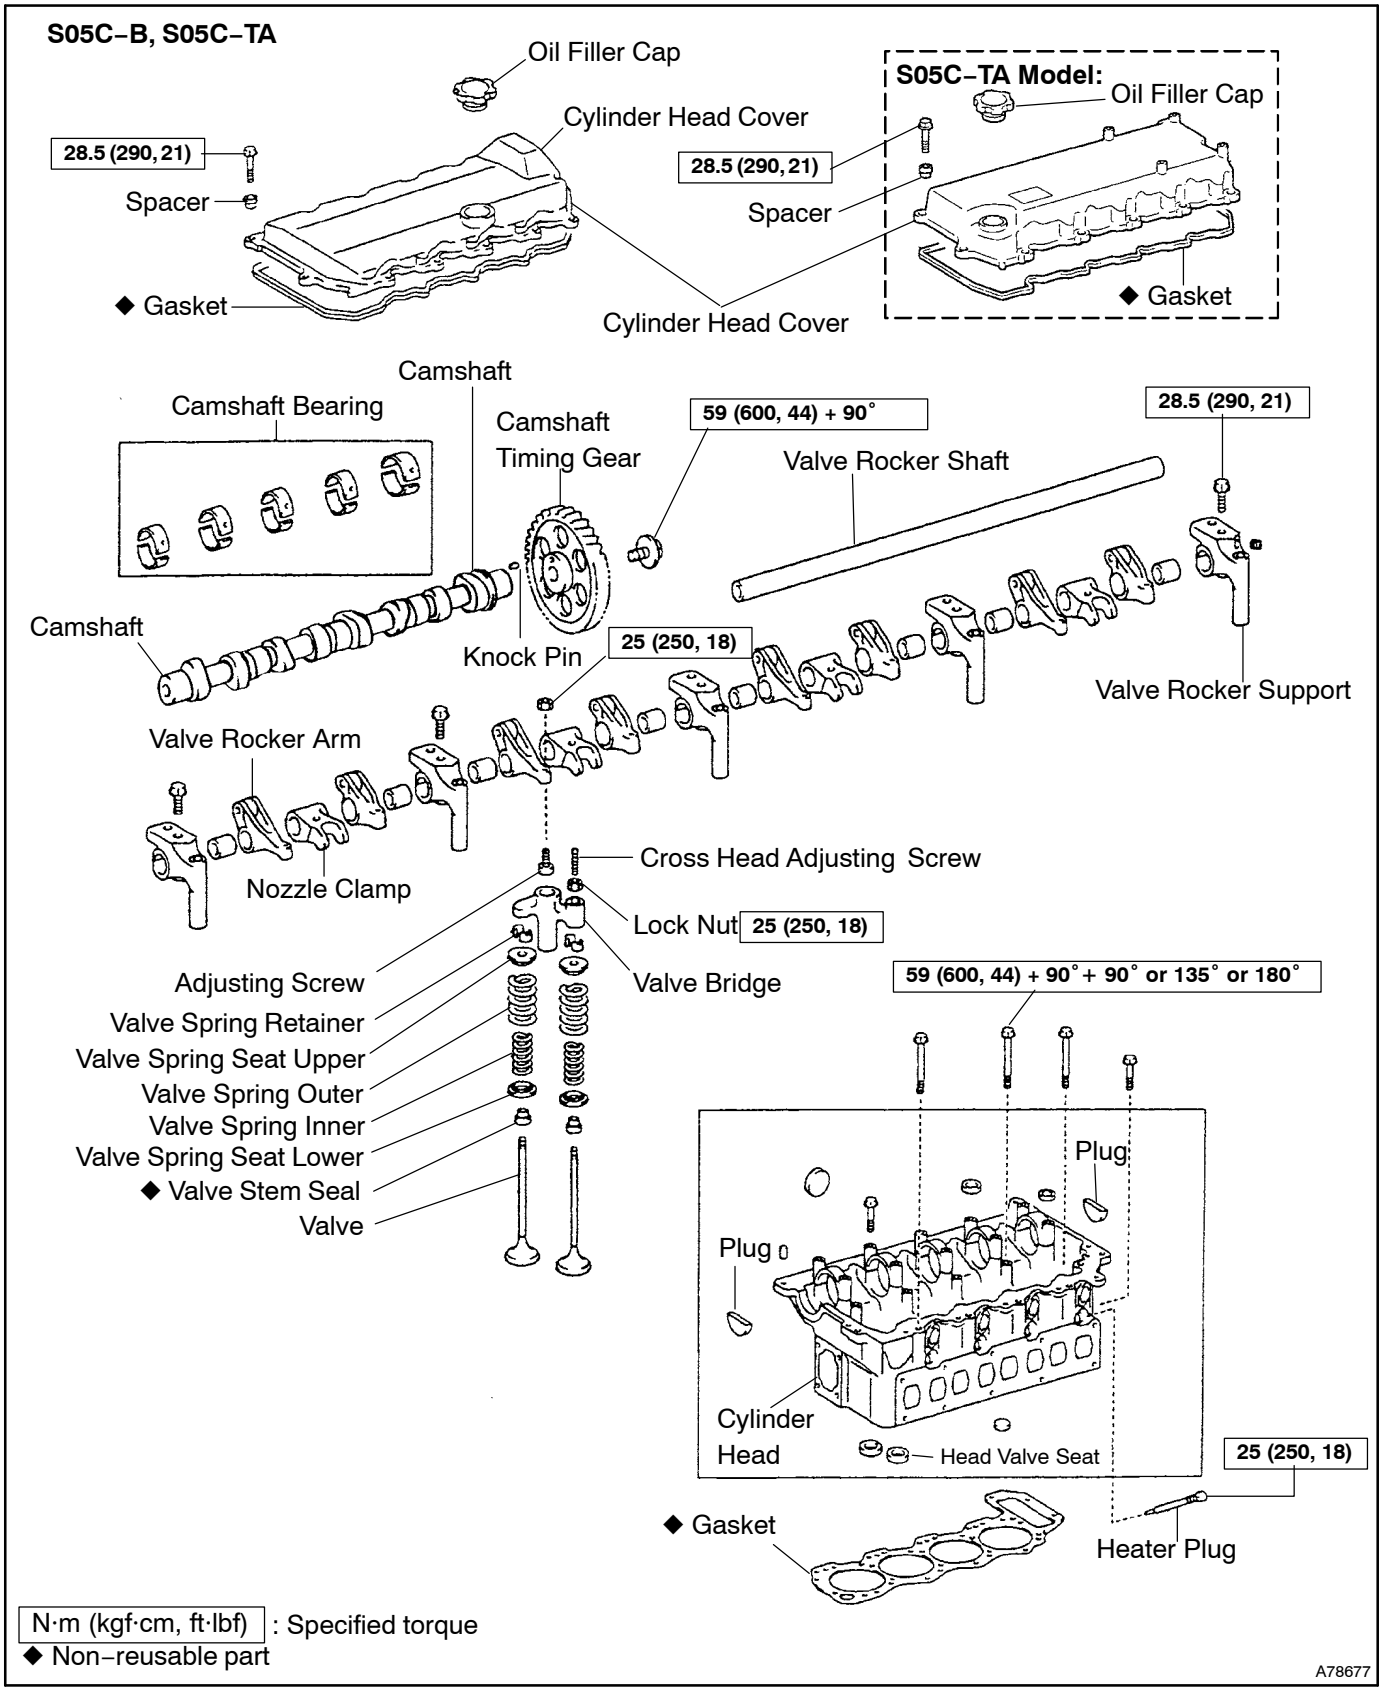
S05C–B, S05C–TA
Oil Filler Cap
Cylinder Head Cover
28.5 (290, 21)
Spacer
◆ Gasket
S05C–TA Model:
Oil Filler Cap
28.5 (290, 21)
Spacer
◆ Gasket
Cylinder Head Cover
Camshaft
Camshaft Bearing
Camshaft Timing Gear
59 (600, 44) + 90°
Valve Rocker Shaft
28.5 (290, 21)
Camshaft
Knock Pin
25 (250, 18)
Valve Rocker Support
Valve Rocker Arm
Nozzle Clamp
Cross Head Adjusting Screw
Lock Nut
25 (250, 18)
Valve Bridge
Adjusting Screw
Valve Spring Retainer
Valve Spring Seat Upper
Valve Spring Outer
Valve Spring Inner
Valve Spring Seat Lower
◆ Valve Stem Seal
Valve
59 (600, 44) + 90° + 90° or 135° or 180°
Plug
Plug
Cylinder Head
Head Valve Seat
25 (250, 18)
◆ Gasket
Heater Plug
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A78677