


















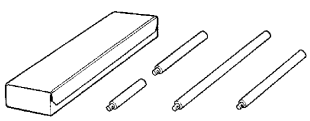
022EA–01

PREPARATION





SST

	09316–60011	Transmission & Transfer Bearing Replacer	MANUAL TRANSMISSION ASSY OUTPUT SHAFT ASSY
	(09316–00011)	Replacer Pipe	MANUAL TRANSMISSION ASSY
	(09316–00031)	Replacer "B"	MANUAL TRANSMISSION ASSY
	(09316–00041)	Replacer "C"	OUTPUT SHAFT ASSY
	09505–20010	Differential Side Bearing Replacer	MANUAL TRANSMISSION ASSY
	09527–30010	Rear Axle Shaft Bearing Remover	INPUT SHAFT ASSY OUTPUT SHAFT ASSY
	09555–55010	Differential Drive Pinion Bearing Replacer	OUTPUT SHAFT ASSY
	09817–16011	Back–up Light Switch Tool	MANUAL TRANSMISSION ASSY
	09950–40011	Puller B Set	MANUAL TRANSMISSION ASSY
	(09951–04010)	Hanger 150	MANUAL TRANSMISSION ASSY
	(09952–04010)	Slide Arm	MANUAL TRANSMISSION ASSY
	(09953–04030)	Center Bolt 200	MANUAL TRANSMISSION ASSY
	(09954–04010)	Arm 25	MANUAL TRANSMISSION ASSY

	(09955–04011)	Claw No.1	MANUAL TRANSMISSION ASSY
	(09957–04010)	Attachment	MANUAL TRANSMISSION ASSY OUTPUT SHAFT ASSY
	(09958–04010)	Holder (J)	MANUAL TRANSMISSION ASSY
	09950–50013	Puller C Set	MANUAL TRANSMISSION ASSY OUTPUT SHAFT ASSY
	(09951–05010)	Hanger 150	MANUAL TRANSMISSION ASSY OUTPUT SHAFT ASSY
	(09952–05010)	Slide Arm	MANUAL TRANSMISSION ASSY OUTPUT SHAFT ASSY
	(09953–05020)	Center Bolt 150	MANUAL TRANSMISSION ASSY OUTPUT SHAFT ASSY
	(09954–05030)	Claw No.3	OUTPUT SHAFT ASSY
	(09954–05040)	Claw No.4	MANUAL TRANSMISSION ASSY
	(09957–04010)	Attachment	MANUAL TRANSMISSION ASSY OUTPUT SHAFT ASSY
	09950–60010	Replacer Set	MANUAL TRANSMISSION ASSY
	(09951–00460)	Replacer 46	MANUAL TRANSMISSION ASSY
	09950–70010	Handle Set	MANUAL TRANSMISSION ASSY

	(09951–07150)	Handle 150	MANUAL TRANSMISSION ASSY

Recomended Tools

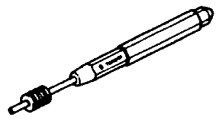	09031–00030	Pin Punch	MANUAL TRANSMISSION ASSY
	09031–00040	Pin Punch .	MANUAL TRANSMISSION ASSY
	09905–00012	Snap Ring No.1 Expander	MANUAL TRANSMISSION ASSY INPUT SHAFT ASSY OUTPUT SHAFT ASSY
	09905–00013	Snap Ring Pliers	MANUAL TRANSMISSION ASSY INPUT SHAFT ASSY OUTPUT SHAFT ASSY

Equipment

Brass bar	
Caliper gauge	
Dial indicator or dial indicator with magnetic base	
Feeler gauge	
Magnetic finger	
Micrometer	
MP grease	
Plastic hammer	
Press	
Snap Ring No.1 Expander	
Torque wrench	
Vernier calipers	
Vise	
Wooden block	

SSM

08826–00090	”Seal Packing 1281,” THREE BOND 1281 or equivalent (FIPG)	MANUAL TRANSMISSION ASSY
08833–00070	”Adhesive 1324,” THREE BOND 1324 or equivalent	SHIFT LEVER SHAFT HOUSING ASSY
08833–00080	Adhesive 1344 THREE BOND 1344 LOCTITE 242 or equivalent	MANUAL TRANSMISSION ASSY