


MANUAL TRANSMISSION ASSY


410CH–01

COMPONENTS

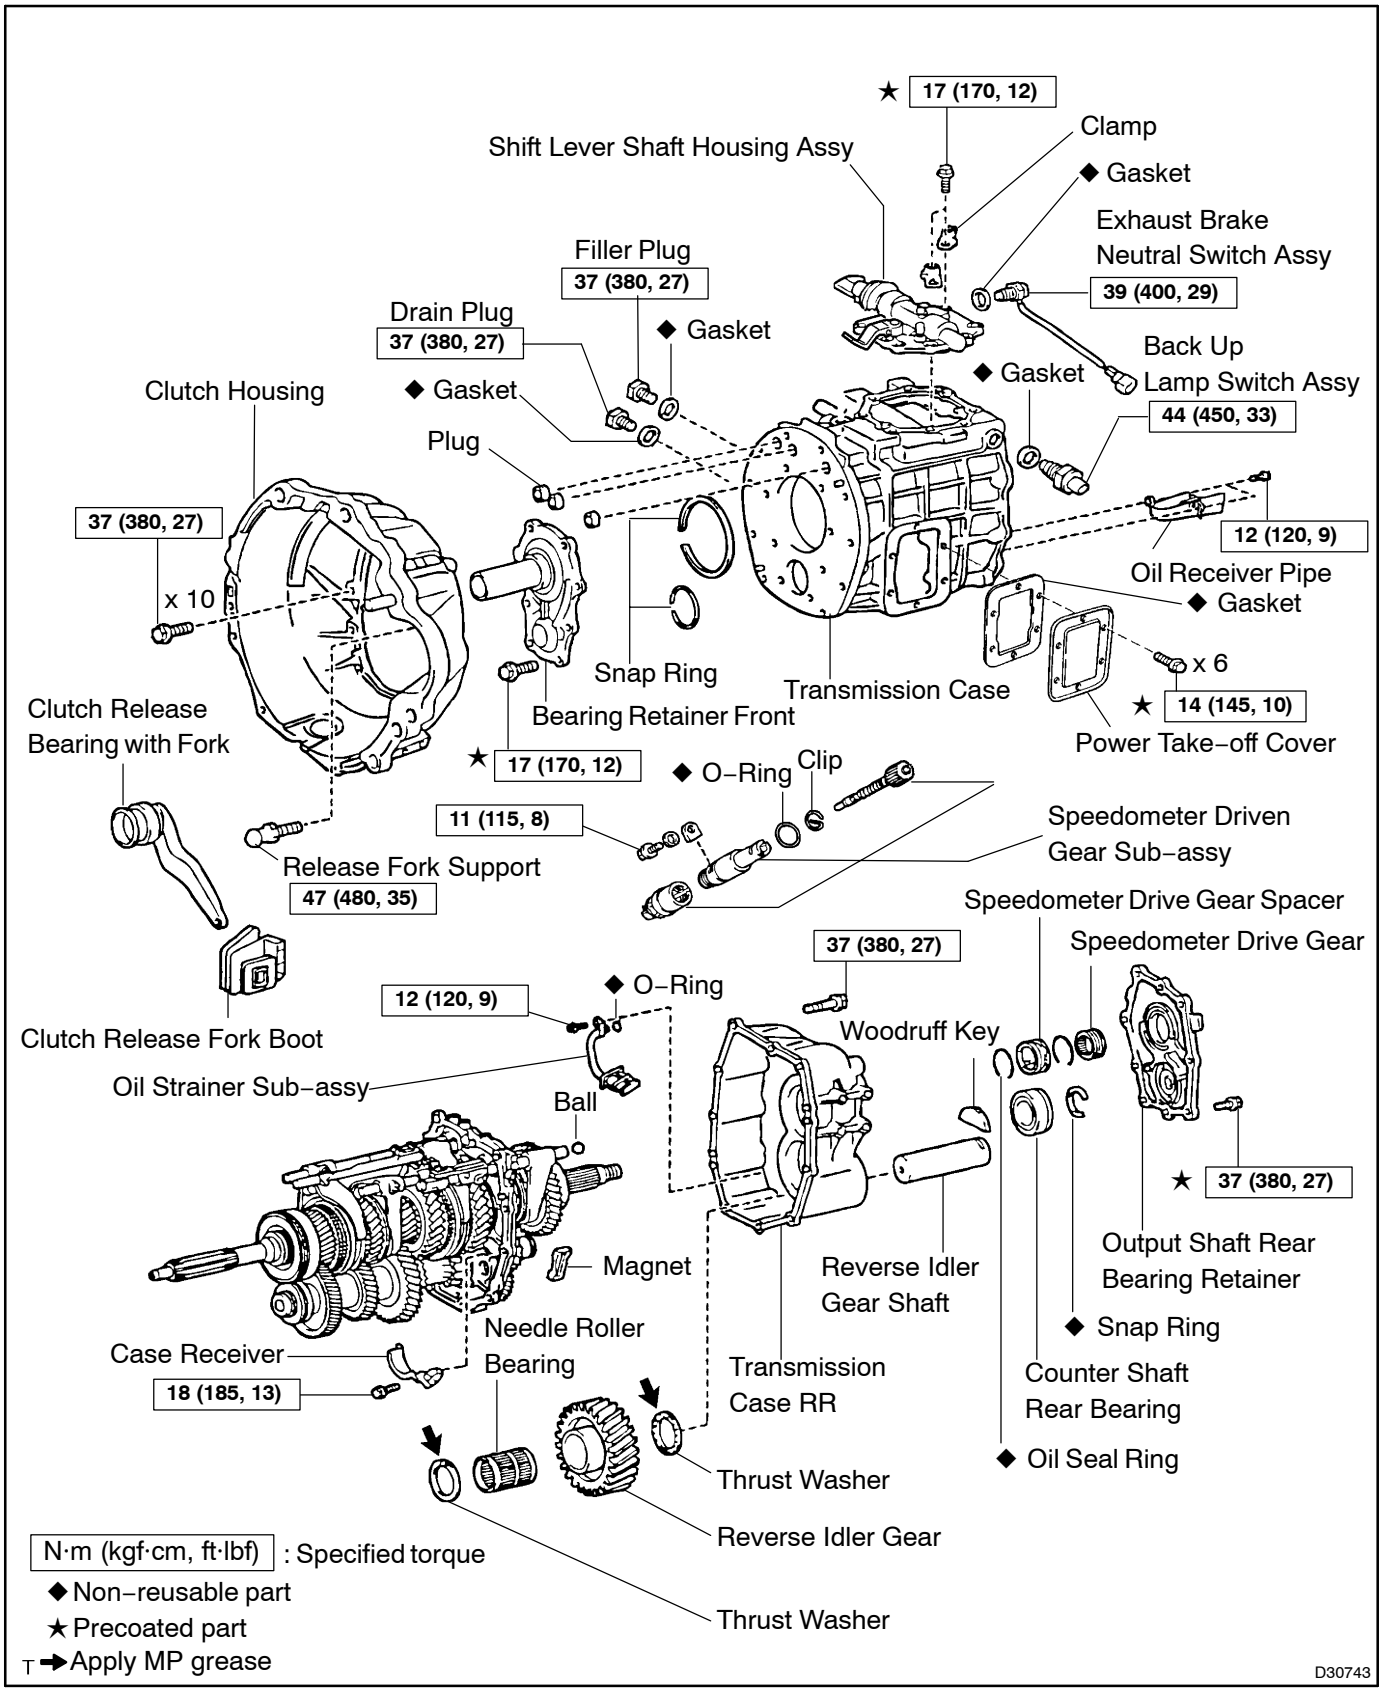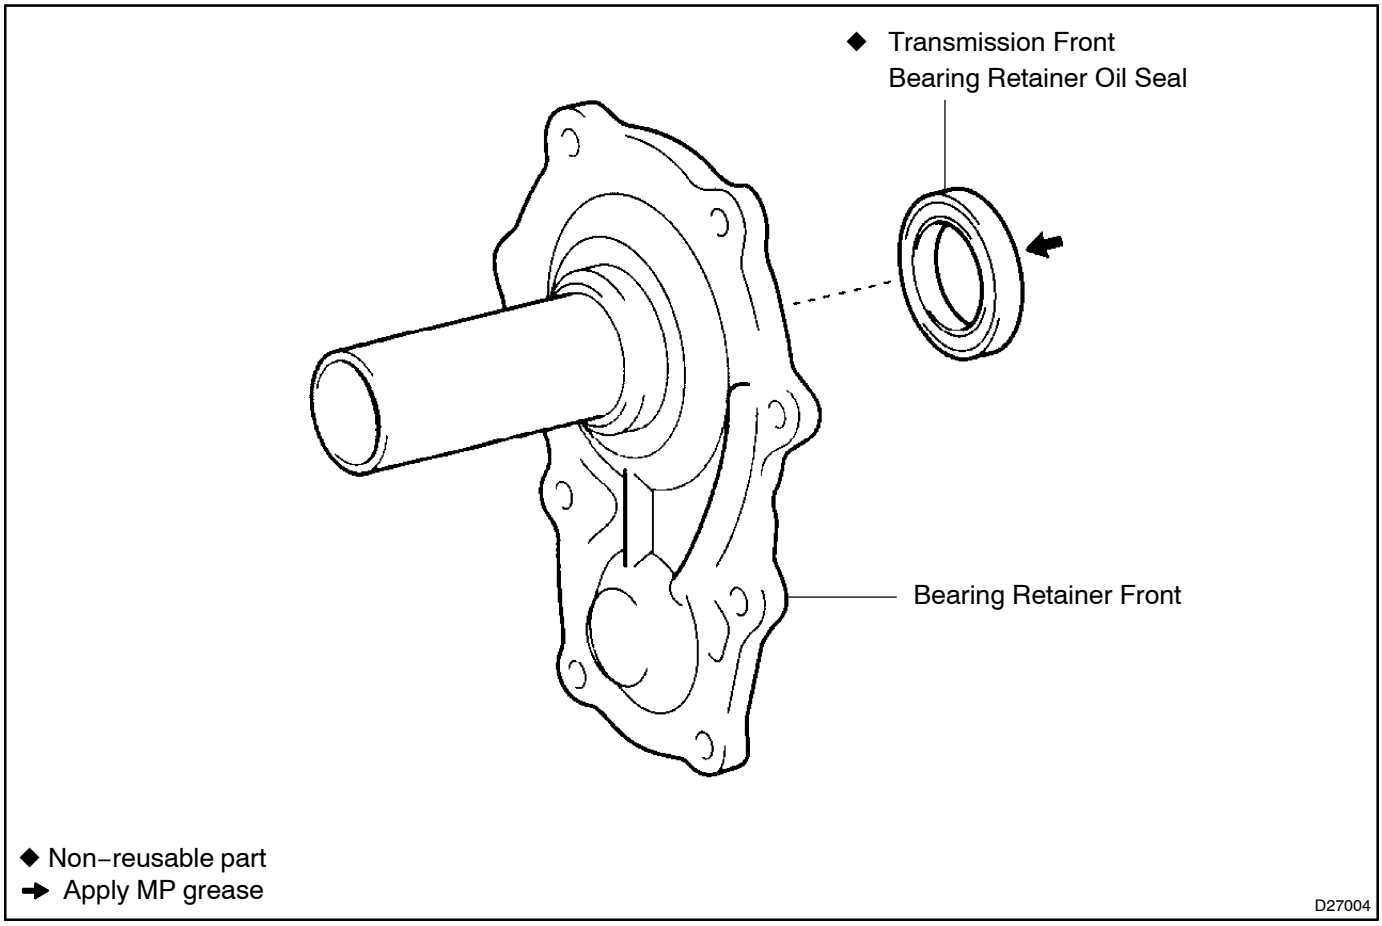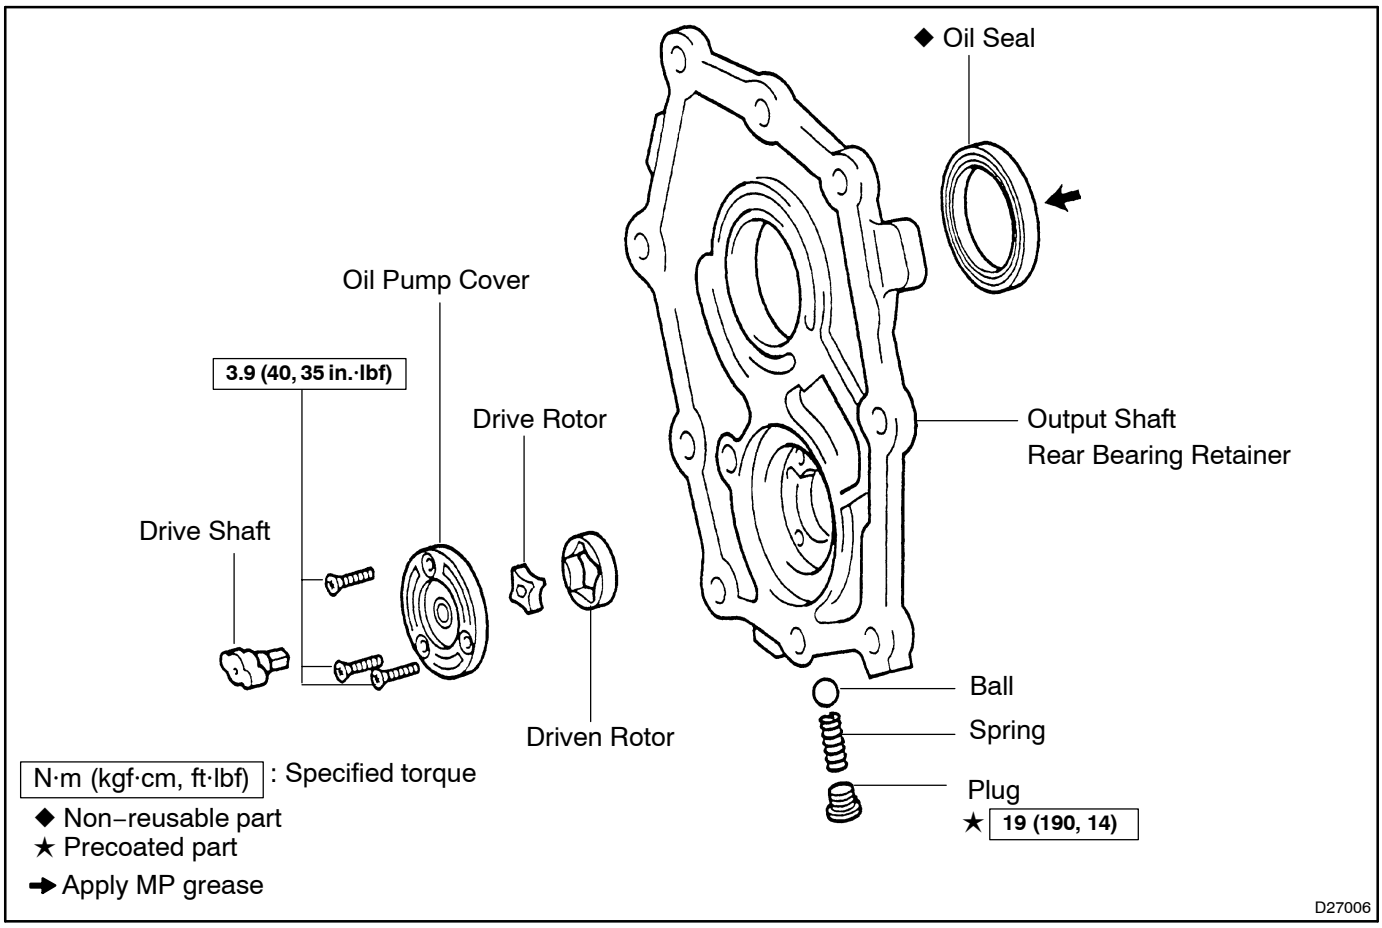


◆ Transmission Front
Bearing Retainer Oil Seal
Bearing Retainer Front
◆ Non−reusable part
➔ Apply MP grease
D27004


◆ Oil Seal
Oil Pump Cover
3.9 (40, 35 in.·lbf)
Drive Rotor
Drive Shaft
Output Shaft
Rear Bearing Retainer
Ball
Spring
Plug
★ 19 (190, 14)
Driven Rotor
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non−reusable part
★ Precoated part
➔ Apply MP grease
D27006

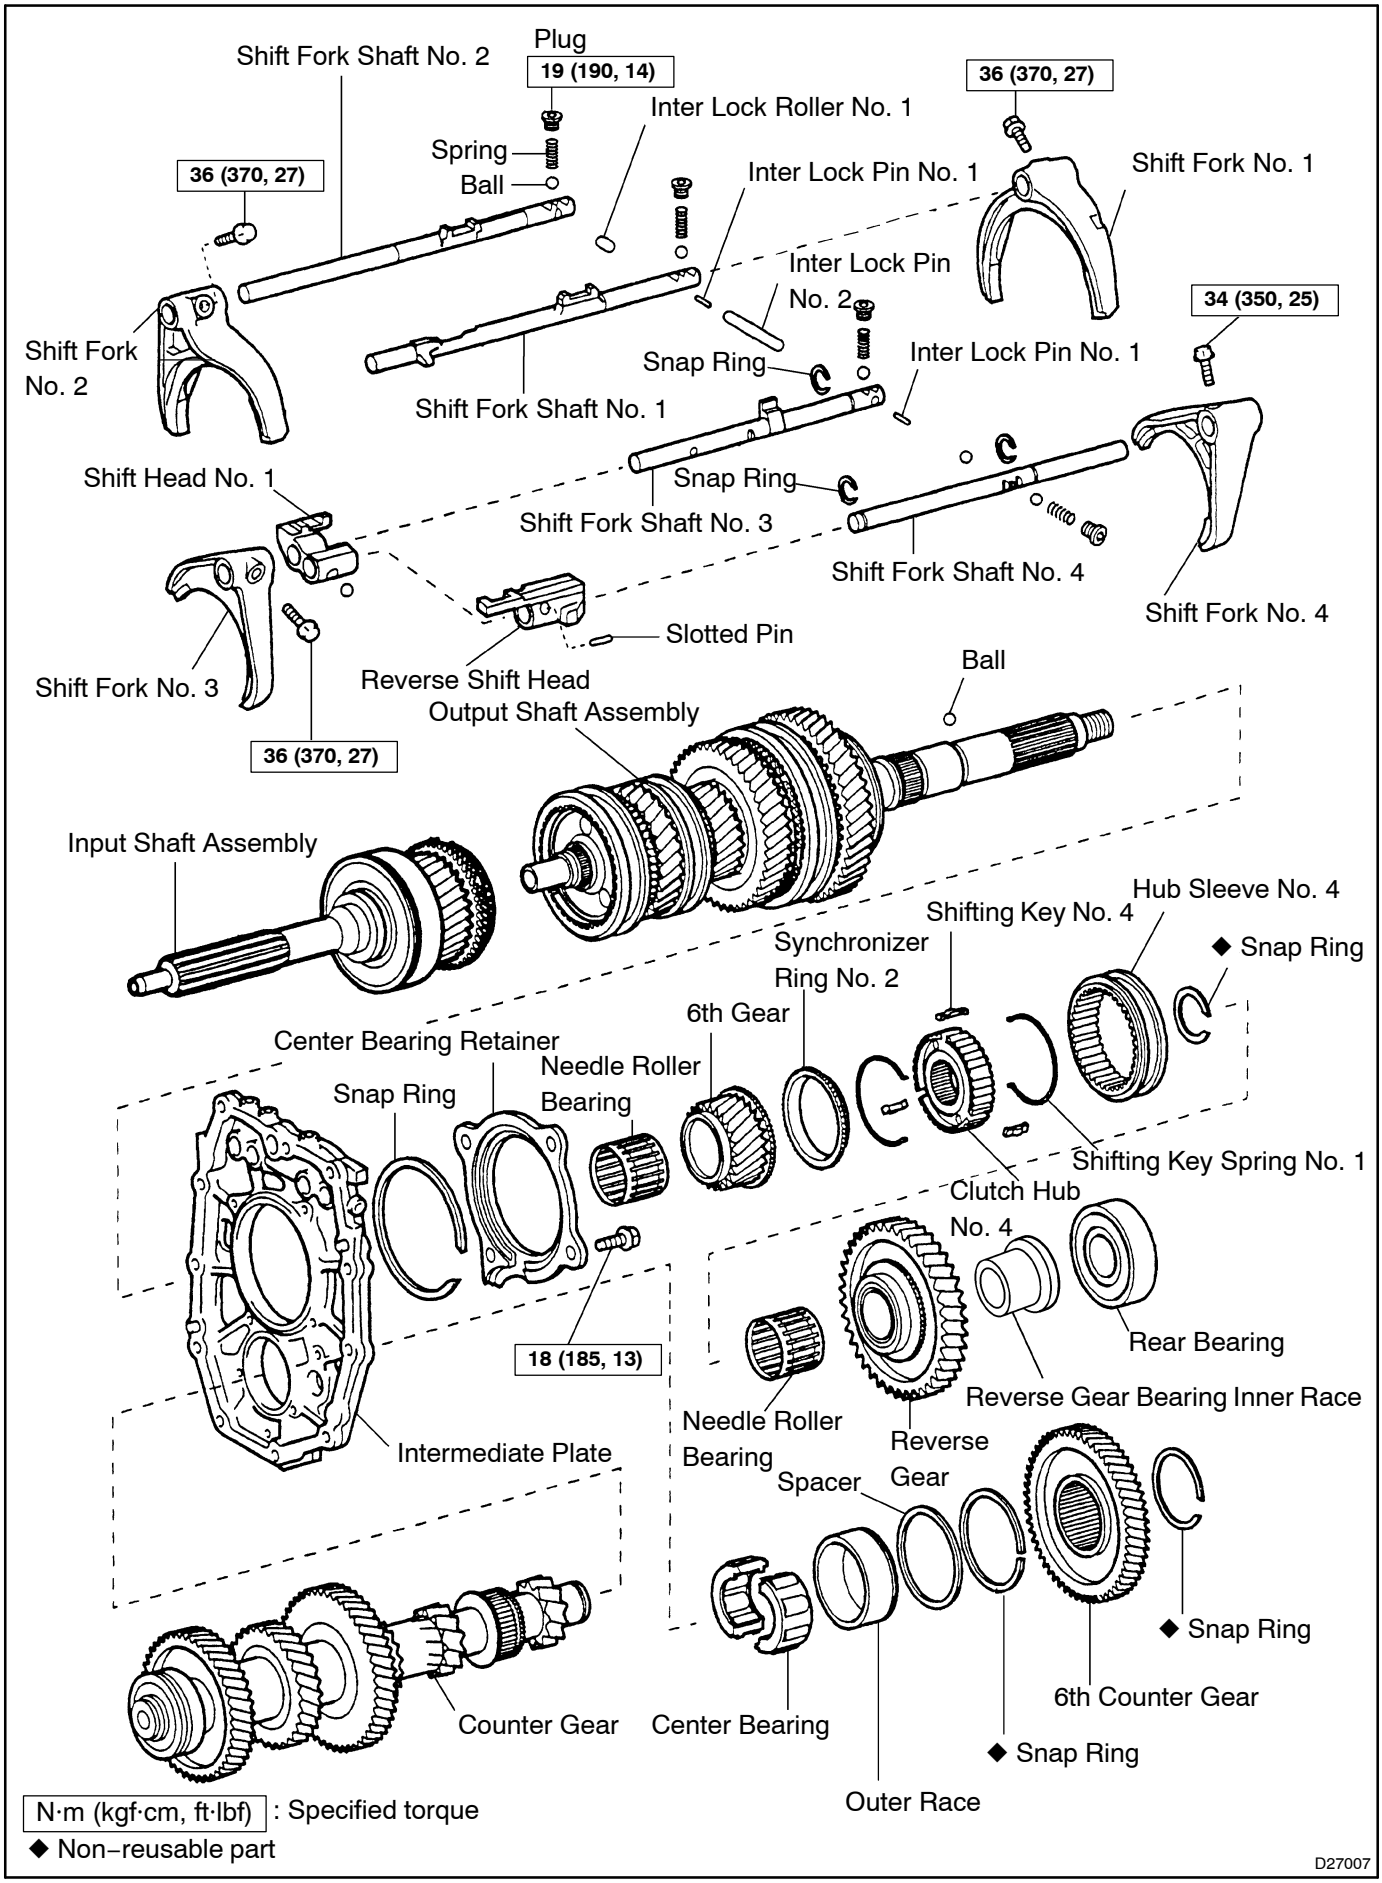
Shift Fork Shaft No. 2
Plug
19 (190, 14)
Inter Lock Roller No. 1
36 (370, 27)
Spring
Ball
Inter Lock Pin No. 1
Shift Fork No. 1
36 (370, 27)
Inter Lock Pin No. 2
34 (350, 25)
Shift Fork No. 2
Snap Ring
Inter Lock Pin No. 1
Shift Fork Shaft No. 1
Shift Head No. 1
Snap Ring
Shift Fork Shaft No. 3
Shift Fork Shaft No. 4
Shift Fork No. 4
Slotted Pin
Shift Fork No. 3
Reverse Shift Head
Ball
Output Shaft Assembly
36 (370, 27)
Input Shaft Assembly
Hub Sleeve No. 4
Shifting Key No. 4
Synchronizer Ring No. 2
◆ Snap Ring
6th Gear
Center Bearing Retainer
Needle Roller Bearing
Snap Ring
Shifting Key Spring No. 1
Clutch Hub No. 4
Rear Bearing
18 (185, 13)
Reverse Gear Bearing Inner Race
Needle Roller Bearing
Reverse Gear
Intermediate Plate
Spacer
◆ Snap Ring
6th Counter Gear
Counter Gear
Center Bearing
◆ Snap Ring
Outer Race
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
D27007