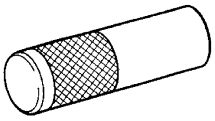





LUBRICATION


PREPARATION

022DI–01

SST

	09608–06041	Front Hub Inner Bearing Cone Replacer	OIL PUMP ASSY(15B–FTE)
	09950–40011	Puller B Set	OIL PUMP ASSY(15B–FTE)
	(09951–04010)	Hanger 150	OIL PUMP ASSY(15B–FTE)
	(09952–04010)	Slide Arm	OIL PUMP ASSY(15B–FTE)
	(09953–04030)	Center Bolt 200	OIL PUMP ASSY(15B–FTE)
	(09954–04030)	Arm 150	OIL PUMP ASSY(15B–FTE)
	(09955–04061)	Claw No.6	OIL PUMP ASSY(15B–FTE)

Recomended Tools

	09200–00010	Engine Adjust Kit	OIL PUMP ASSY(15B–FTE)

Equipment

Chisel	
Dial indicator	
Precision straight edge	
Torque wrench	
Wooden block	
Wooden stick	