
WATER PUMP ASSY (15B–FTE)

160JP–01

INSPECTION

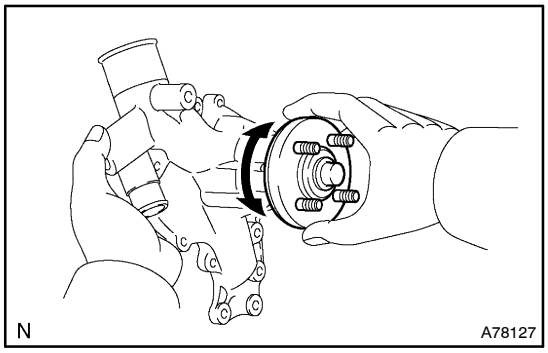

1. INSPECT WATER PUMP ASSY

(a) Turn the pulley and check that the water pump bearing moves smoothly and quietly.

If necessary, replace the water pump.