010VY–01

VEHICLE LIFT AND SUPPORT LOCATIONS

1. NOTICE ABOUT VEHICLE CONDITION WHEN JACKING UP THE VEHICLE

(a) The vehicle must be unloaded before jacking up the vehicle. Never jack up/lift up a heavily loaded vehicle.

(b) When removing heavy equipment such as the engine and transmission, the center of gravity of the vehicle may shift. To stabilize the vehicle: place a balance weight in a location where it will not roll or shift; or use a mission jack to hold the jacking support.

2. NOTICE FOR USING 4 POST LIFT

(a) Follow the safety procedures outlined in its instruction manual.

(b) Use precautionary measures to prevent the free beam from damaging tires or wheels.

(c) Use wheel chocks to secure the vehicle.

3. NOTICE FOR USING JACK AND SAFETY STAND


(a) Work in a flat area using wheel chocks at all times.

(b) Support the specified location with a jack and safety stand accurately.


(c) Do not work or leave the vehicle with a support only by a jack. Be sure to support the vehicle together with a safety stand.

(d) Be careful and accurate in jacking up and down the vehicle.


FRONT (IFS)

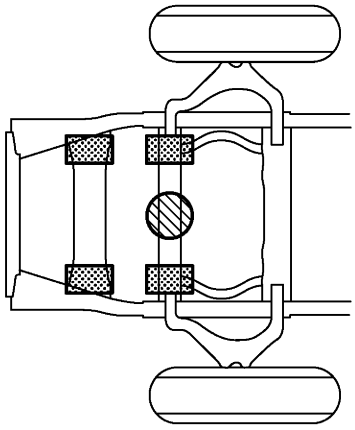


REAR

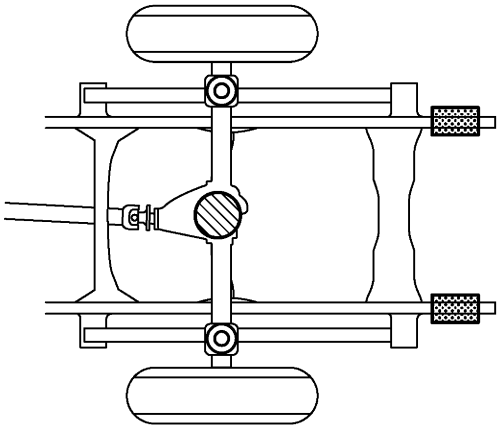

FRONT (RFS)

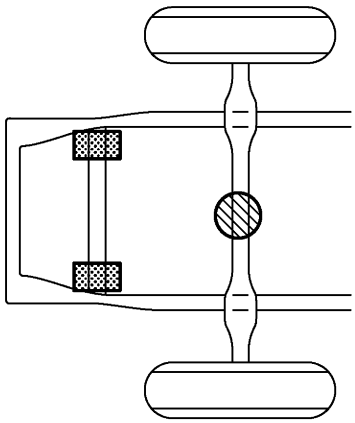

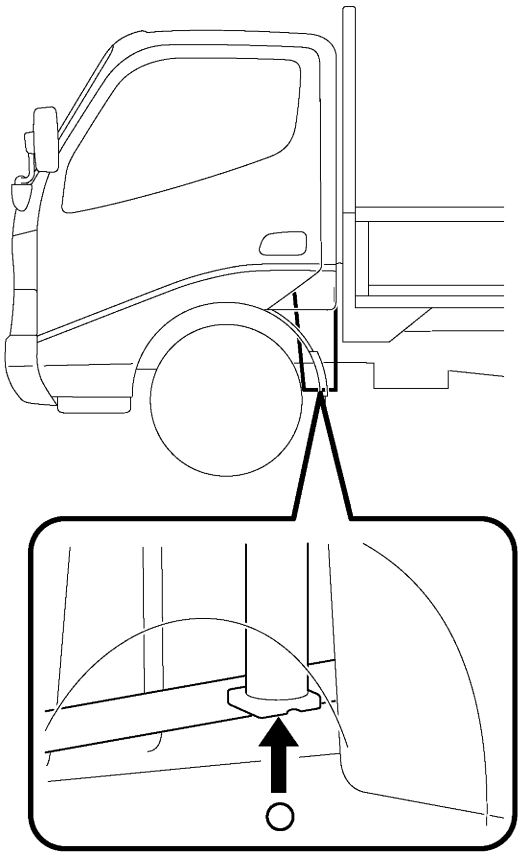

: SUPPORT POSITION

: JACK POSITION

SCREW JACK POSITION

○ : Front (Auxiliary member)

◎ : Rear (U–bolt seat)

Y

D26141