

05L2Q–01

LOCATION

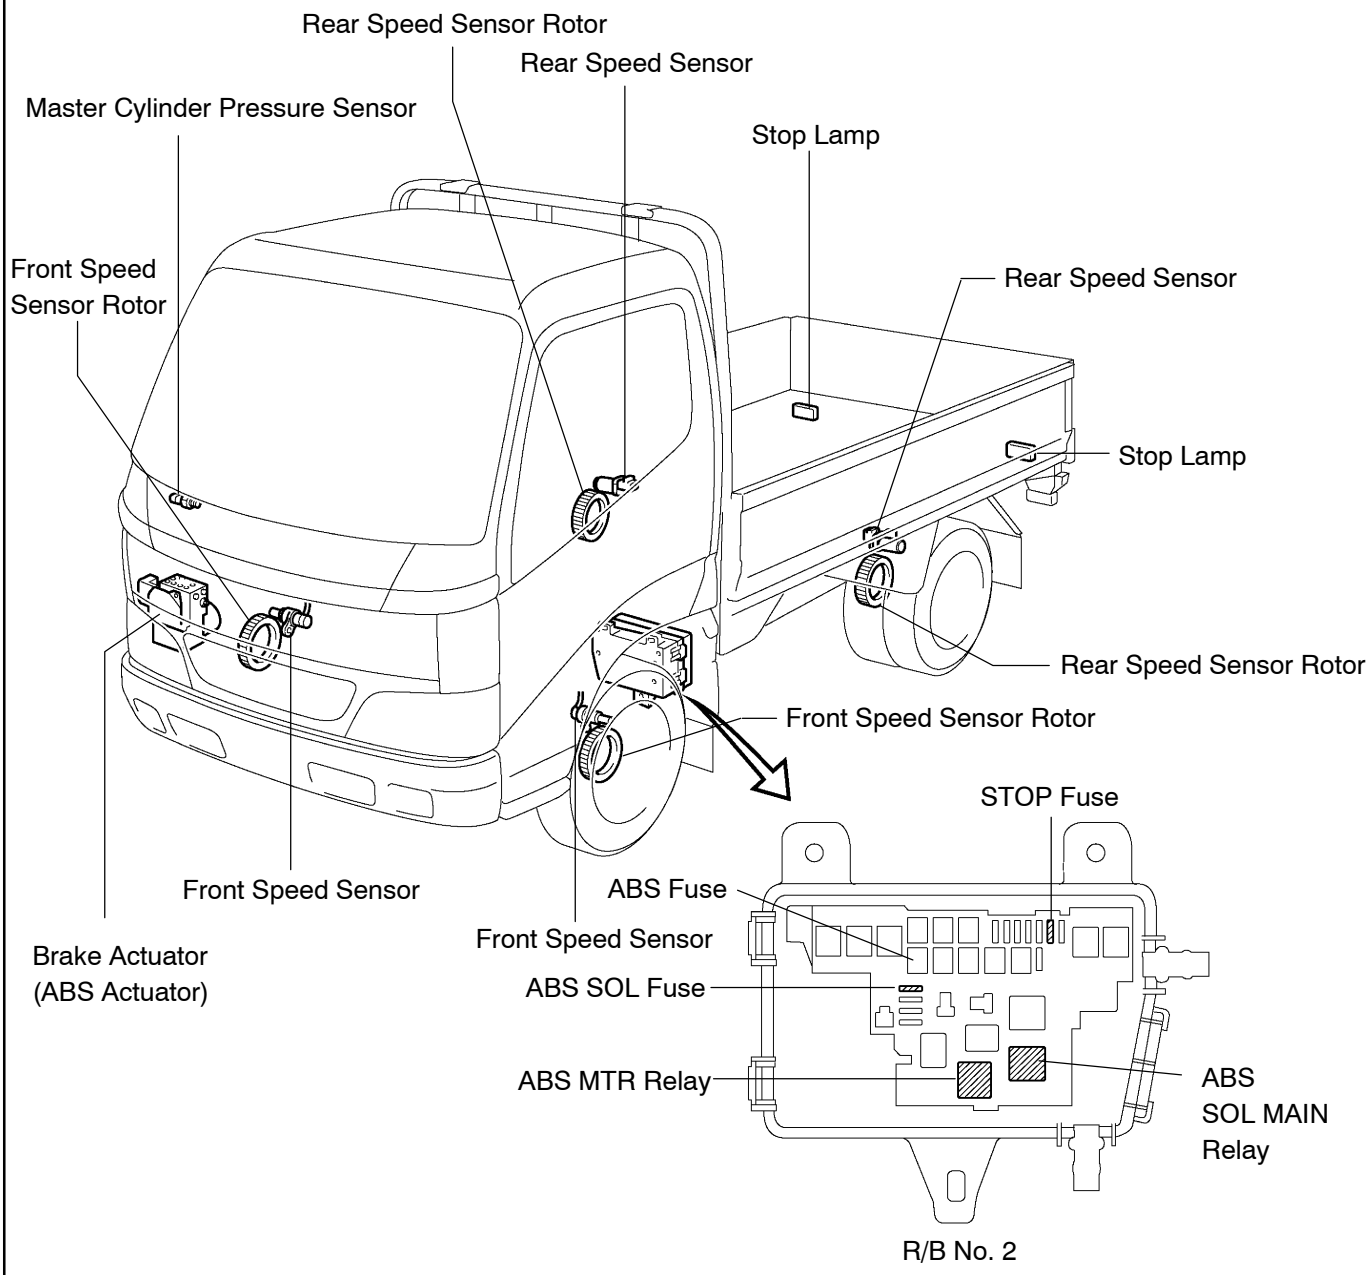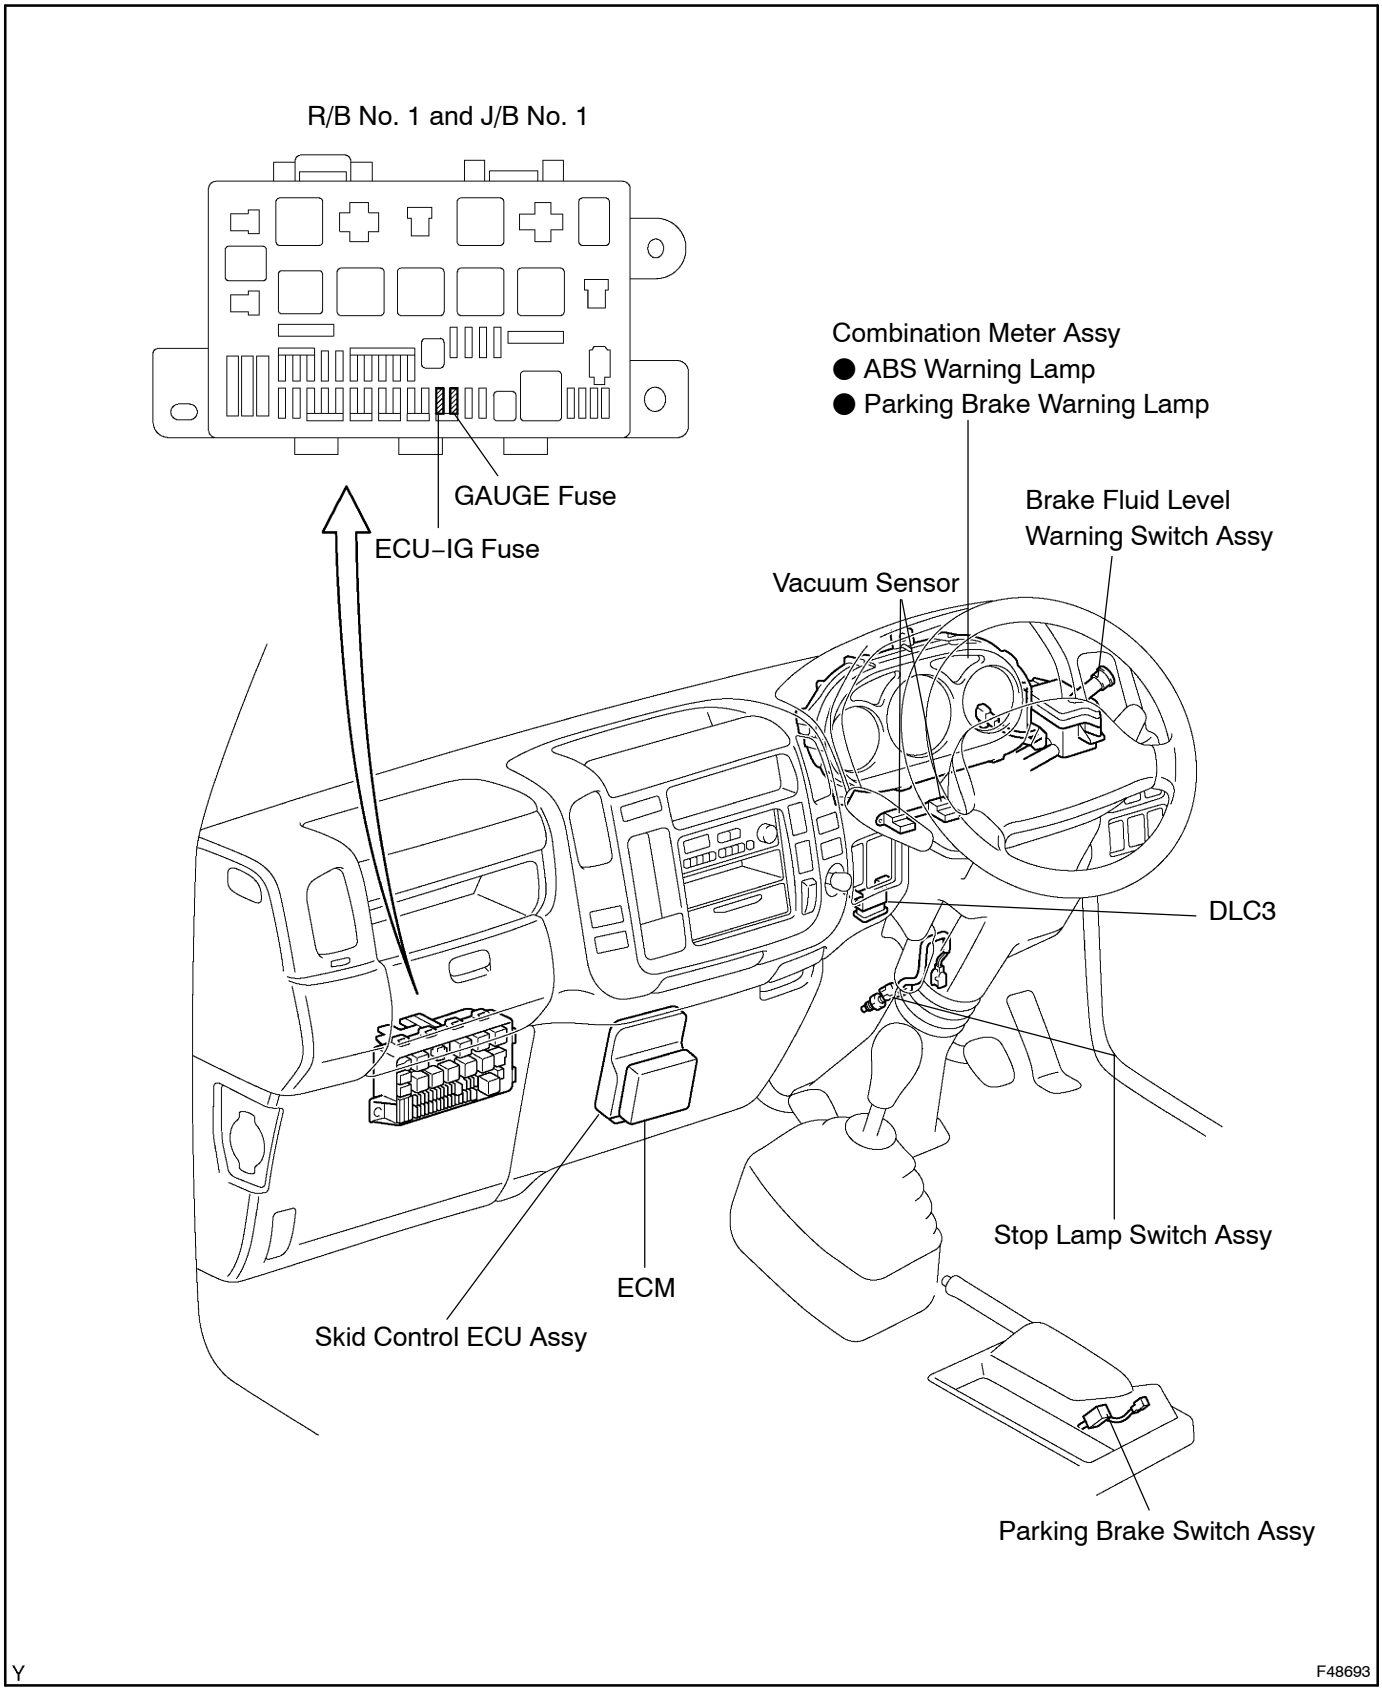

Y

F48696


R/B No. 1 and J/B No. 1
GAUGE Fuse
ECU–IG Fuse
Combination Meter Assy
● ABS Warning Lamp
● Parking Brake Warning Lamp
Brake Fluid Level
Warning Switch Assy
Vacuum Sensor
DLC3
Stop Lamp Switch Assy
ECM
Skid Control ECU Assy
Parking Brake Switch Assy
Y
F48693