
ACCELERATOR LINK ASSY (N04C–TF)

100PA–01

REPLACEMENT

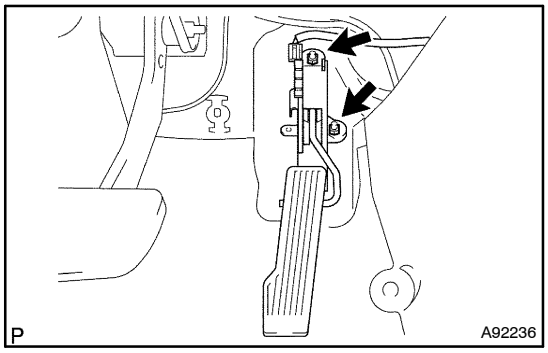


1. REMOVE ACCELERATOR LINK ASSY

(a) Disconnect the connector.

(b) Remove the 2 nuts and accelerator link.

NOTICE:

- **Do not drop the accelerator link.**
- **Do not disassemble the accelerator link.**

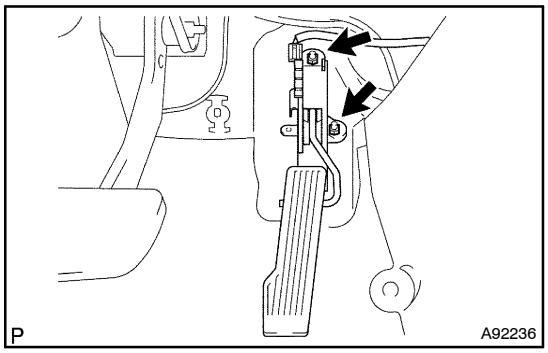

2. INSTALL ACCELERATOR LINK ASSY

(a) Install the accelerator link with the 2 nuts.
Torque: 5.5 N·m (56 kgf·cm, 49 in.·lbf)

(b) Connect the connector.