
EMISSION CONTROL SYSTEM (N04C–TF)

120ES–01

ON–VEHICLE INSPECTION

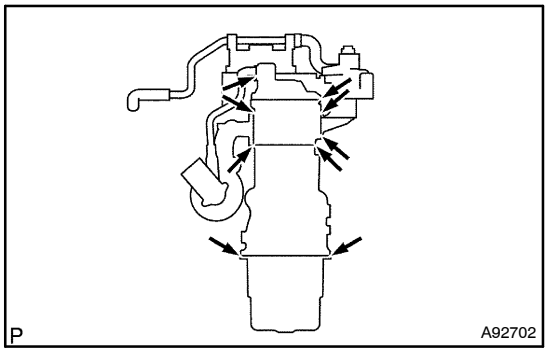

1. VISUALLY CHECK HOSES, CONNECTIONS AND GASKETS

(a) Check for cracks, leaks or damage.

HINT:

Be sure to check the areas indicated by the arrow marks.

If the hoses, gaskets or connections are damaged, repair or replace parts as necessary.