
120ET–01

INSPECTION

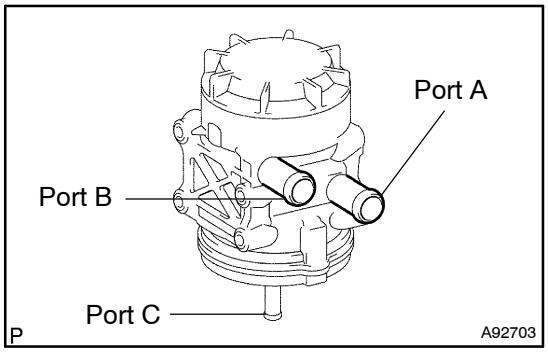

1. INSPECT OIL SEPARATOR ASSY


(a) Check oil separator operation.

(1) Check oil separator operations.

OK:

Condition	Specified Condition
Close ports B and C, then apply vacuum to port A (1.96 kPa (14.7 mmHg, 0.58 in.Hg))	No leaks
Close port C, then apply vacuum to port A (1.96 kPa (14.7 mmHg, 0.58 in.Hg))	Air drawn into port B

If the result is not as specified, replace the oil separator.

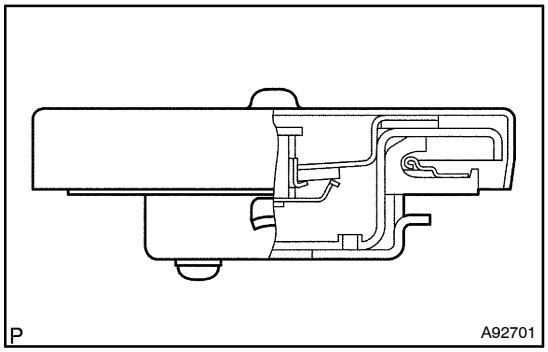

2. CHECK FUEL TANK CAP ASSY

(a) Visually check if the cap is deformed or damaged.

If necessary, replace the cap.