
DRIVE BELT (N04C–TF)

REPLACEMENT


141UA–01

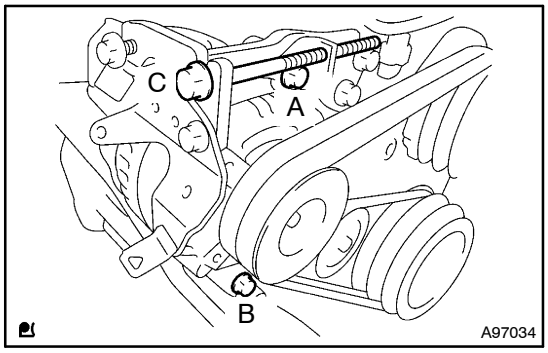

1. REMOVE FAN AND GENERATOR V BELT

(a) Loosen bolts A and B.


(b) Loosen the adjusting bolt C and remove the belt.

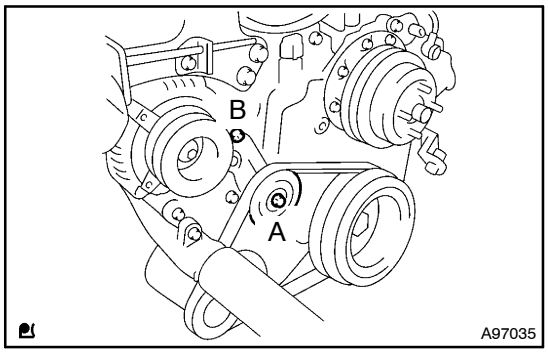

2. REMOVE A/C COMPRESSOR V BELT

(a) Loosen bolt A.

(b) Loosen the adjusting bolt B and remove the belt.

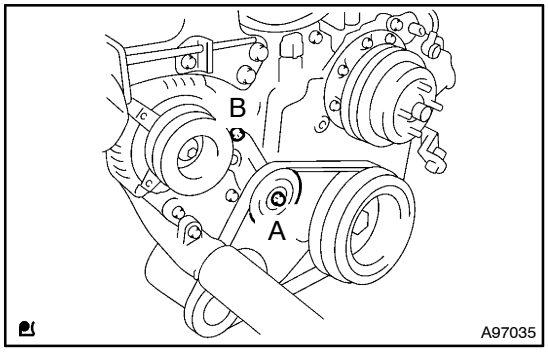

3. INSTALL A/C COMPRESSOR V BELT

(a) Install the belt on each pulley.


(b) Tighten the adjusting bolt B and adjust the belt deflection (see page 14–1).

(c) Tighten bolt A.

Torque: 28.5 N·m (291 kgf·cm, 21 ft·lbf)

(d) Retighten bolt B.

Torque: 5.9 N·m (60 kgf·cm, 52 in.·lbf)

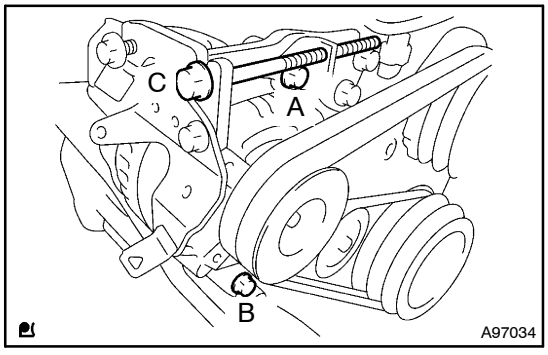

4. INSTALL FAN AND GENERATOR V BELT

(a) Install the belt on each pulley.

(b) Tighten the adjusting bolt C and adjust the belt deflection (see page 14–1).

(c) First tighten bolt B, then bolt A.

Torque:
28.5 N·m (291 kgf·cm, 21 ft·lbf) for bolt A
55 N·m (561 kgf·cm, 41 ft·lbf) for bolt B

(d) Retighten bolt C.

Torque: 5.9 N·m (60 kgf·cm, 52 in.·lbf)

5. INSPECT DRIVE BELT DEFLECTION (See page 14–1)