

PARTIAL ENGINE ASSY (N04C–TF)

141UH–01


COMPONENTS

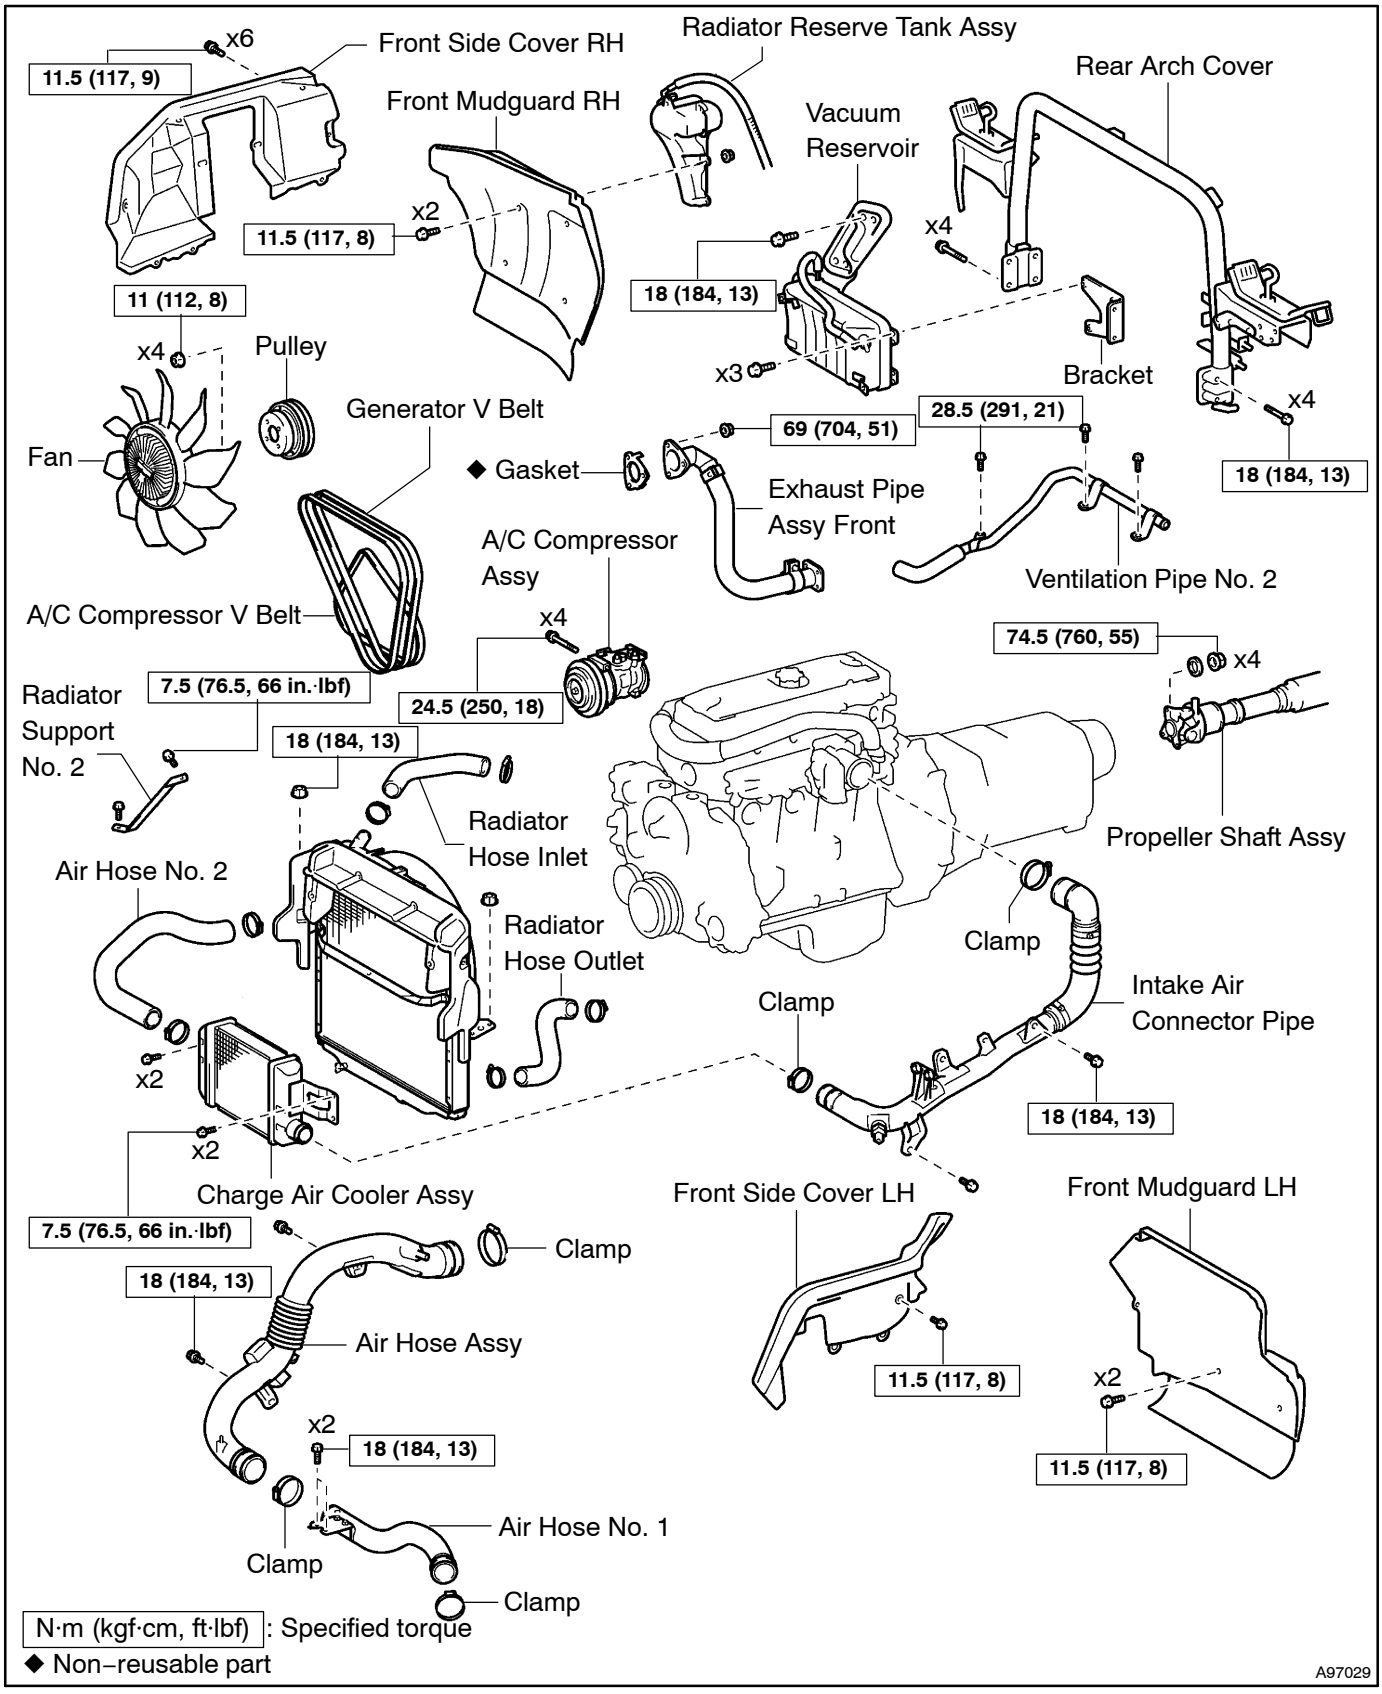


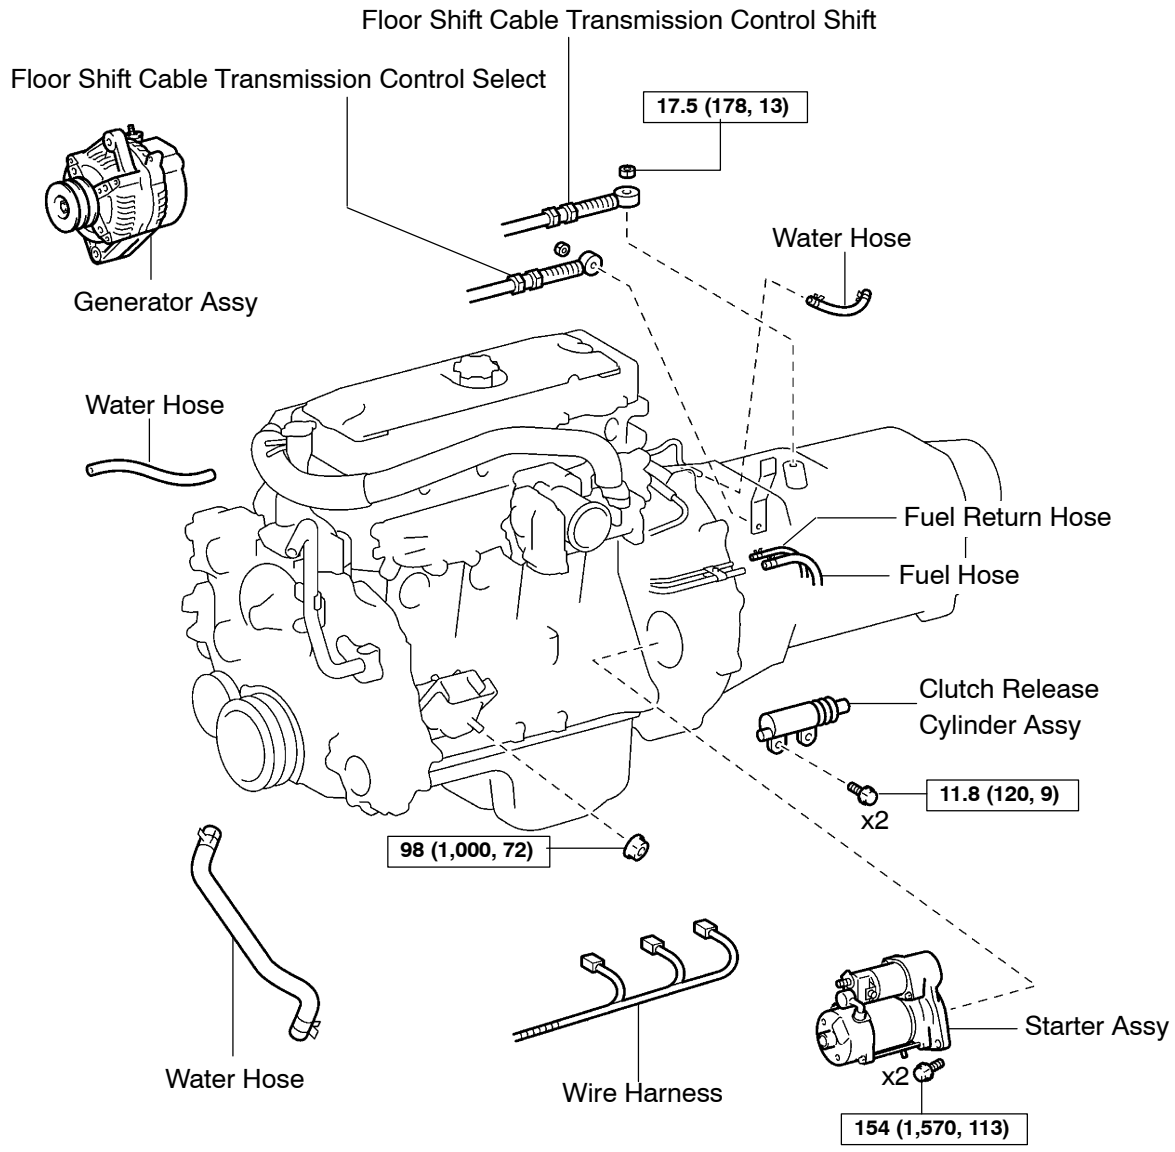



N·m (kgf·cm, ft·lbf) : Specified torque


A97030

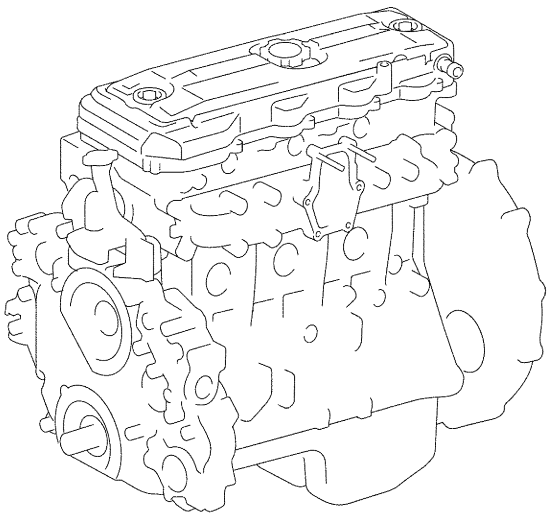


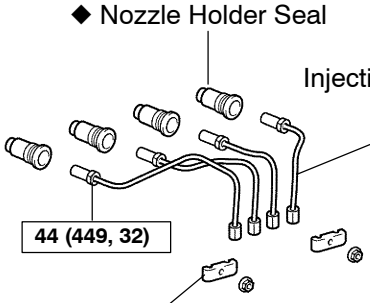


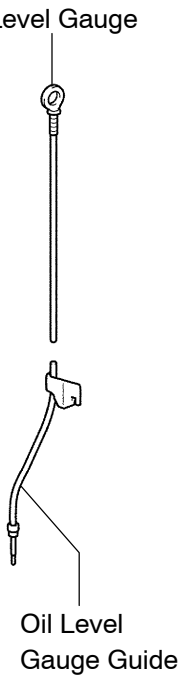

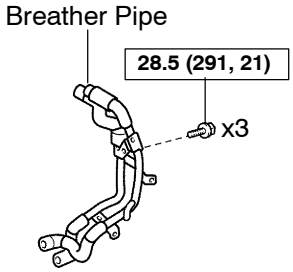

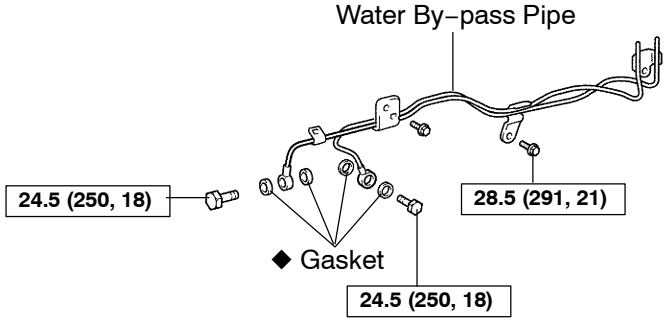

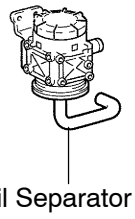


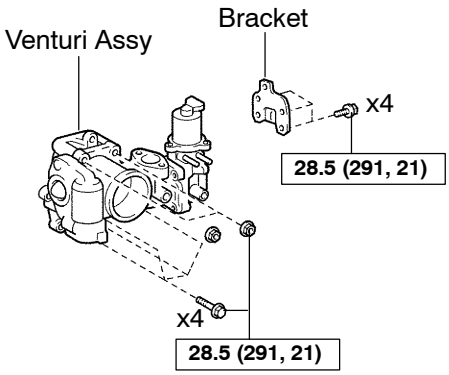

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part


A97602

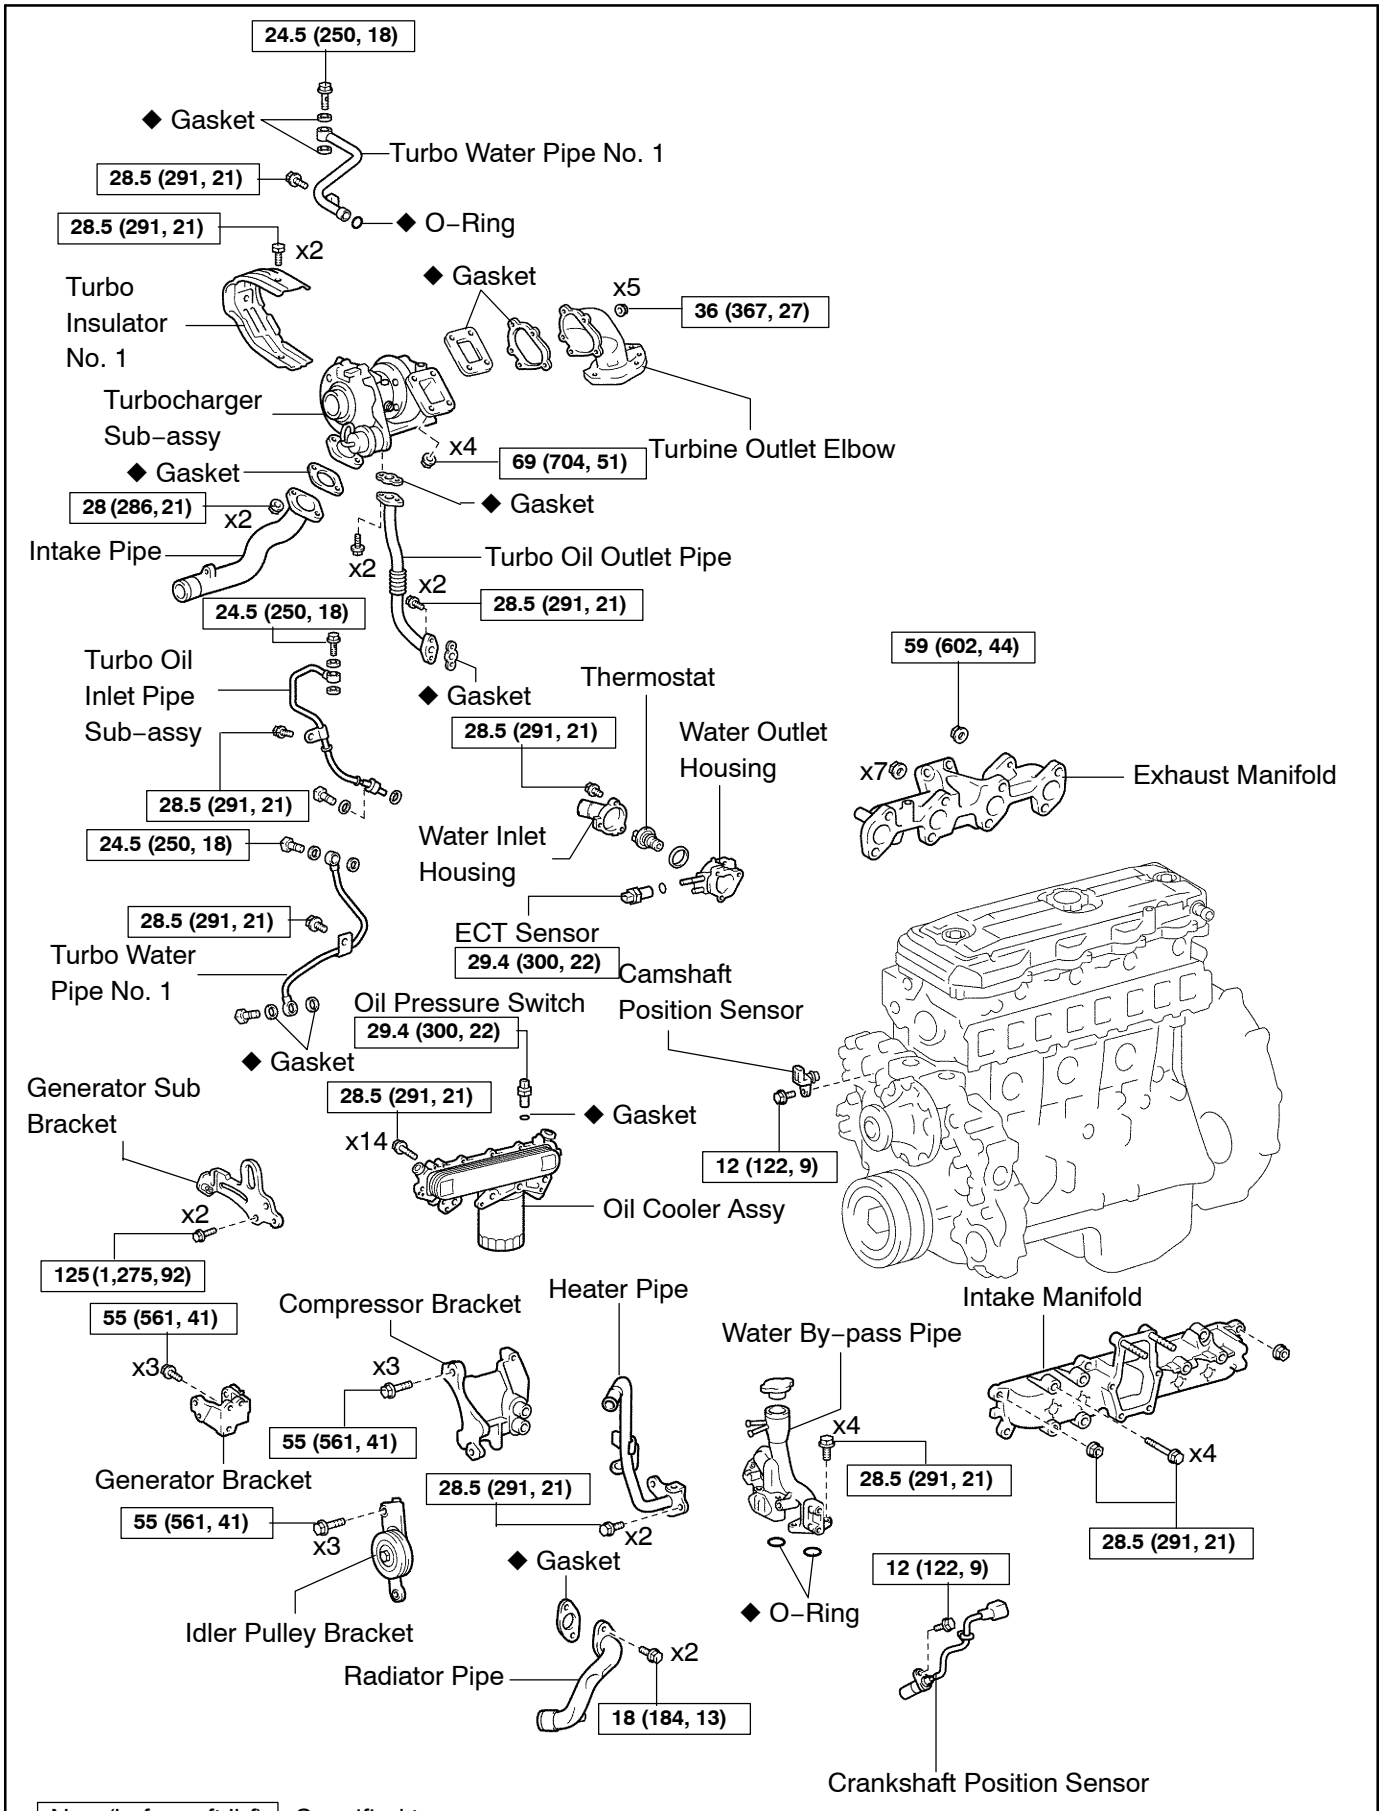

N·m (kgf·cm, ft·lbf) : Specified torque

P ◆ Non–reusable part

A97603

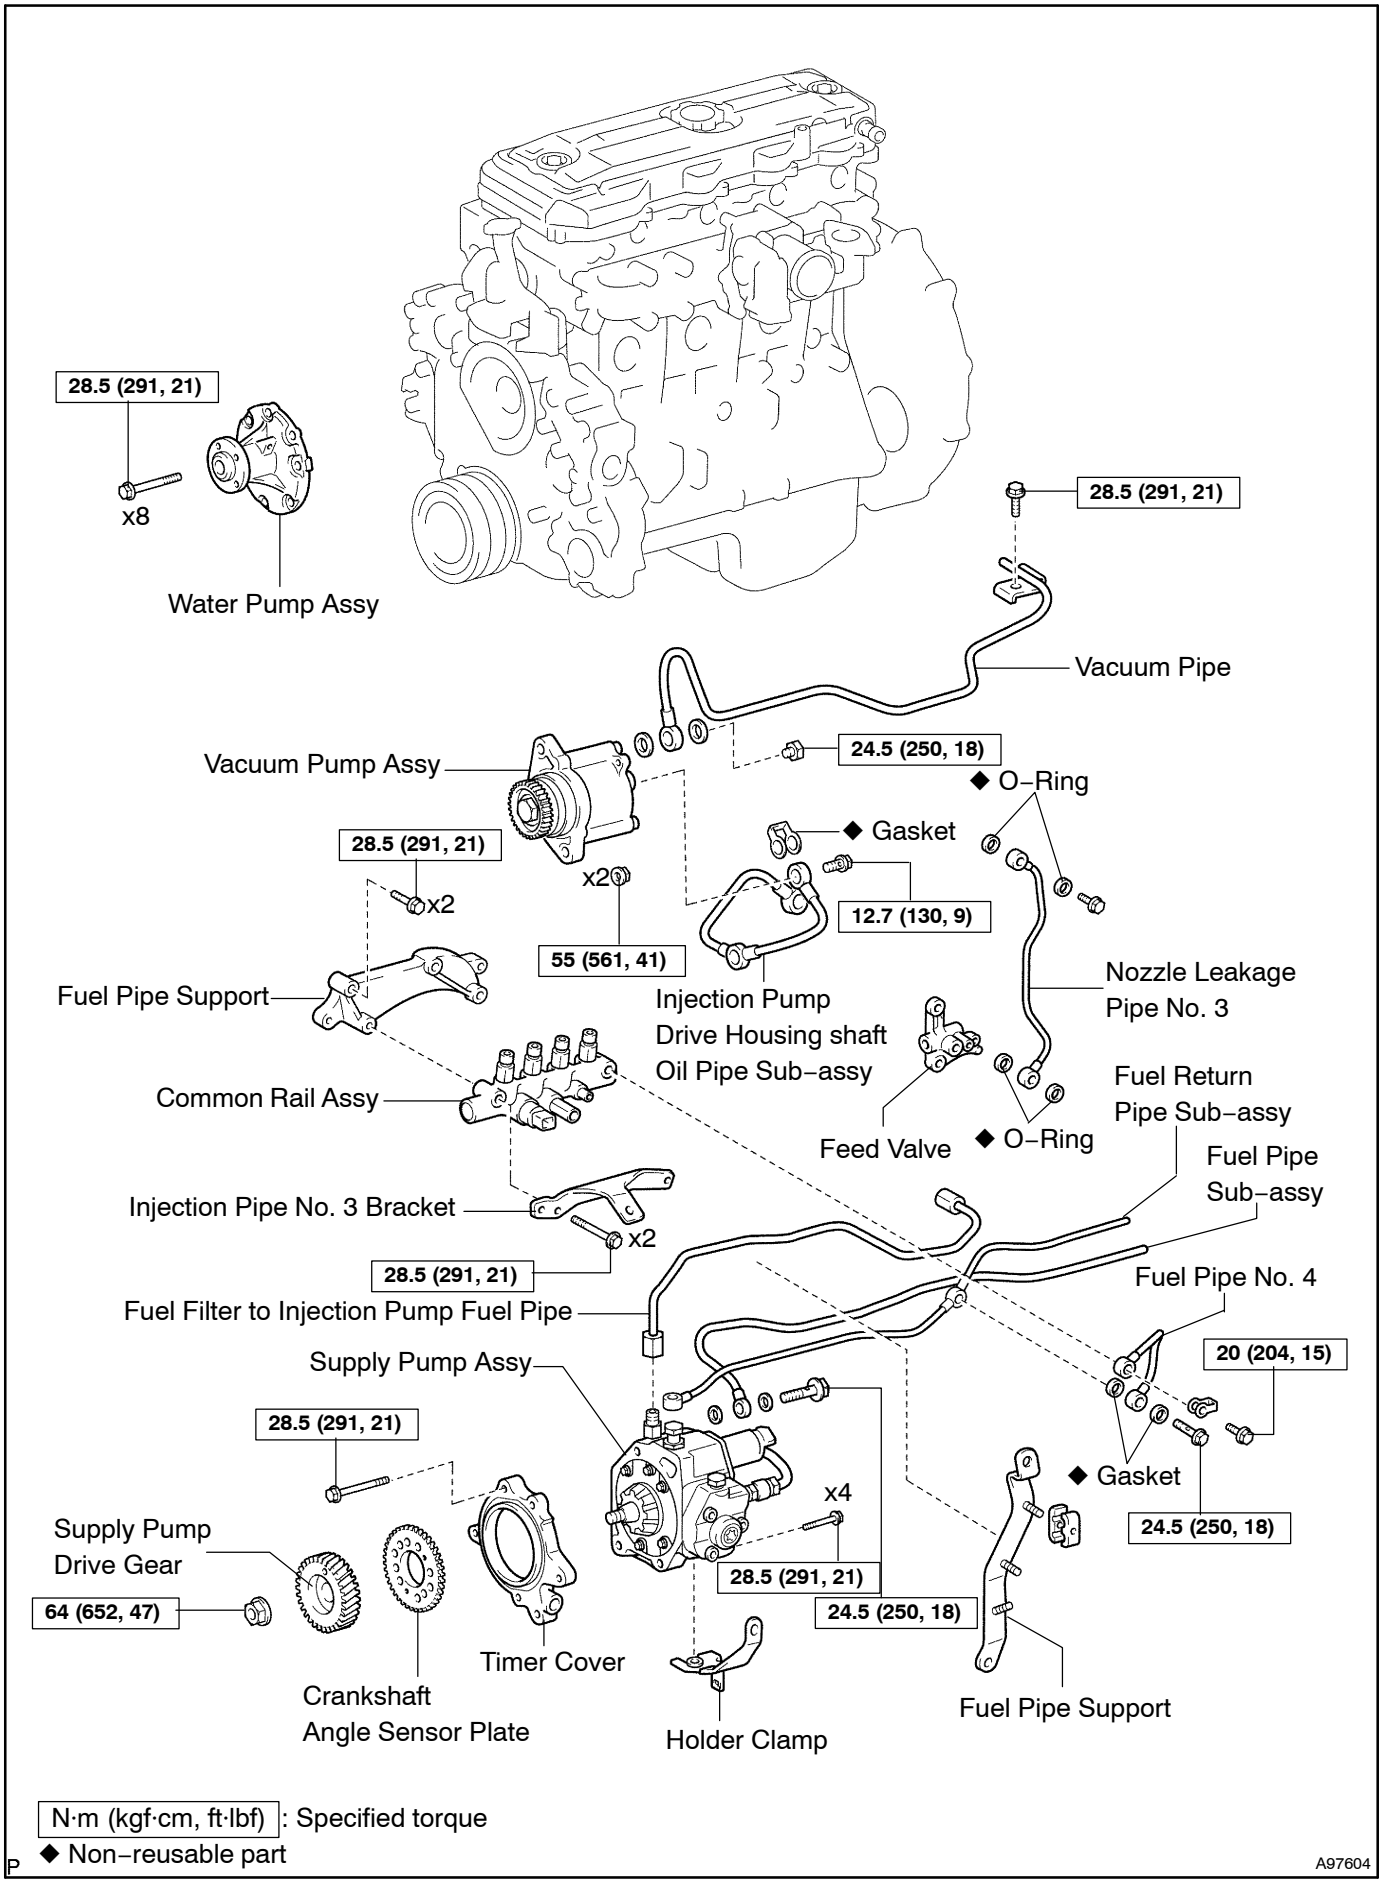
28.5 (291, 21)
x8
Water Pump Assy
28.5 (291, 21)
Vacuum Pipe
Vacuum Pump Assy
24.5 (250, 18)
◆ O–Ring
◆ Gasket
28.5 (291, 21)
x2
x2
12.7 (130, 9)
55 (561, 41)
Fuel Pipe Support
Injection Pump
Drive Housing shaft
Oil Pipe Sub–assy
Nozzle Leakage
Pipe No. 3
Common Rail Assy
Feed Valve
◆ O–Ring
Fuel Return
Pipe Sub–assy
Fuel Pipe
Sub–assy
Injection Pipe No. 3 Bracket
x2
28.5 (291, 21)
Fuel Filter to Injection Pump Fuel Pipe
Fuel Pipe No. 4
Supply Pump Assy
20 (204, 15)
28.5 (291, 21)
◆ Gasket
x4
24.5 (250, 18)
Supply Pump
Drive Gear
28.5 (291, 21)
64 (652, 47)
24.5 (250, 18)
Timer Cover
Crankshaft
Angle Sensor Plate
Holder Clamp
Fuel Pipe Support
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
P
A97604