
RADIATOR ASSY (N04C–TF)

160X2–01

ON–VEHICLE CLEANING

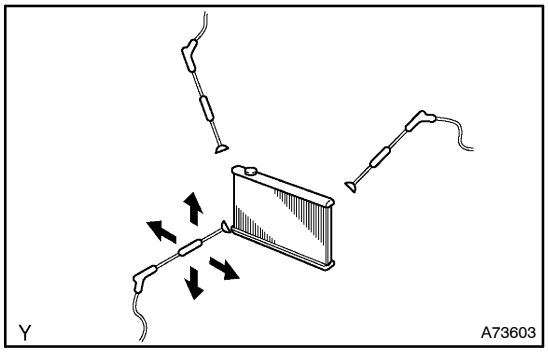

1. INSPECT FINS BLOCKAGE

(a) If the fins are clogged, wash them with water or use a steam cleaner. Dry with compressed air.

NOTICE:

- **If the distance between the steam cleaner and the core is too close, the fins may become damaged. Maintain the following distance and pressure level.**
  Standard:

Distance	Pressure Level
300 mm (11.81 in.)	2,942 to 4,903 kPa (30 to 50 kgf/cm^2, 427 to 711 psi)
500 mm (19.69 in.)	4,903 to 7,845 kPa (50 to 80 kgf/cm^2, 711 to 1,138 psi)

- **If the fins are bent, straighten them with a screwdriver or pliers.**
- **Never apply water directly onto the electronic components.**