STARTER ASSY (N04C–TF)

190YM–01


REPLACEMENT

NOTICE:

Before replacing the starter, check the following again:


- **Connector connection**
- **Accessory installation**

1. DISCONNECT BATTERY NEGATIVE TERMINAL

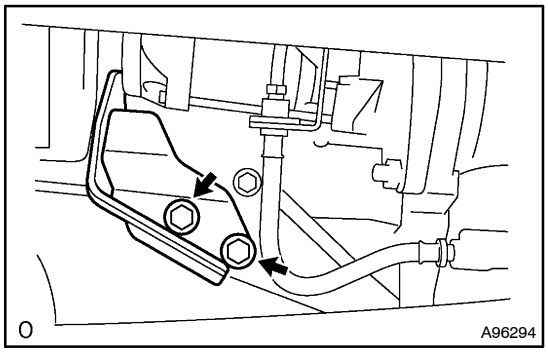

2. REMOVE STIFFENER PLATE LH

(a) Remove the 2 bolts and stiffener plate.

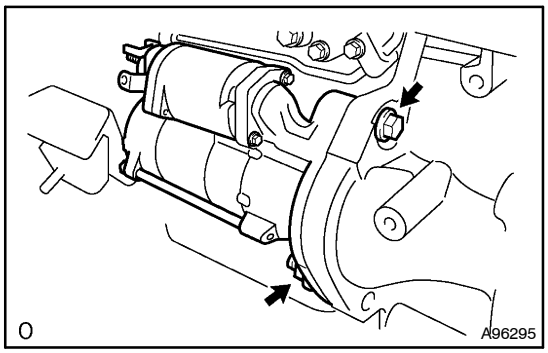

3. REMOVE STARTER ASSY

(a) Disconnect the starter connector.

(b) Open the terminal cap, remove the bolt and disconnect the starter wire from terminal C.

(c) Open the terminal cap, remove the nut and disconnect the starter wire from terminal B.

(d) Remove the bolt, nut and starter.

4. INSTALL STARTER ASSY

(a) Install the starter with the bolt and nut.
Torque: 154 N·m (1,570 kgf·cm, 114 ft·lbf)

(b) Connect the starter wire to terminal B with the nut.
Torque: 13.5 N·m (138 kgf·cm, 10 ft·lbf)

(c) Cover the nut with the cap.

(d) Connect the starter wire to terminal C with the bolt.
Torque: 2.5 N·m (25 kgf·cm, 22 in.·lbf)

(e) Cover the bolt with the cap.

(f) Connect the starter connector.

5. INSTALL STIFFENER PLATE LH

(a) Install the stiffener plate with the 2 bolts.
Torque: 97 N·m (989 kgf·cm, 72 ft·lbf)

6. CONNECT BATTERY NEGATIVE TERMINAL