TIRE AND WHEEL (AUSTRALIA)

28054–01

INSPECTION


1. INSPECT TIRES

(a) Visually check the tires for wear.

(b) Check the tires' inflation pressure when they are cold, according to the table below.

Cold tire inflation pressure:

Cab Type	Countries	Models	Tire Size		Inflation Pressure kPa (kgf/cm^2, psi)	
			Front	Rear	Front	Rear
Standard cab	Australia	XZU305R–TQMMWQ3 XZU305R–HQMMWQ3	195/75R15	195/75R15	600 (6.0, 87)	600 (6.0, 87)
Standard cab	Australia	XZU305R–TKMMWQ3 XZU305R–HKMMWQ3	185/85R16	185/85R16	600 (6.0, 87)	600 (6.0, 87)
Standard cab	Australia	XZU345R–TKMMWQ3 XZU345R–HKMMWQ3	185/85R16	185/85R16	600 (6.0, 87)	600 (6.0, 87)

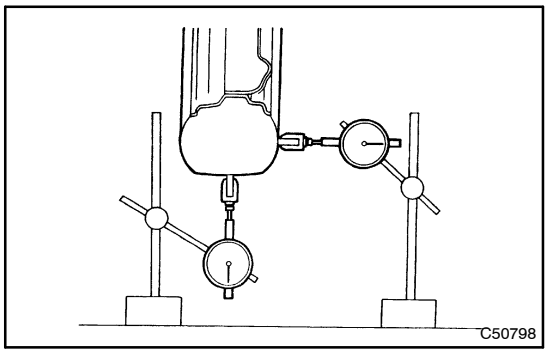

(c) Using a dial indicator, check the tires' runout.

Tire runout: 3.0 mm (0.039 in.) or less