
330HL–01


REPLACEMENT

1. **REMOVE SHIFT LEVER KNOB SUB–ASSY**
2. **REMOVE SHIFTING HOLE COVER SUB–ASSY**
3. **REMOVE PARKING BRAKE HOLE COVER**
4. **REMOVE SHIFT LEVER BOOT COVER**
5. **REMOVE PARKING BRAKE CABLE ASSY NO.2**


(a) Loosen the lock nut and disconnect the cable No. 2 from the parking lever.
(b) Remove the 2 bolts and cable No. 2 from the floor panel.
(c) Remove the scuff plate. Pull back the floor carpet until the control cable cover is visible.
(d) Remove the 4 bolts and cable cover.
(e) Remove the cable No. 2 from the vehicle through the out side.

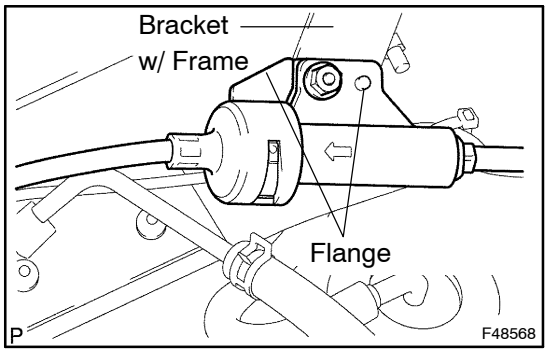

(f) Remove the flanges from the bracket w/ frame by removing the nut.

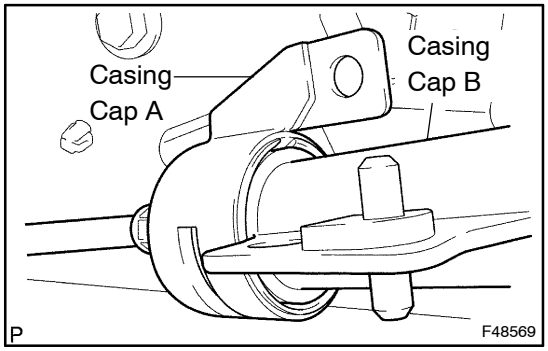



(g) Twist casing cap B 90°.
(h) Then separate casing caps A and B.

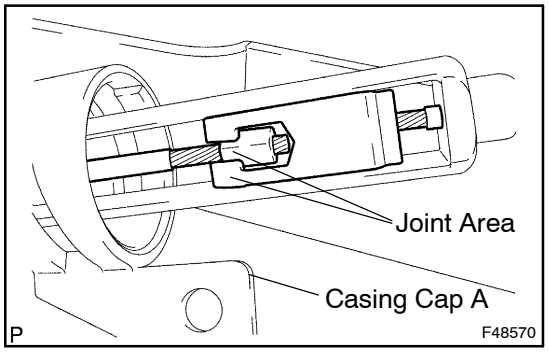

(i) Pull out the interior of the separated caps. From the joint area, remove the parking brake cable No. 2 from the parking brake cable No. 3.


(j) Remove the parking brake cable No. 2 to each cable bracket with the bolt or nut, as shown in the illustration.

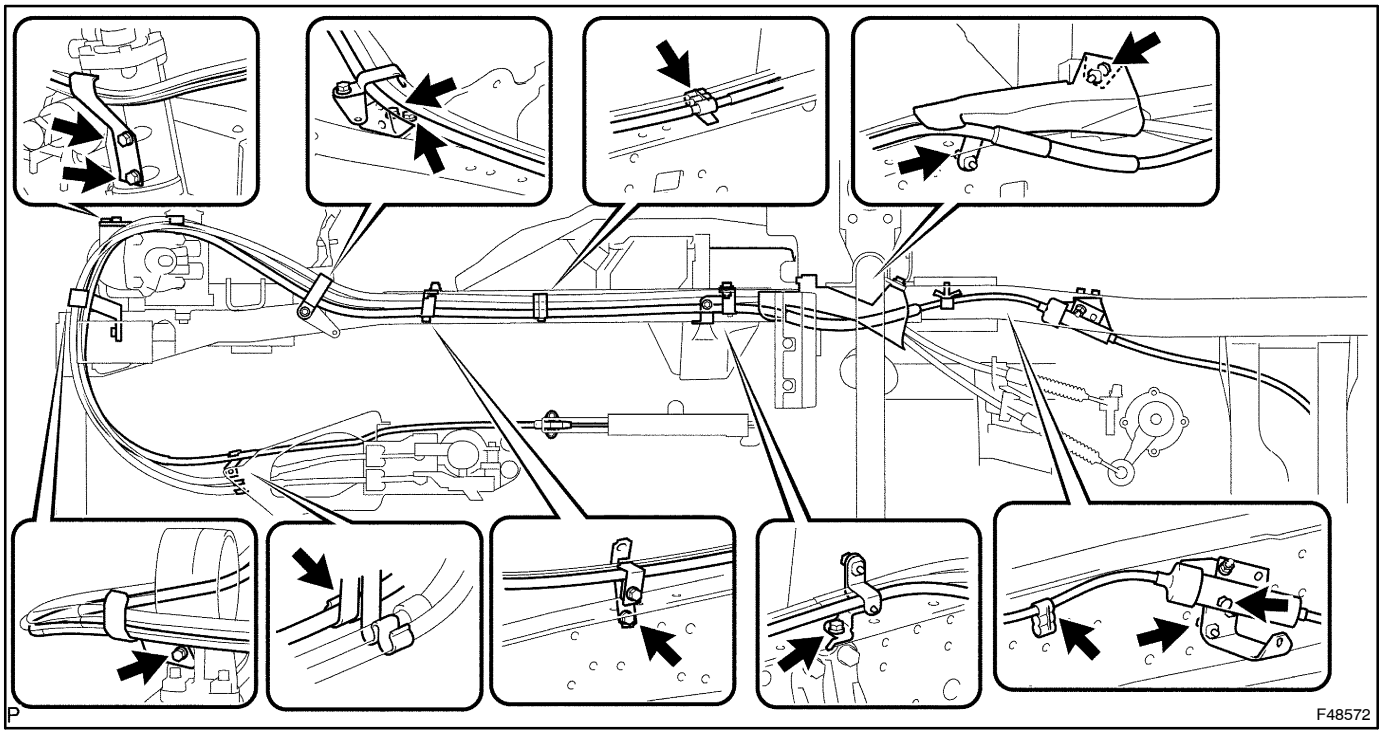

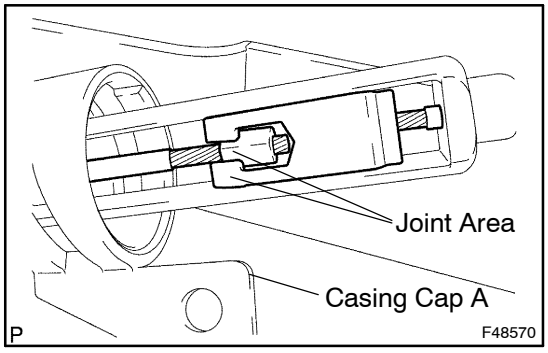


6. INSTALL PARKING BRAKE CABLE ASSY NO.2

(a) Connect the parking brake cable No. 2 to the parking brake cable No. 3.

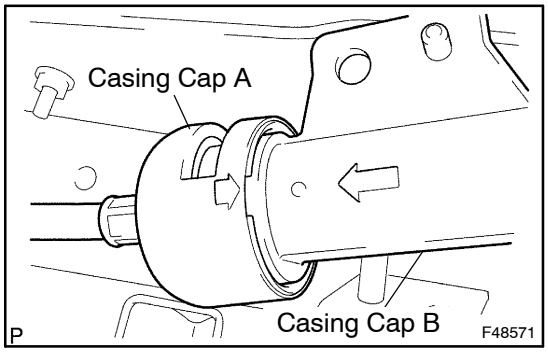


(b) Insert casing cap B into casing cap A. Align the protrusion on casing cap B with the slit of casing cap A using the arrows in the illustration as guides. Twist casing cap A and B until their flanges come together (approximately 90°).

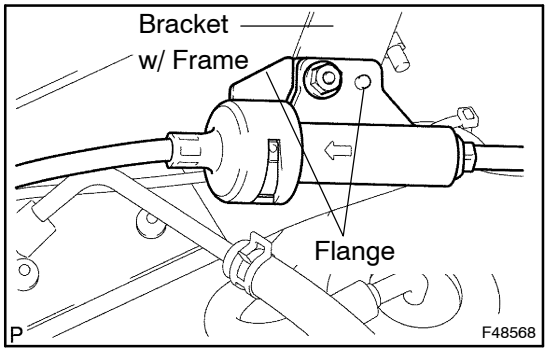

(c) Insert the flange to the bracket w/ frame by installing the nut.

(d) Insert the parking brake cable No. 2 into the room interior. Mount the cable grommet into the floor panel.
Torque: 18 N·m (184 kgf·cm, 13 ft·lbf)

(e) Attach the parking brake cable No. 2 to each cable bracket with the bolt or nut, as shown in the illustration.
Torque: 18 N·m (184 kgf·cm, 13 ft·lbf)

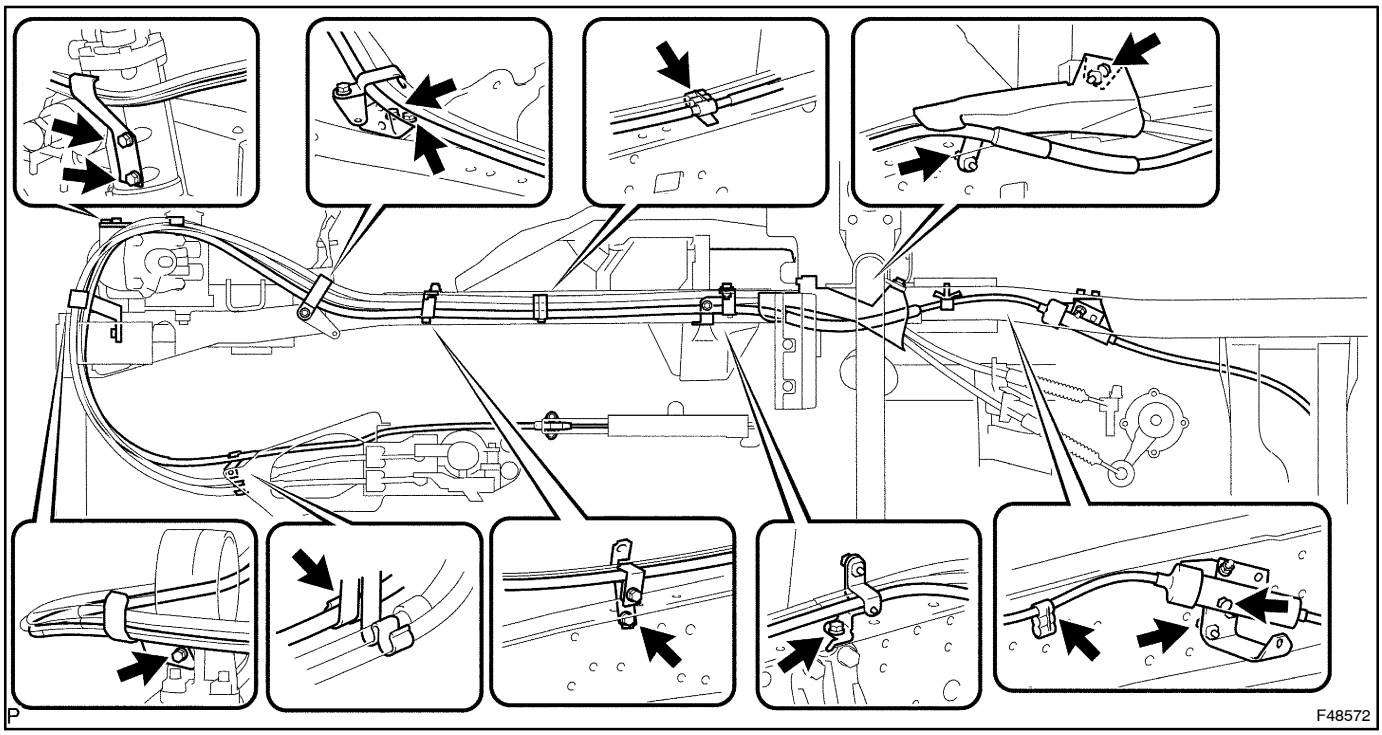

(f) Install the control cable cover with the 4 bolts. Return the floor carpet to its original position and install the scuff plate. Install the parking brake cable No. 2 to the floor panel with the 2 bolts.
Torque: 18 N·m (184 kgf·cm, 13 ft·lbf)

(g) Connect the parking brake cable No. 2 to the parking brake lever's adjusting nut. Temporarily tighten the lock nut.

7. ADJUST PARKING BRAKE SHOE CLEARANCE
8. INSTALL SHIFT LEVER BOOT COVER
9. INSTALL PARKING BRAKE HOLE COVER
10. INSTALL SHIFTING HOLE COVER SUB–ASSY
11. INSTALL SHIFT LEVER KNOB SUB–ASSY