PARKING BRAKE CABLE ASSY NO.3


HINT:

COMPONENTS: See page 33–2.

330HM–01


REPLACEMENT

1. **REMOVE PROPELLER SHAFT ASSY (2 JOINT TYPE)**
2. **REMOVE PROPELLER INTERMEDIATE SHAFT ASSY**
3. **REMOVE PARKING BRAKE DRUM SUB–ASSY**
4. **REMOVE PARKING BRAKE SHOE RETURN TENSION SPRING**
5. **REMOVE PARKING BRAKE SHOE ADJUSTER SUB–ASSY**
6. **REMOVE PARKING BRAKE SHOE ASSY RH OR CENTER NO.2**
7. **REMOVE PARKING BRAKE SHOE ASSY RH OR CENTER NO.1**

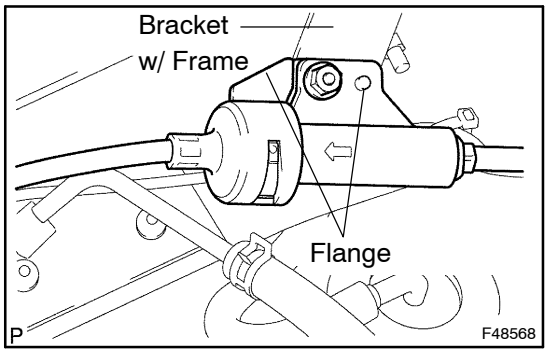


8. REMOVE PARKING BRAKE CABLE ASSY NO.3

(a) Remove the flanges from the bracket w/ frame by removing the nut.

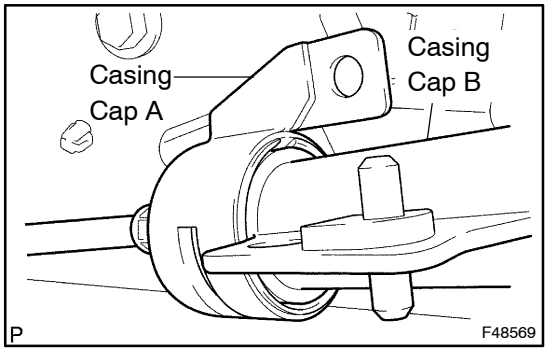


(b) Twist casing cap B 90°.


(c) Then separate casing caps A and B.

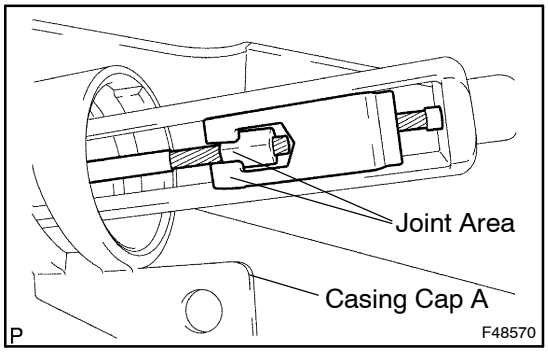

(d) Pull out the interior of the separated caps. From the joint area, remove the parking brake cable No. 2 from the parking brake cable No. 3.

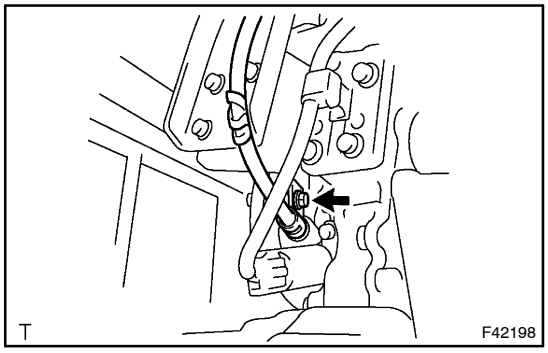


(e) Disconnect the parking brake cable No. 3.
  (1) Remove the bolt and clamp from the parking brake shoe back plate.
  (2) Disconnect the parking brake cable No. 3 from the parking brake shoe back plate.
  (3) Remove the inner wire spring, E–ring, collar and dust seal from the cable No. 3.

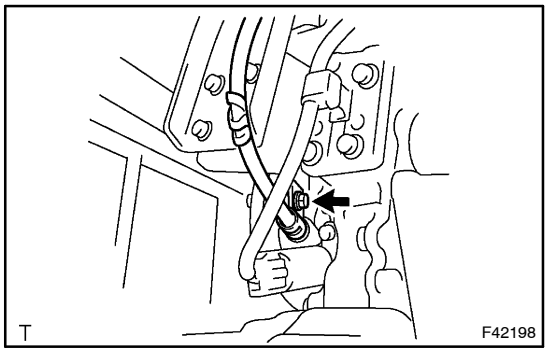


9. INSTALL PARKING BRAKE CABLE ASSY NO.3

(a) Connect the parking brake cable No. 3.
  (1) Install the inner wire spring, E–ring, collar and dust seal to the cable No. 3.
  (2) Connect the parking brake cable No. 3.
  (3) Install the bolt and clamp to the parking brake shoe backing plate.

Torque: 13 N·m (133 kgf·cm, 10 ft·lbf)

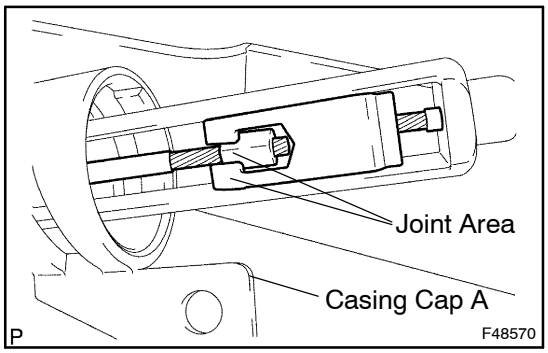

(b) Connect the parking brake cable No. 2 to the parking brake cable No. 3.

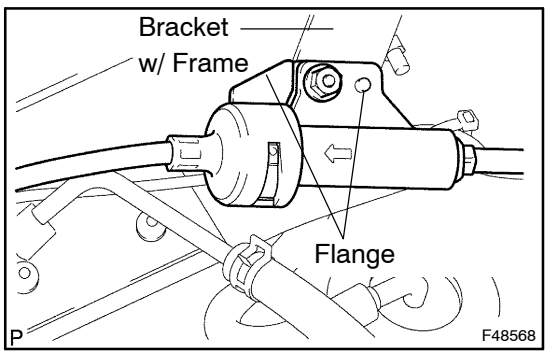

(c) Insert the flange to the bracket w/ frame by installing the nut.

(d) Insert the parking brake cable No. 2 into the room interior. Mount the cable grommet into the floor panel.

Torque: 18 N·m (184 kgf·cm, 13 ft·lbf)

10. INSTALL PARKING BRAKE SHOE ASSY RH OR CENTER NO.1
11. INSTALL PARKING BRAKE SHOE ASSY RH OR CENTER NO.2
12. INSTALL PARKING BRAKE SHOE ADJUSTER SUB–ASSY
13. INSTALL PARKING BRAKE SHOE RETURN TENSION SPRING
14. CHECK PARKING BRAKE INSTALLATION
15. INSTALL PARKING BRAKE DRUM SUB–ASSY
16. ADJUST PARKING BRAKE SHOE CLEARANCE
17. INSTALL PROPELLER INTERMEDIATE SHAFT ASSY
18. INSTALL PROPELLER SHAFT ASSY (2 JOINT TYPE)