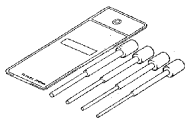


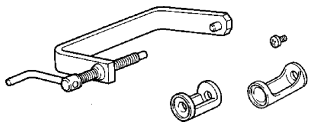








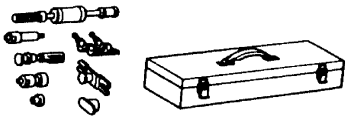






ENGINE MECHANICAL










PREPARATION


023W9–01

SST


	09032–00100	Oil Pan Seal Cutter	PARTIAL ENGINE ASSY(N04C–TF)
	09201–10000	Valve Guide Bushing Remover & Replacer Set	CYLINDER HEAD ASSY(N04C–TF)
	(09201–01050)	Valve Guide Bushing Remover & Replacer 5	CYLINDER HEAD ASSY(N04C–TF)
	(09201–01070)	Valve Guide Bushing Remover & Replacer 7	CYLINDER HEAD ASSY(N04C–TF)
	09202–70020	Valve Spring Compressor	CYLINDER HEAD ASSY(N04C–TF)
	(09202–00030)	Attachment	CYLINDER HEAD ASSY(N04C–TF)
	09215–00013	Crankshaft Bearing Remover & Replacer Set B	CYLINDER BLOCK ASSY(N04C–TF)
	(09215–00021)	Gate ”B”	CYLINDER BLOCK ASSY(N04C–TF)
	(09215–00461)	Camshaft Bearing Remover & Replacer	CYLINDER BLOCK ASSY(N04C–TF)
	09215–00101	Camshaft Bearing Remover & Replacer Set A	CYLINDER BLOCK ASSY(N04C–TF)
	(09215–00130)	Bolt	CYLINDER BLOCK ASSY(N04C–TF)
	(09215–00141)	Nut	CYLINDER BLOCK ASSY(N04C–TF)

	(09215–00150)	Shaft A	CYLINDER BLOCK ASSY(N04C–TF)
	(09215–00161)	Pin	CYLINDER BLOCK ASSY(N04C–TF)
	09223–78010	Crankshaft Oil Seal Replacer	PARTIAL ENGINE ASSY(N04C–TF)
	09260–69015	Injection Nozzle Seat Tool Set	CYLINDER HEAD ASSY(N04C–TF)
	09910–00015	Puller Set	PARTIAL ENGINE ASSY(N04C–TF)
	(09911–00011)	Puller Clamp	PARTIAL ENGINE ASSY(N04C–TF)
	(09912–00010)	Puller Slide Hammer	PARTIAL ENGINE ASSY(N04C–TF)
	(09913–00010)	Main Drive Gear Puller Attachment (J)	PARTIAL ENGINE ASSY(N04C–TF)
	09950–40011	Puller B Set	PARTIAL ENGINE ASSY(N04C–TF)
	(09951–04010)	Hanger 150	PARTIAL ENGINE ASSY(N04C–TF)
	(09952–04010)	Slide Arm	PARTIAL ENGINE ASSY(N04C–TF)
	(09953–04020)	Center Bolt 150	PARTIAL ENGINE ASSY(N04C–TF)
	(09954–04010)	Arm 25	PARTIAL ENGINE ASSY(N04C–TF)

	(09955–04051)	Claw No.5	PARTIAL ENGINE ASSY(N04C–TF)
	09950–60010	Replacer Set	CYLINDER HEAD ASSY(N04C–TF)
	(09951–00300)	Replacer 30	CYLINDER HEAD ASSY(N04C–TF)
	(09951–00360)	Replacer 36	CYLINDER HEAD ASSY(N04C–TF)
	(09952–06010)	Adapter	CYLINDER HEAD ASSY(N04C–TF)
	09950–70010	Handle Set	CYLINDER HEAD ASSY(N04C–TF)
	(09951–07100)	Handle 100	CYLINDER HEAD ASSY(N04C–TF)
	S0940–21450	Press Sub–Assembly	CYLINDER BLOCK ASSY(N04C–TF)
	S0940–21470	Spindle	CYLINDER BLOCK ASSY(N04C–TF)
	S0942–01460	Cylinder Liner Puller	CYLINDER BLOCK ASSY(N04C–TF)
	S0947–22210	Bar	CYLINDER HEAD ASSY(N04C–TF)
	S0948–11130	Guide	CYLINDER BLOCK ASSY(N04C–TF)
	S0948–11140	Guide	CYLINDER BLOCK ASSY(N04C–TF)

	S9191–08252	Bolt	CYLINDER BLOCK ASSY(N04C–TF)
	S9233–10360	Wing Nut	CYLINDER BLOCK ASSY(N04C–TF)

Recomended Tools

	09090–04020	Engine Sling Device	PARTIAL ENGINE ASSY(N04C–TF)
	09200–00010	Engine Adjust Kit	PARTIAL ENGINE ASSY(N04C–TF)

Equipment

Abrasive compound	Valve
Air gun	
Brush	Piston
Caliper gauge	
Carbide cutter (30°)	Valve seat
Carbide cutter (45°)	Valve seat
Cylinder gauge	
Dial indicator	
Heater	
Magnetic finger	
Micrometer	
Piston ring compressor	
Piston ring expander	
Precision straight edge	
Press	
Snap ring pliers	Piston pin
Soft brush	Cylinder head Cylinder block
Spring tester	Valve spring
Steel square	Valve spring
Torch	
Torque wrench	
Vernier caliper	
Valve seat cutter	
Valve guide bushing brush	
V–block	
Wire	
Wooden block	

SSM

	08826–00080	Seal Packing Black or equivalent (FIPG)	PARTIAL ENGINE ASSY(N04C–TF) CYLINDER HEAD ASSY(N04C–TF)