


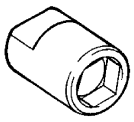




STARTING & CHARGING

PREPARATION







023VW–01




SST

	09285–76010	Injection Pump Camshaft Bearing Cone Replacer	CHARGING SYSTEM(N04C–TF)
	09710–02021	Handle	STARTER ASSY(N04C–TF)
	09820–00021	Alternator Rear Bearing Puller	CHARGING SYSTEM(N04C–TF)
	09820–00031	Alternator Rotor Rear Bearing Replacer	CHARGING SYSTEM(N04C–TF)
	09820–63010	Alternator Pulley Set Nut Wrench Set	CHARGING SYSTEM(N04C–TF)
	(09820–06010)	Alternator Rotor Shaft Wrench	CHARGING SYSTEM(N04C–TF)
	(09820–06020)	Alternator Pulley Set Nut 22 mm Wrench	CHARGING SYSTEM(N04C–TF)
	09950–00020	Bearing Remover	STARTER ASSY(N04C–TF)
	09950–60010	Replacer Set	STARTER ASSY(N04C–TF) CHARGING SYSTEM(N04C–TF)
	(09951–00250)	Replacer 25	STARTER ASSY(N04C–TF)
	(09951–00260)	Replacer 26	STARTER ASSY(N04C–TF)
	(09951–00270)	Replacer 27	CHARGING SYSTEM(N04C–TF)

	(09951–00280)	Replacer 28	STARTER ASSY(N04C–TF)
	(09951–00300)	Replacer 30	STARTER ASSY(N04C–TF)
	(09951–00310)	Replacer 31	STARTER ASSY(N04C–TF)
	(09951–00500)	Replacer 50	CHARGING SYSTEM(N04C–TF)
	(09952–06010)	Adapter	STARTER ASSY(N04C–TF)
	09950–70010	Handle Set	STARTER ASSY(N04C–TF) CHARGING SYSTEM(N04C–TF)
	(09951–07100)	Handle 100	STARTER ASSY(N04C–TF) CHARGING SYSTEM(N04C–TF)

Recomended Tools

	09082–00040	TOYOTA Electrical Tester	STARTER ASSY(N04C–TF) CHARGING SYSTEM(N04C–TF)
	(09083–00150)	Test Lead Set	STARTER ASSY(N04C–TF) CHARGING SYSTEM(N04C–TF)
	09904–00010	Expander Set	STARTER ASSY(N04C–TF)
	(09904–00050)	No. 4 Claw	STARTER ASSY(N04C–TF)
	95720–00051	Berling Pullar set	CHARGING SYSTEM(N04C–TF)
	(95720–10030)	Crow A	CHARGING SYSTEM(N04C–TF)

	(95720–10050)	Hanger	CHARGING SYSTEM(N04C–TF)
	(95720–10060)	Lock nut	CHARGING SYSTEM(N04C–TF)
	(95720–10070)	Bushing bolt	CHARGING SYSTEM(N04C–TF)
	(95720–10080)	Pin	CHARGING SYSTEM(N04C–TF)

Equipment

Dial indicator	
Ohmmeter	
Press	
Pull scale	Brush spring
Sandpaper (#400)	Commutator
Soldering iron	
Torque wrench	
Vernier caliper	
Vise	