

STARTER ASSY (N04C–TF)

COMPONENTS

190YR–01

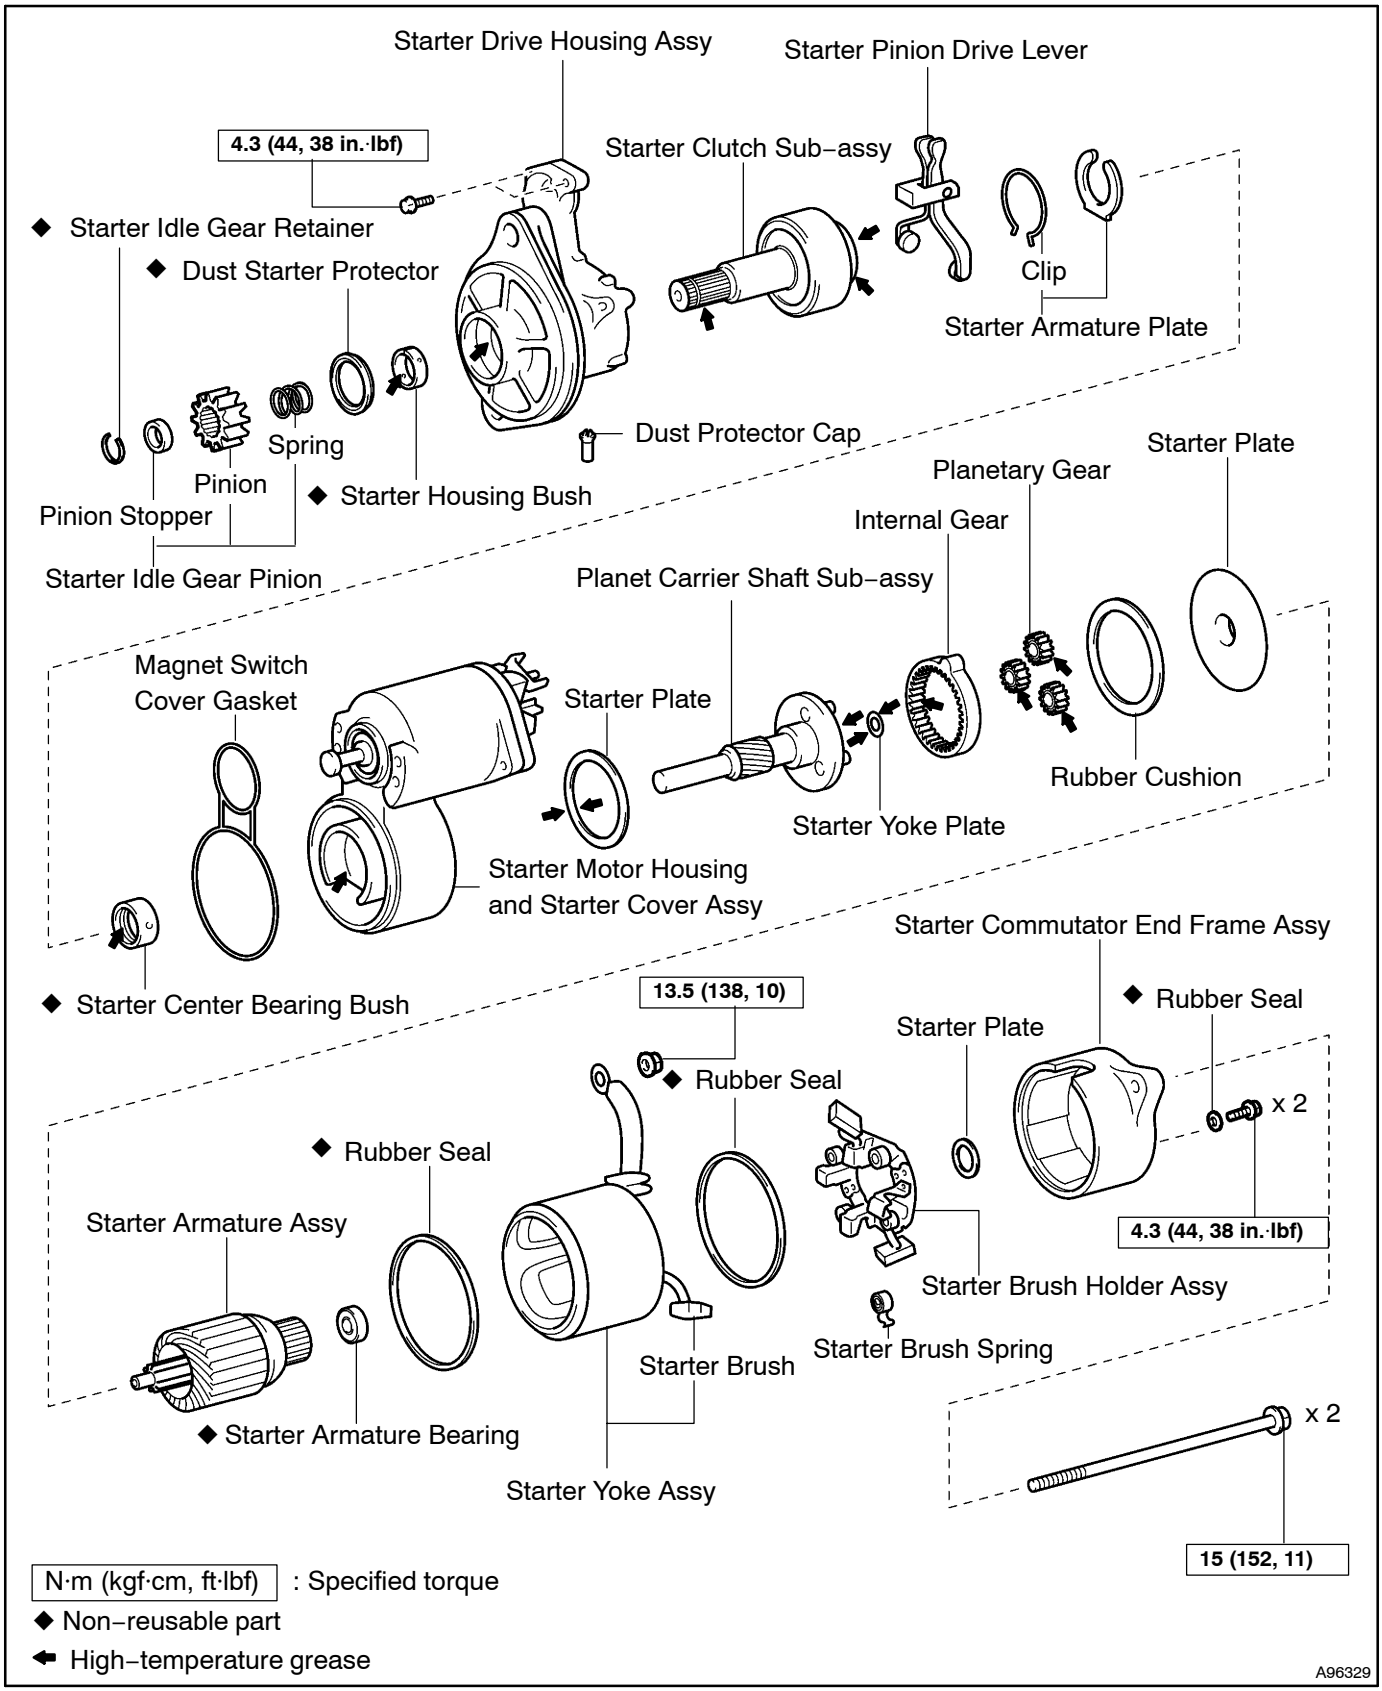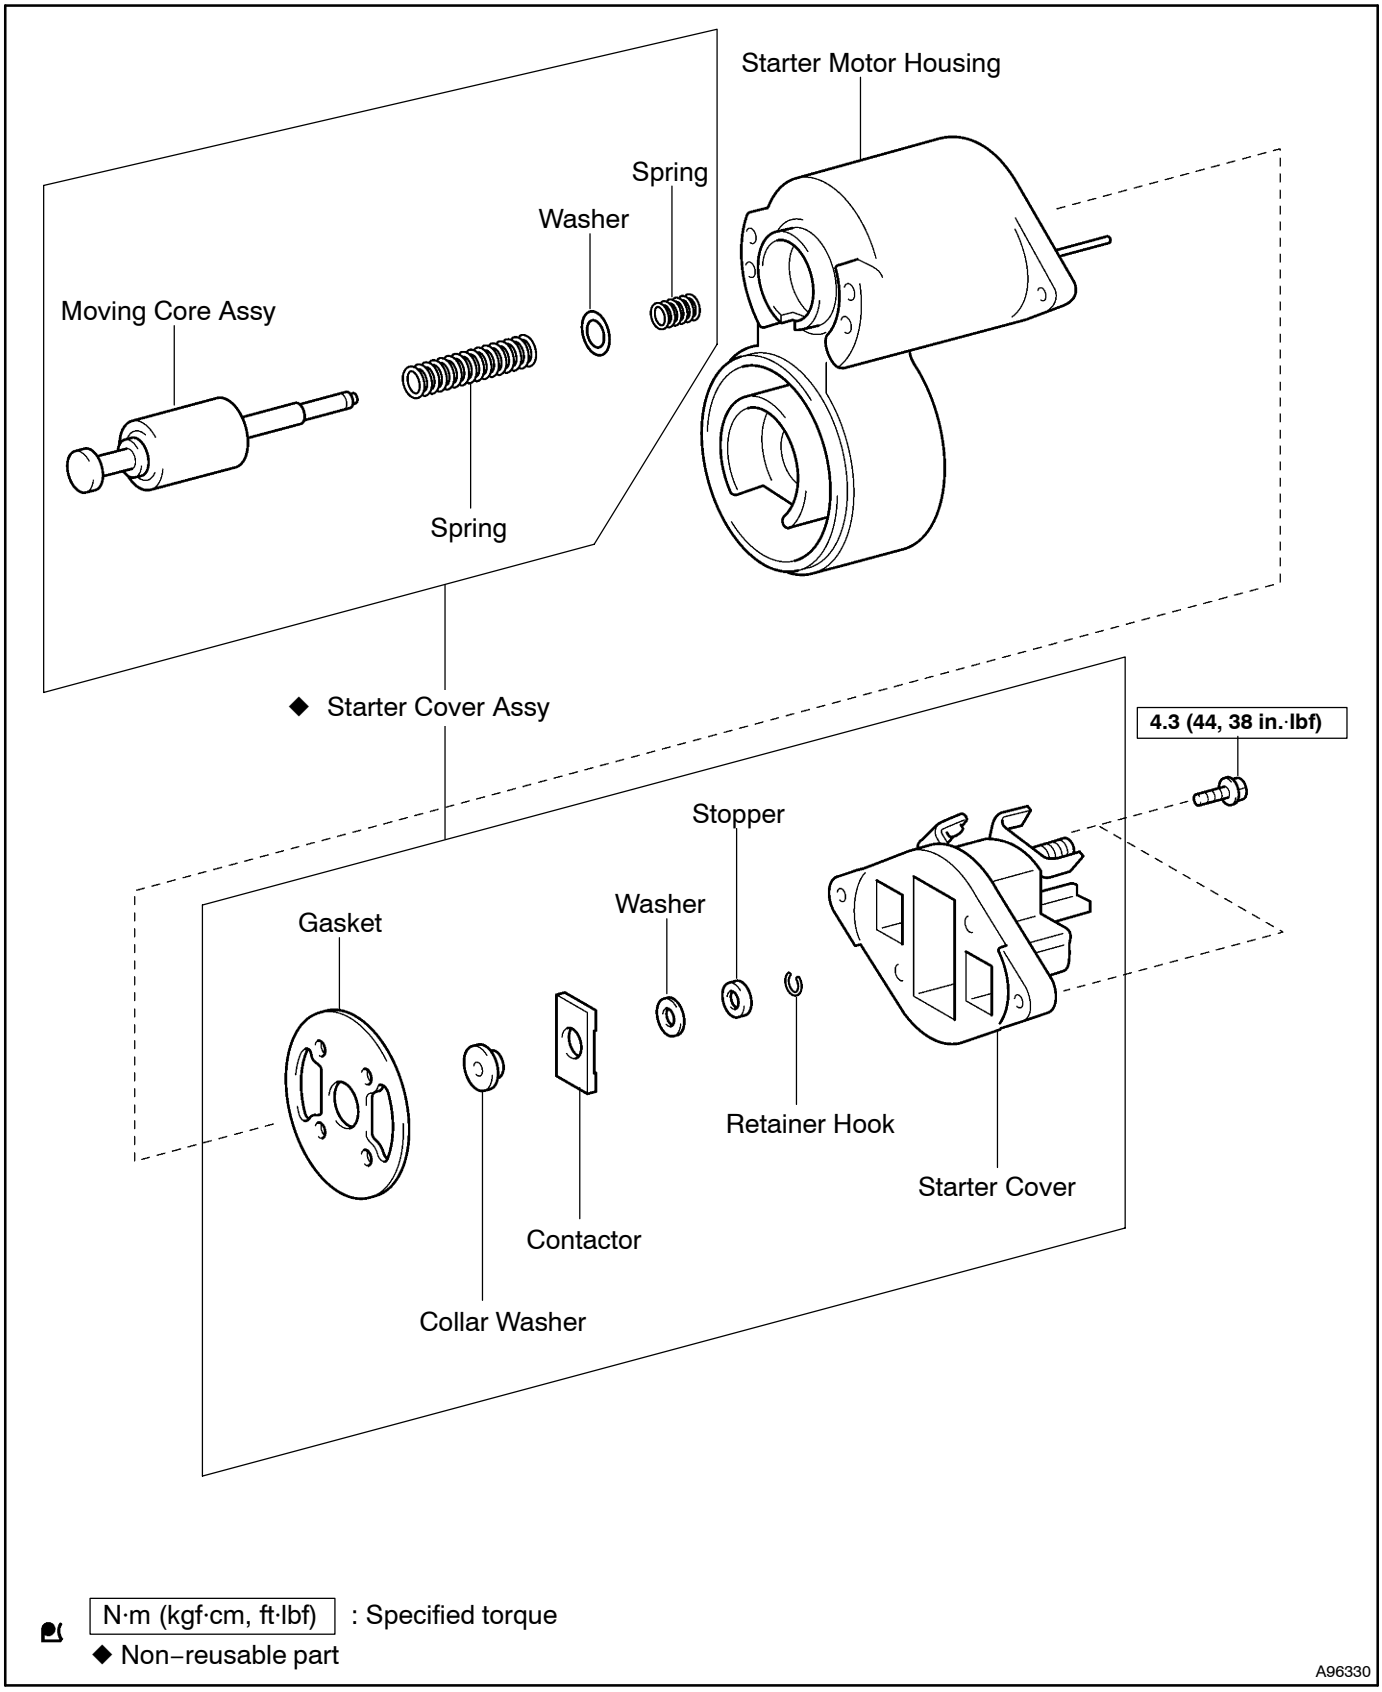


Starter Motor Housing
Spring
Washer
Moving Core Assy
Spring
◆ Starter Cover Assy
4.3 (44, 38 in.·lbf)
Stopper
Washer
Gasket
Retainer Hook
Starter Cover
Contactor
Collar Washer
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A96330