
















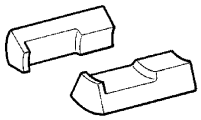





MANUAL TRANSMISSION/TRANSAXLE







0219K–01


PREPARATION

SST








	09316–20011	Transfer Bearing Replacer	MANUAL TRANSMISSION ASSY OUTPUT SHAFT ASSY
	09316–60011	Transmission & Transfer Bearing Replacer	MANUAL TRANSMISSION ASSY OUTPUT SHAFT ASSY COUNTER GEAR ASSY
	(09316–00011)	Replacer Pipe	MANUAL TRANSMISSION ASSY OUTPUT SHAFT ASSY COUNTER GEAR ASSY
	(09316–00021)	Replacer ”A”	MANUAL TRANSMISSION ASSY COUNTER GEAR ASSY
	(09316–00031)	Replacer ”B”	MANUAL TRANSMISSION ASSY
	(09316–00041)	Replacer ”C”	MANUAL TRANSMISSION ASSY
	09527–10011	Rear Axle Shaft Bearing Remover	MANUAL TRANSMISSION ASSY
	09527–20011	Rear Axle Shaft Bearing Remover	OUTPUT SHAFT ASSY
	09555–55010	Differential Drive Pinion Bearing Replacer	OUTPUT SHAFT ASSY
	09608–06041	Front Hub Inner Bearing Cone Replacer	MANUAL TRANSMISSION ASSY
	09817–16011	Back–up Light Switch Tool	MANUAL TRANSMISSION ASSY
	09950–00020	Bearing Remover	MANUAL TRANSMISSION ASSY INPUT SHAFT ASSY COUNTER GEAR ASSY

	09950–00030	Bearing Remover Attachment	MANUAL TRANSMISSION ASSY
	09950–40011	Puller B Set	MANUAL TRANSMISSION ASSY
	(09951–04020)	Hanger 200	MANUAL TRANSMISSION ASSY
	(09952–04010)	Slide Arm	MANUAL TRANSMISSION ASSY
	(09953–04030)	Center Bolt 200	MANUAL TRANSMISSION ASSY
	(09954–04020)	Arm 100	MANUAL TRANSMISSION ASSY
	(09955–04031)	Claw No.3	MANUAL TRANSMISSION ASSY
	(09957–04010)	Attachment	MANUAL TRANSMISSION ASSY
	(09958–04011)	Holder	MANUAL TRANSMISSION ASSY
	09950–50013	Puller C Set	MANUAL TRANSMISSION ASSY
	(09951–05010)	Hanger 150	MANUAL TRANSMISSION ASSY
	(09952–05010)	Slide Arm	MANUAL TRANSMISSION ASSY
	(09953–05020)	Center Bolt 150	MANUAL TRANSMISSION ASSY

	(09954–05040)	Claw No.4	MANUAL TRANSMISSION ASSY
	09950–60010	Replacer Set	MANUAL TRANSMISSION ASSY INPUT SHAFT ASSY COUNTER GEAR ASSY SHIFT LEVER SHAFT HOUSING ASSY
	(09951–00230)	Replacer 23	MANUAL TRANSMISSION ASSY
	(09951–00290)	Replacer 29	COUNTER GEAR ASSY
	(09951–00300)	Replacer 30	MANUAL TRANSMISSION ASSY
	(09951–00310)	Replacer 31	SHIFT LEVER SHAFT HOUSING ASSY
	(09951–00320)	Replacer 32	SHIFT LEVER SHAFT HOUSING ASSY
	(09951–00330)	Replacer 33	MANUAL TRANSMISSION ASSY
	(09951–00480)	Replacer 48	MANUAL TRANSMISSION ASSY
	(09951–00570)	Replacer 57	INPUT SHAFT ASSY
	(09952–06010)	Adapter	MANUAL TRANSMISSION ASSY
	09950–60020	Replacer Set No.2	MANUAL TRANSMISSION ASSY
	(09951–00750)	Replacer 75	MANUAL TRANSMISSION ASSY

	09950–70010	Handle Set	MANUAL TRANSMISSION ASSY INPUT SHAFT ASSY COUNTER GEAR ASSY SHIFT LEVER SHAFT HOUSING ASSY
	(09951–07100)	Handle 100	MANUAL TRANSMISSION ASSY INPUT SHAFT ASSY COUNTER GEAR ASSY SHIFT LEVER SHAFT HOUSING ASSY

Recomended Tools

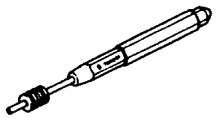	09031–00040	Pin Punch .	MANUAL TRANSMISSION ASSY SHIFT LEVER SHAFT HOUSING ASSY
	09040–00011	Hexagon Wrench Set	SHIFT LEVER SHAFT HOUSING ASSY
	(09043–20120)	Socket Hexagon Wrench 12	SHIFT LEVER SHAFT HOUSING ASSY
	09042–00010	Torx Socket T30	MANUAL TRANSMISSION ASSY
	09042–00020	Torx Socket T40	MANUAL TRANSMISSION ASSY
	09905–00012	Snap Ring No.1 Expander	MANUAL TRANSMISSION ASSY INPUT SHAFT ASSY OUTPUT SHAFT ASSY COUNTER GEAR ASSY
	09905–00013	Snap Ring Pliers	INPUT SHAFT ASSY

Equipment

Aluminum plate	
Caliper gauge	
Cylinder gauge	
Dial indicator or dial indicator with magnetic base	
Feeler gauge	
Magnetic finger	
Micrometer	
Plastic hammer	
Press	
Torque wrench	
Vernier calipers	
Wooden block	

Lubricant

Manual transmission oil	4.2 liters (4.4 US qts, 3.7 Imp. qts)	APL GL–4 or GL–5 SAE 75W–90

SSM (Special Service Materials)

08826–00090	"Seal Packing 1281," THREE BOND 1281 or equivalent (FIPG)	
08833–00080	Adhesive 1344 THREE BOND 1344 LOCTITE 242 or equivalent	