


MANUAL TRANSMISSION ASSY


COMPONENTS

4106U–01

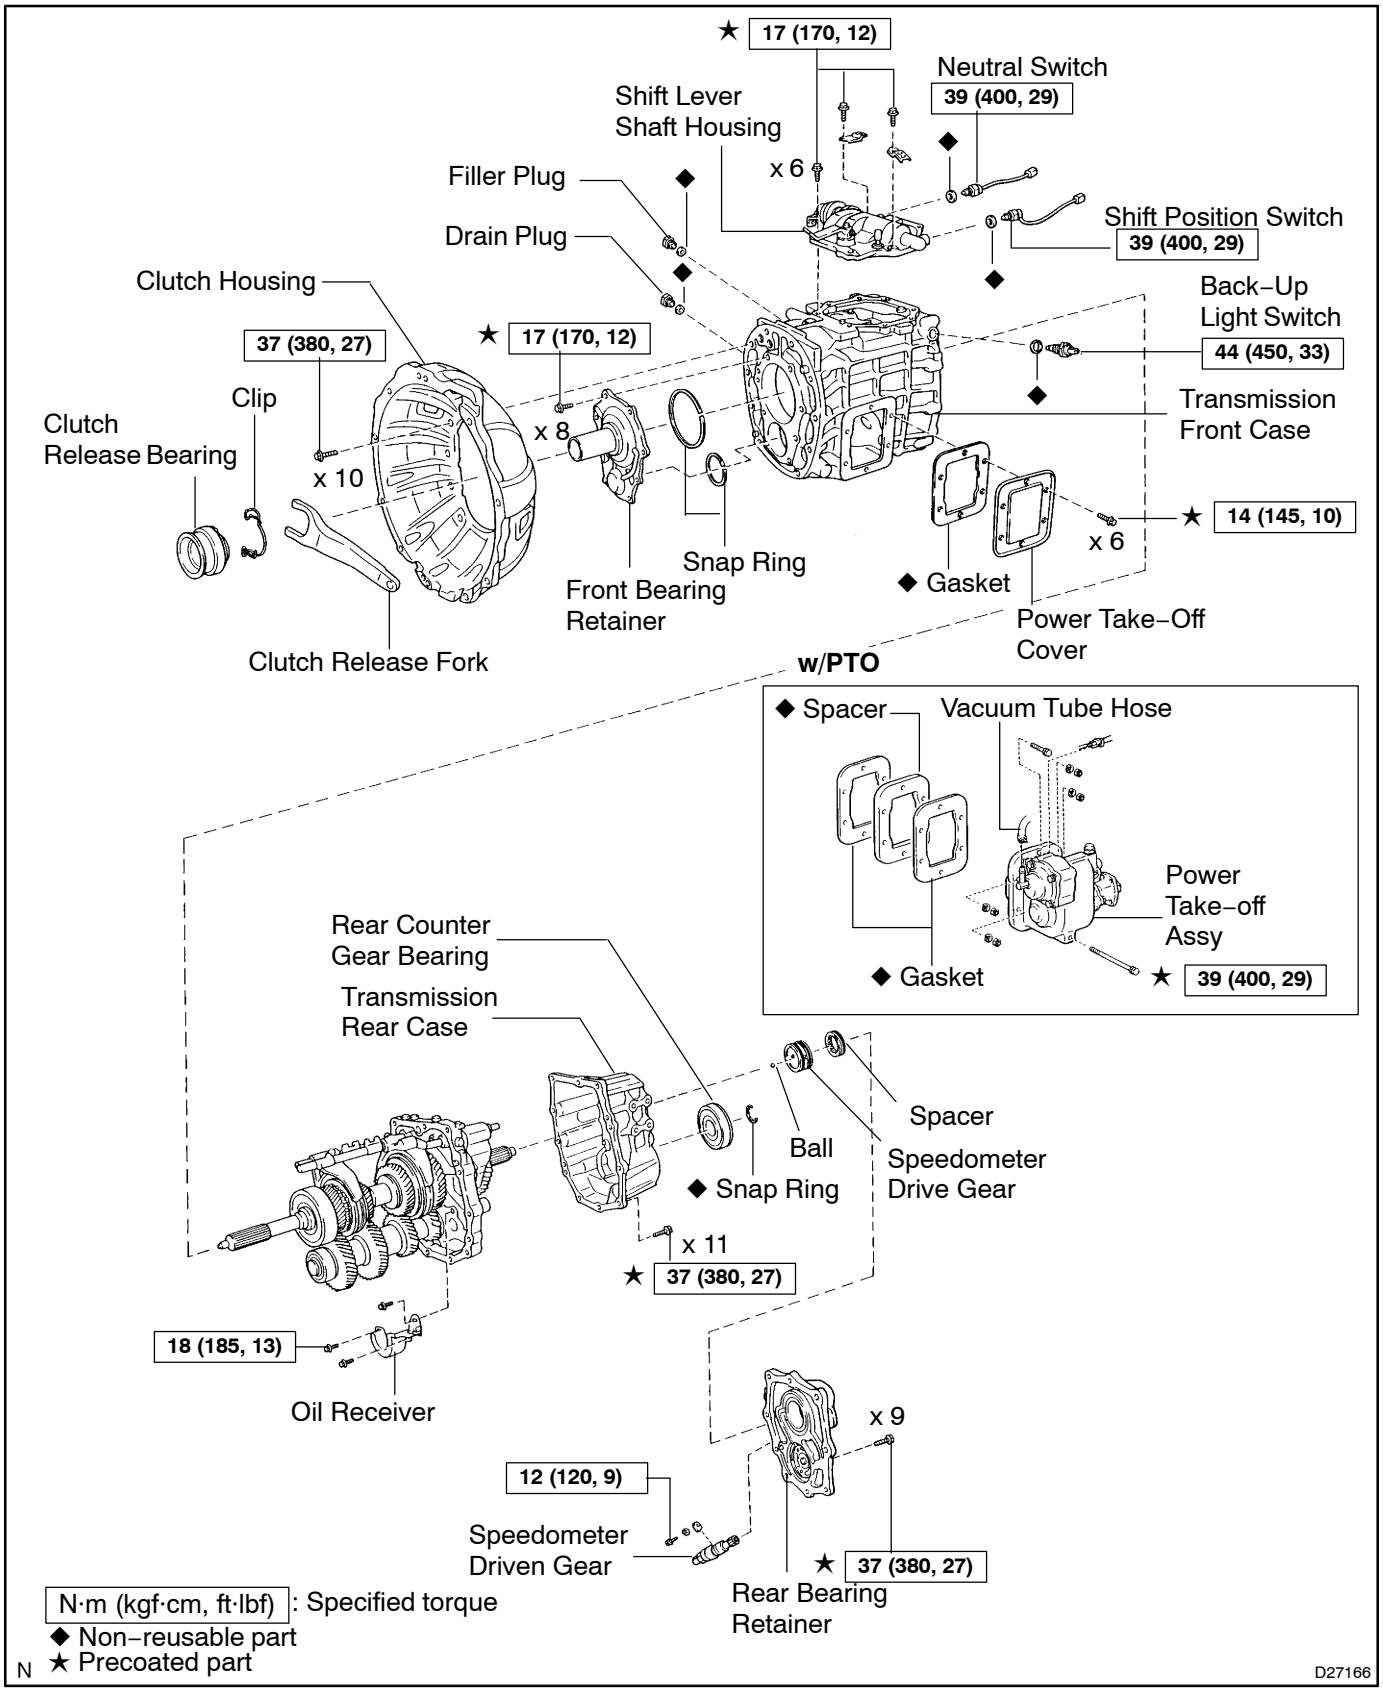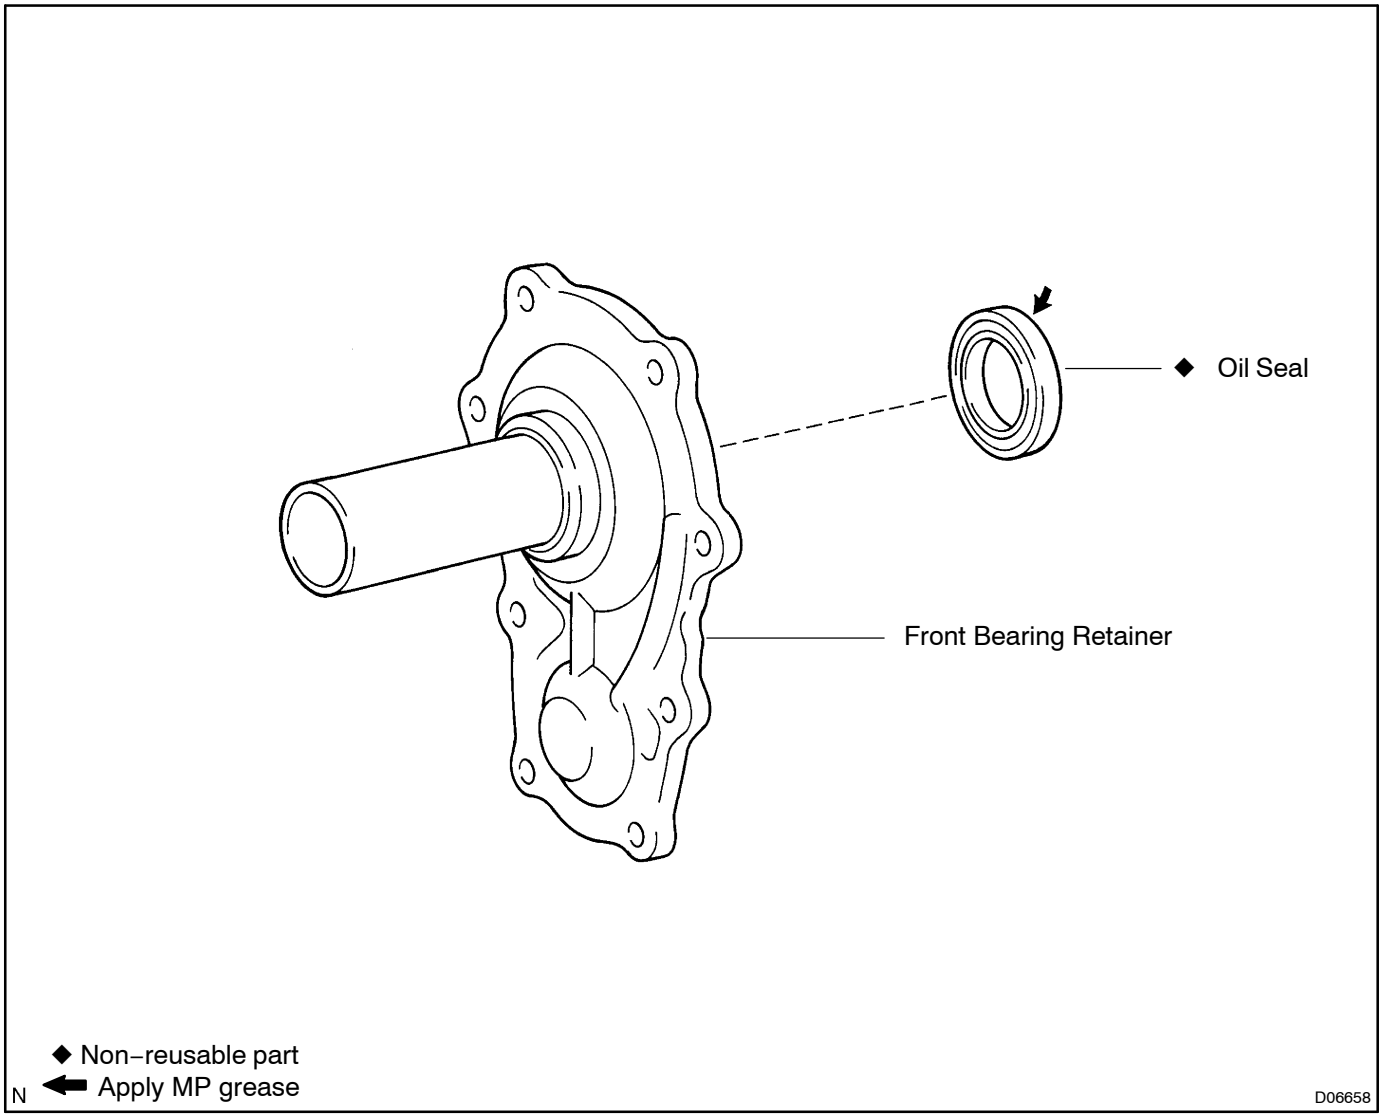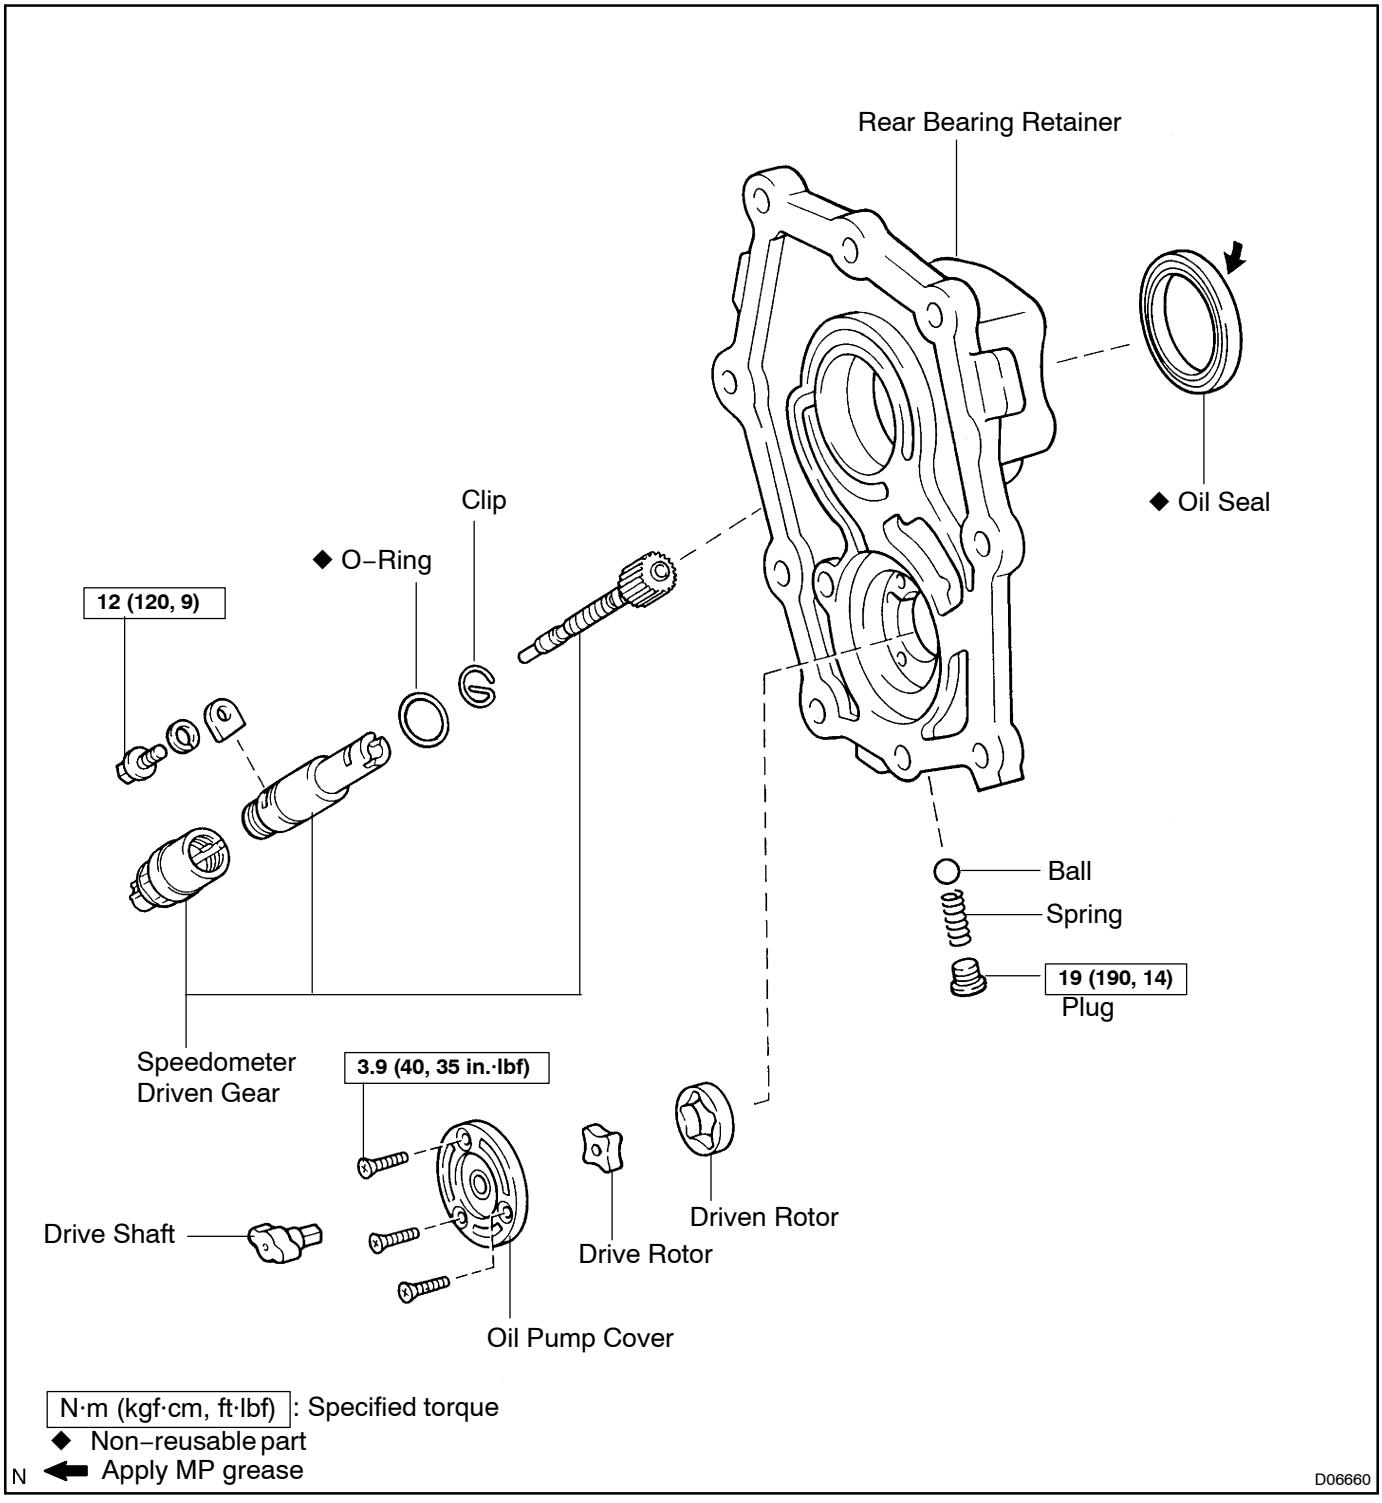


◆ Oil Seal
Front Bearing Retainer
◆ Non−reusable part
N Apply MP grease
D06658


Rear Bearing Retainer
◆ Oil Seal
Clip
◆ O–Ring
12 (120, 9)
Ball
Spring
19 (190, 14)
Plug
Speedometer
Driven Gear
3.9 (40, 35 in.·lbf)
Drive Shaft
Drive Rotor
Driven Rotor
Oil Pump Cover
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
N Apply MP grease
D06660

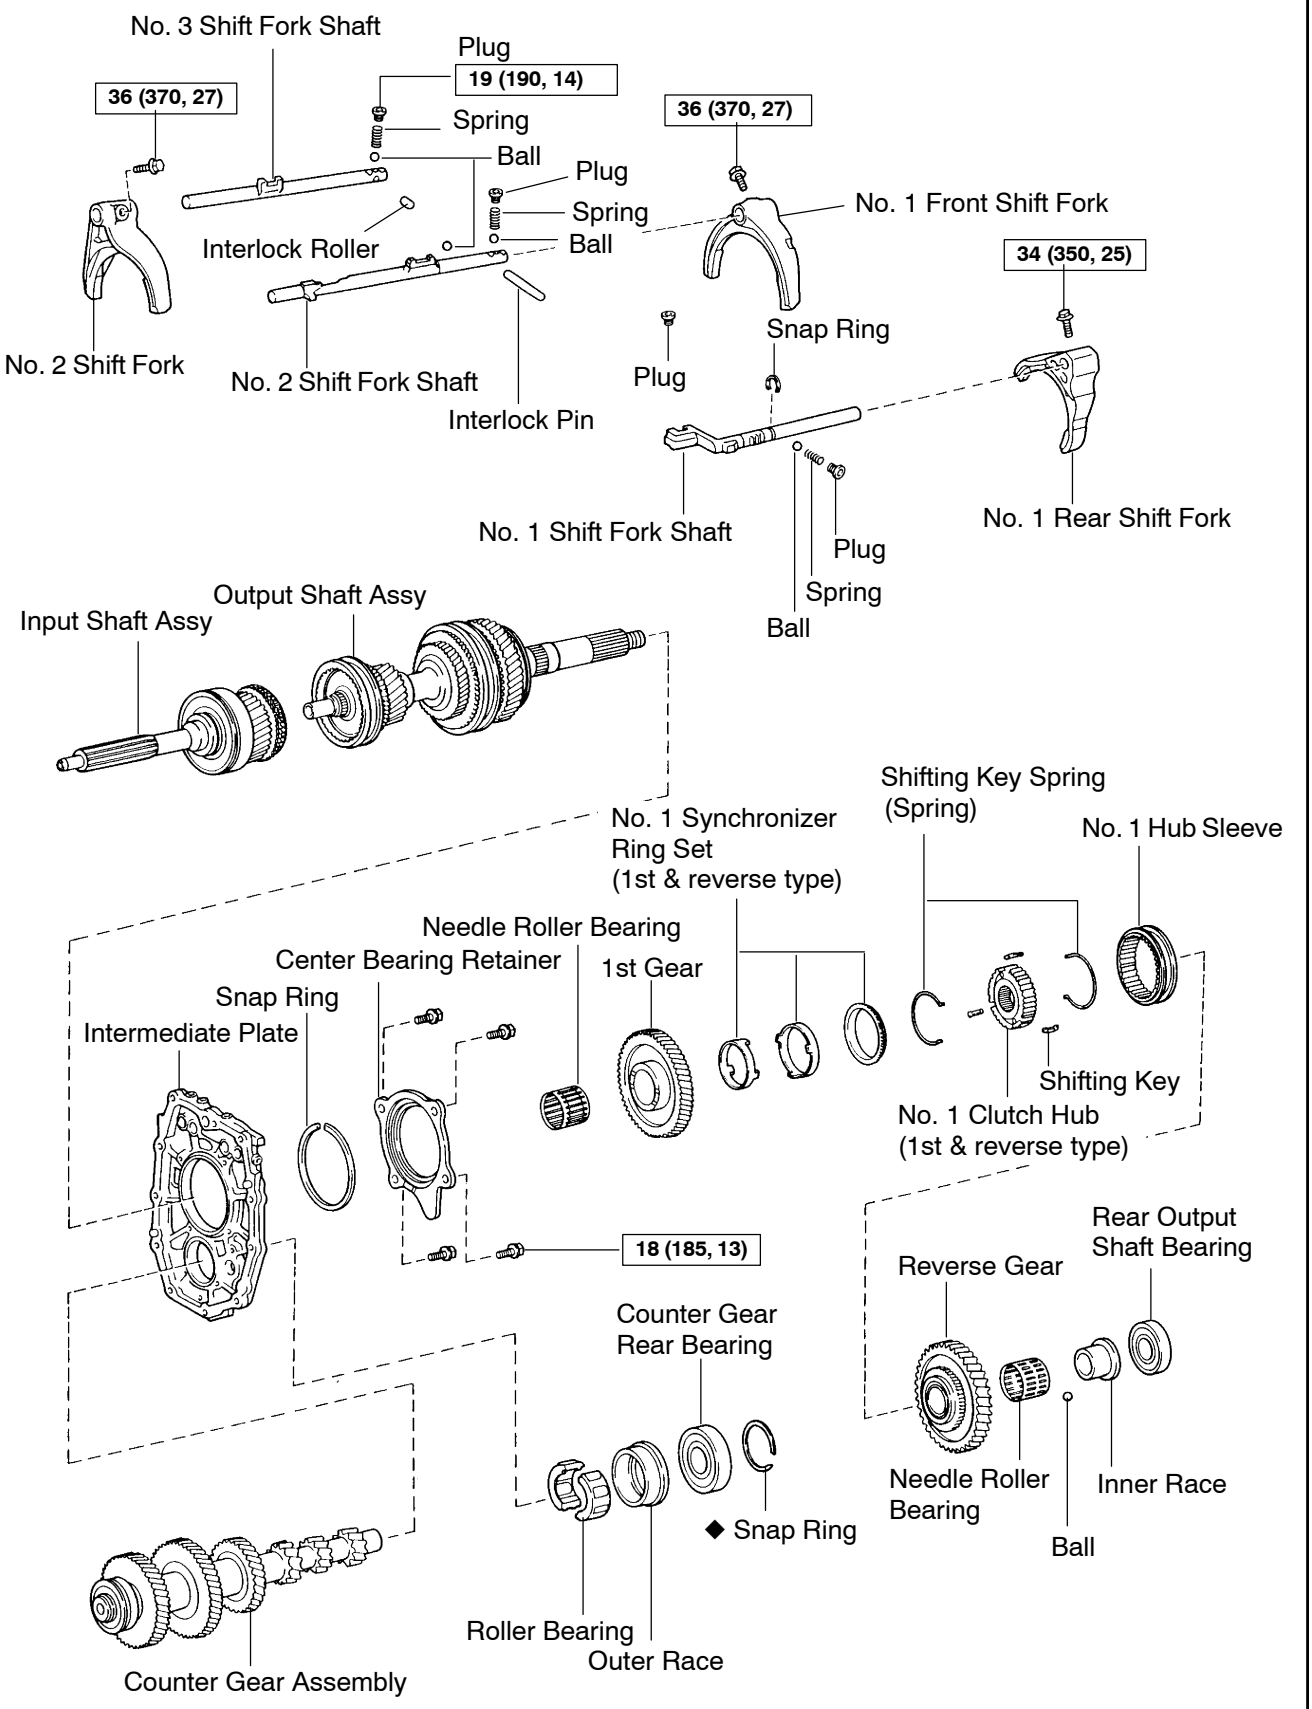

N·m (kgf·cm, ft·lbf) : Specified torque

N ◆Non–reusable part

D07293