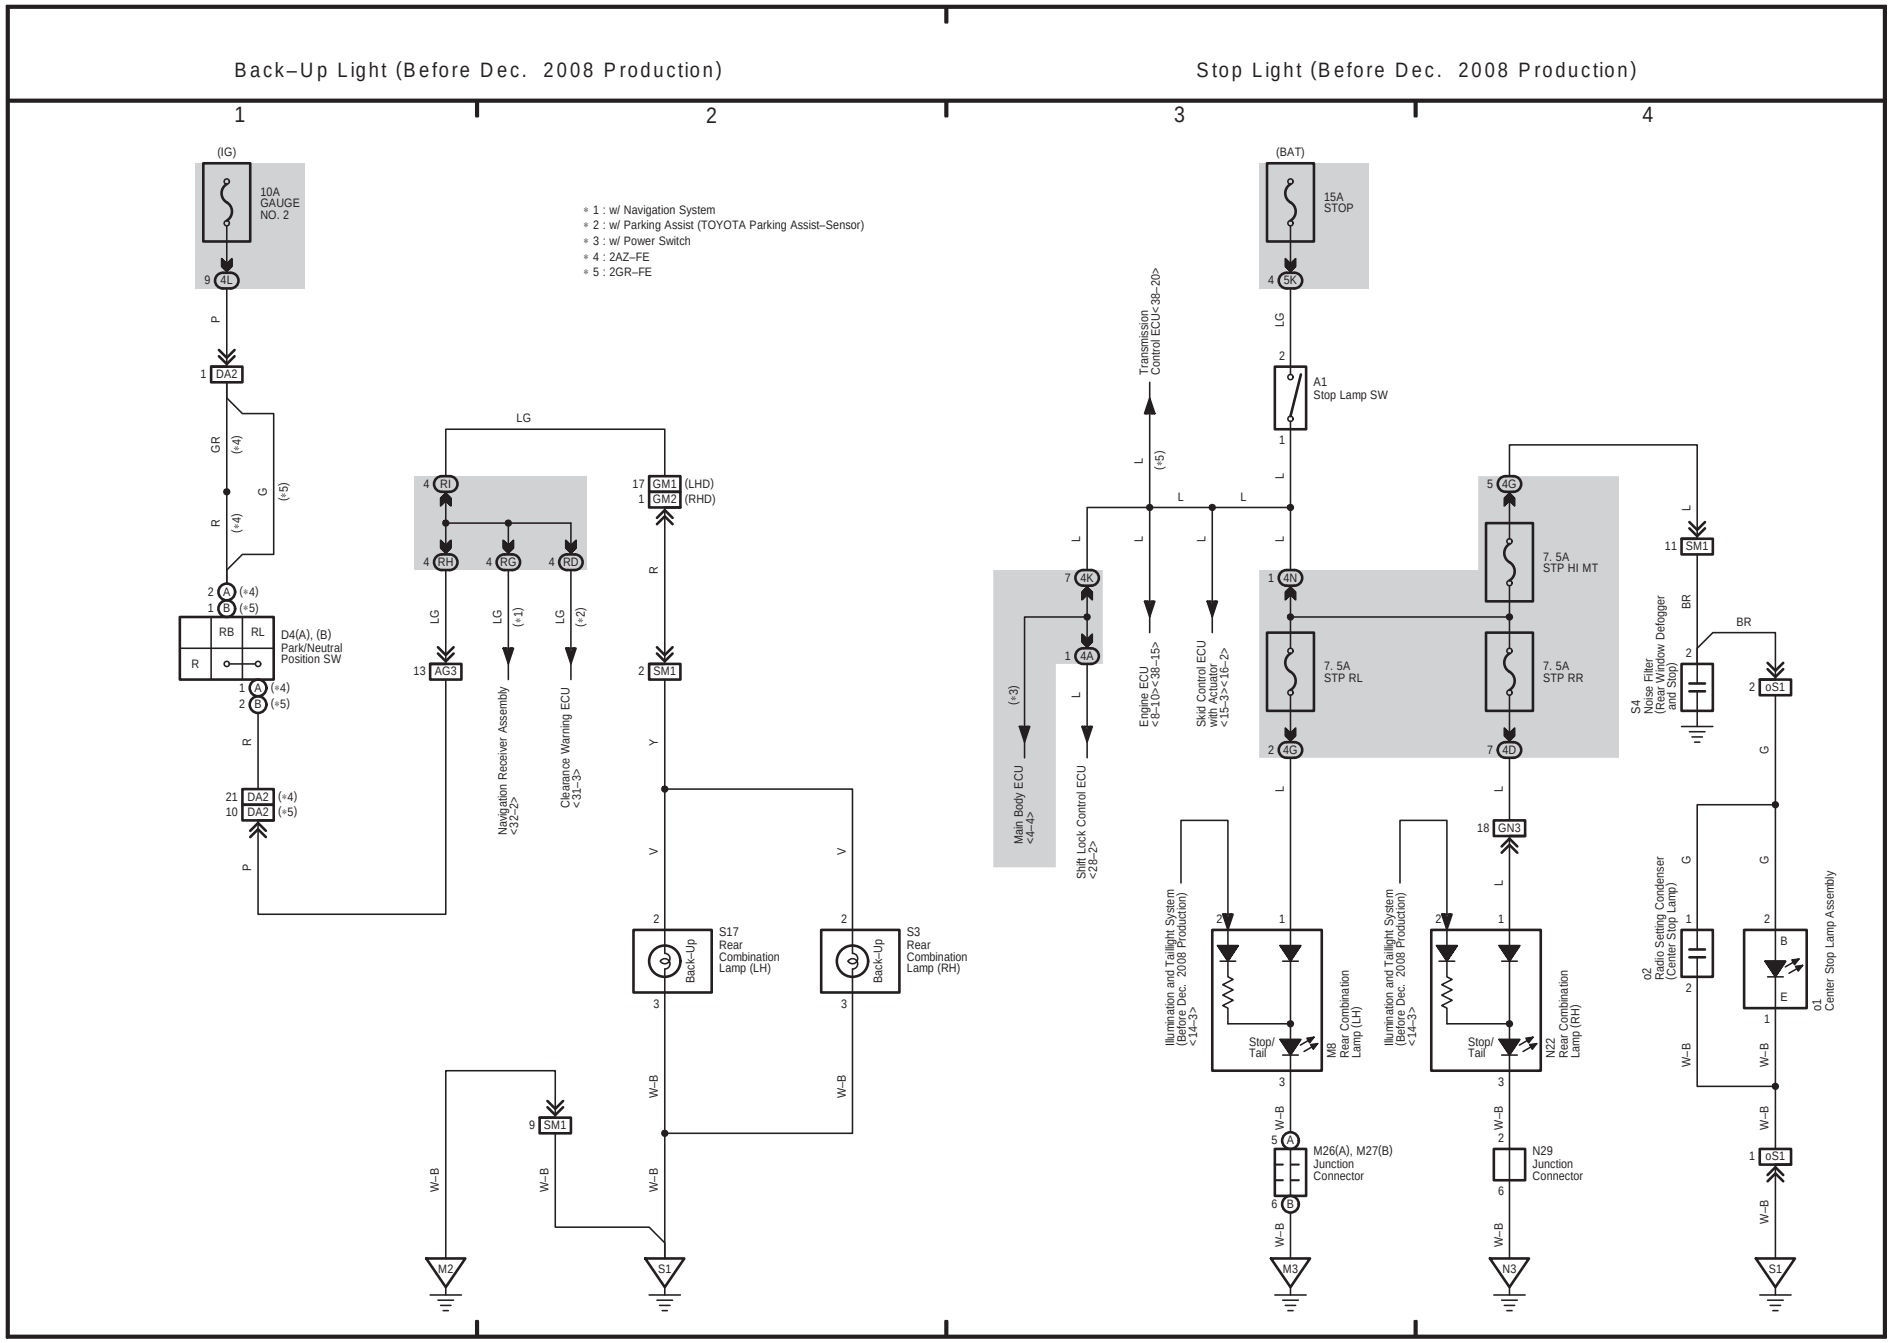

Back–Up Light (Before Dec. 2008 Production)
Stop Light (Before Dec. 2008 Production)
1
2
3
4
* 1 : w/ Navigation System
* 2 : w/ Parking Assist (TOYOTA Parking Assist–Sensor)
* 3 : w/ Power Switch
* 4 : 2AZ–FE
* 5 : 2GR–FE
(IG)
10A GAUGE NO. 2
9 4L
P
1 DA2
GR (*4)
R (*4)
G (*5)
2 A (*4)
1 B (*5)
RB RL
R
D4(A), (B) Park/Neutral Position SW
1 A (*4)
2 B (*5)
R
21 DA2 (*4)
10 DA2 (*5)
P
LG
4 RI
4 RH
4 RG
4 RD
LG
LG (*1)
LG (*2)
13 AG3
Navigation Receiver Assembly <32–2>
Clearance Warning ECU <31–3>
17 GM1 (LHD)
1 GM2 (RHD)
R
2 SM1
Y
V
V
2
S17 Rear Combination Lamp (LH)
Back–Up
3
2
S3 Rear Combination Lamp (RH)
Back–Up
3
W–B
W–B
9 SM1
W–B
W–B
W–B
M2
S1
(BAT)
15A STOP
4 5K
LG
2
A1 Stop Lamp SW
1
L
Transmission Control ECU <38–20>
(*5)
L
L
L
L
L
L
7 4K
1 4A
(*3)
L
Main Body ECU <4–4>
Shift Lock Control ECU <28–2>
Engine ECU <8–10><38–15>
Skid Control ECU with Actuator <15–3><16–2>
1 4N
2 4G
5 4G
7. 5A STP HI MT
7. 5A STP RL
7. 5A STP RR
7 4D
L
18 GN3
L
11 SM1
BR
BR
2
S4 Noise Filter (Rear Window Defogger and Stop)
2 oS1
G
G
G
2
1
o2 Radio Setting Condenser (Center Stop Lamp)
2
W–B
W–B
W–B
W–B
1 oS1
W–B
1
o1 Center Stop Lamp Assembly
B
E
2
Illumination and Taillight System (Before Dec. 2008 Production) <14–3>
2
1
Stop/ Tail
M8 Rear Combination Lamp (LH)
3
W–B
5 A
M26(A), M27(B) Junction Connector
6 B
W–B
M3
Illumination and Taillight System (Before Dec. 2008 Production) <14–3>
2
1
Stop/ Tail
N22 Rear Combination Lamp (RH)
3
W–B
2
N29 Junction Connector
6
W–B
N3
S1