

(Cont. next page)

Power Slide Door

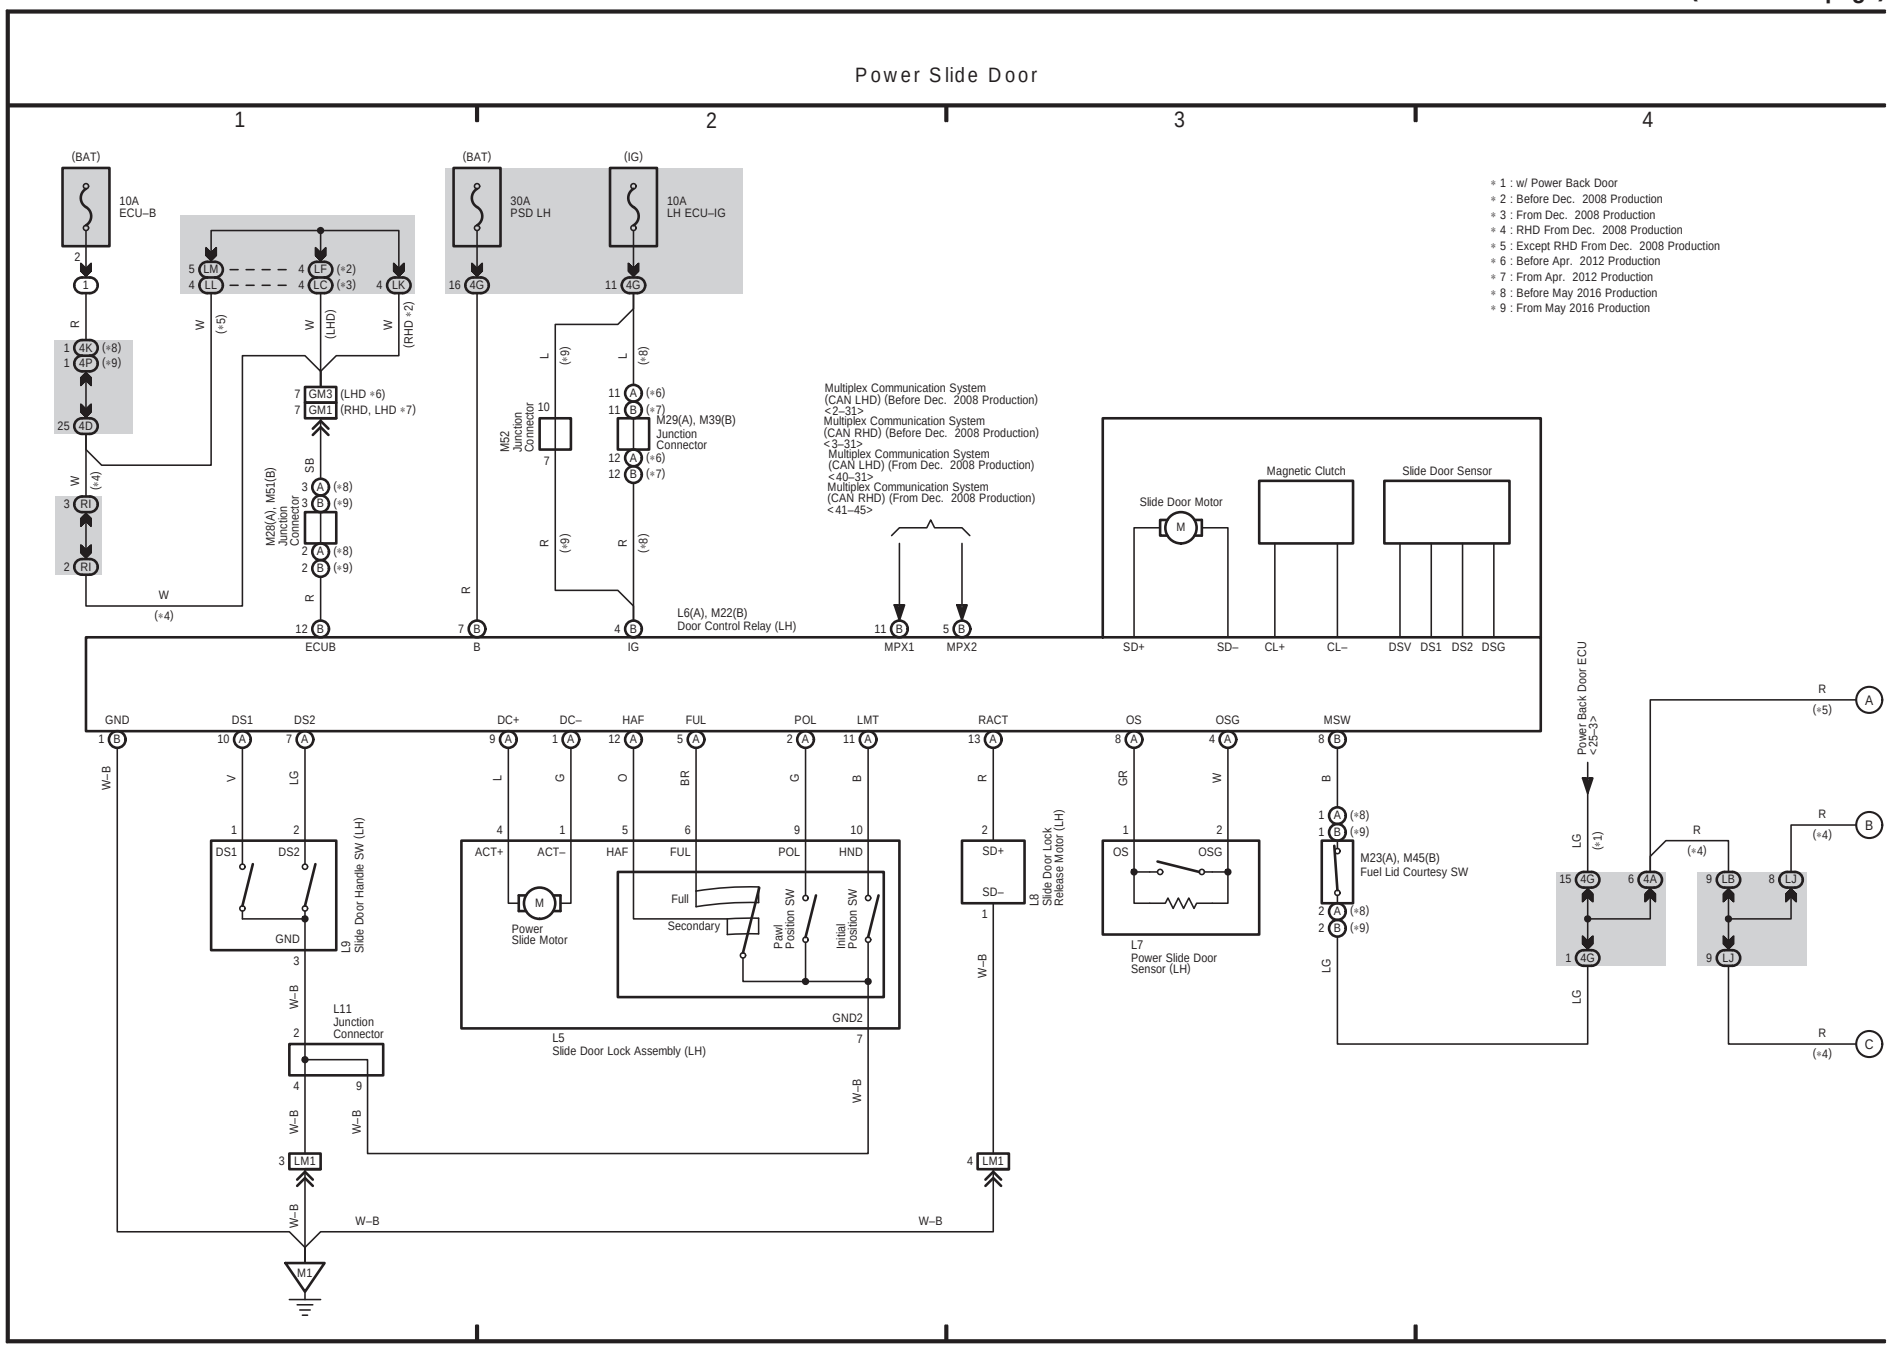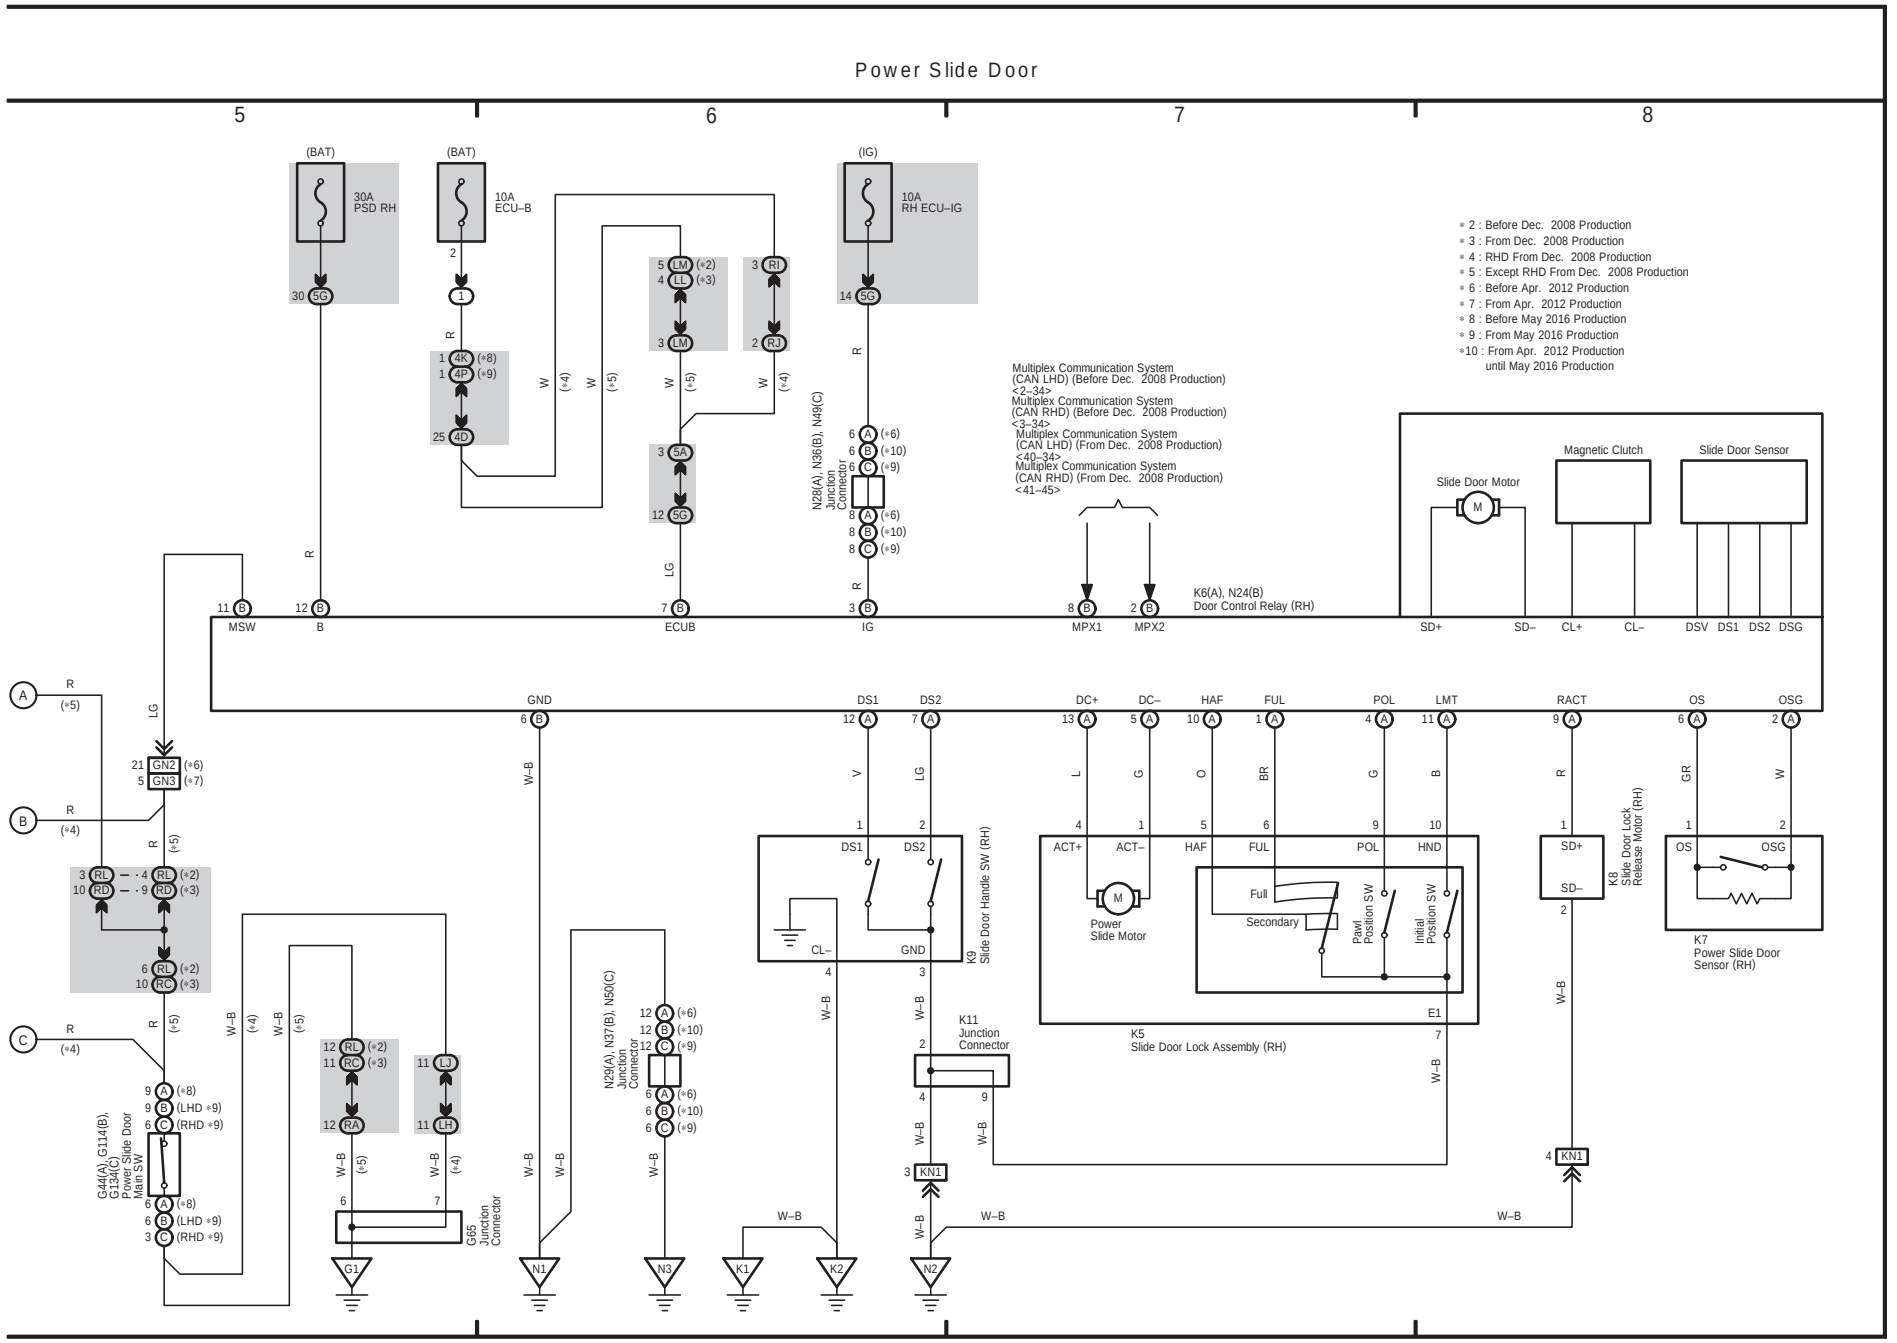


Power Slide Door
5
6
7
8
(BAT)
30A
PSD RH
(BAT)
10A
ECU–B
(IG)
10A
RH ECU–IG
∗ 2 : Before Dec. 2008 Production
∗ 3 : From Dec. 2008 Production
∗ 4 : RHD From Dec. 2008 Production
∗ 5 : Except RHD From Dec. 2008 Production
∗ 6 : Before Apr. 2012 Production
∗ 7 : From Apr. 2012 Production
∗ 8 : Before May 2016 Production
∗ 9 : From May 2016 Production
∗10 : From Apr. 2012 Production
until May 2016 Production
Multiplex Communication System
(CAN LHD) (Before Dec. 2008 Production)
<2–34>
Multiplex Communication System
(CAN RHD) (Before Dec. 2008 Production)
<3–34>
Multiplex Communication System
(CAN LHD) (From Dec. 2008 Production)
<40–34>
Multiplex Communication System
(CAN RHD) (From Dec. 2008 Production)
<41–45>
N28(A), N36(B), N49(C)
Junction
Connector
K6(A), N24(B)
Door Control Relay (RH)
Slide Door Motor
Magnetic Clutch
Slide Door Sensor
MSW
B
ECUB
IG
MPX1
MPX2
SD+
SD–
CL+
CL–
DSV
DS1
DS2
DSG
GND
DS1
DS2
DC+
DC–
HAF
FUL
POL
LMT
RACT
OS
OSG
K9
Slide Door Handle SW (RH)
ACT+
ACT–
HAF
FUL
POL
HND
Power
Slide Motor
Full
Secondary
Pawl
Position SW
Initial
Position SW
K5
Slide Door Lock Assembly (RH)
K8
Slide Door Lock
Release Motor (RH)
K7
Power Slide Door
Sensor (RH)
K11
Junction
Connector
G44(A), G114(B),
G134(C)
Power Slide Door
Main SW
(LHD ∗9)
(RHD ∗9)
G65
Junction
Connector
N29(A), N37(B), N50(C)
Junction
Connector
G1
N1
N3
K1
K2
N2
KN1
W–B
R
LG
V
L
G
O
BR
B
GR
W