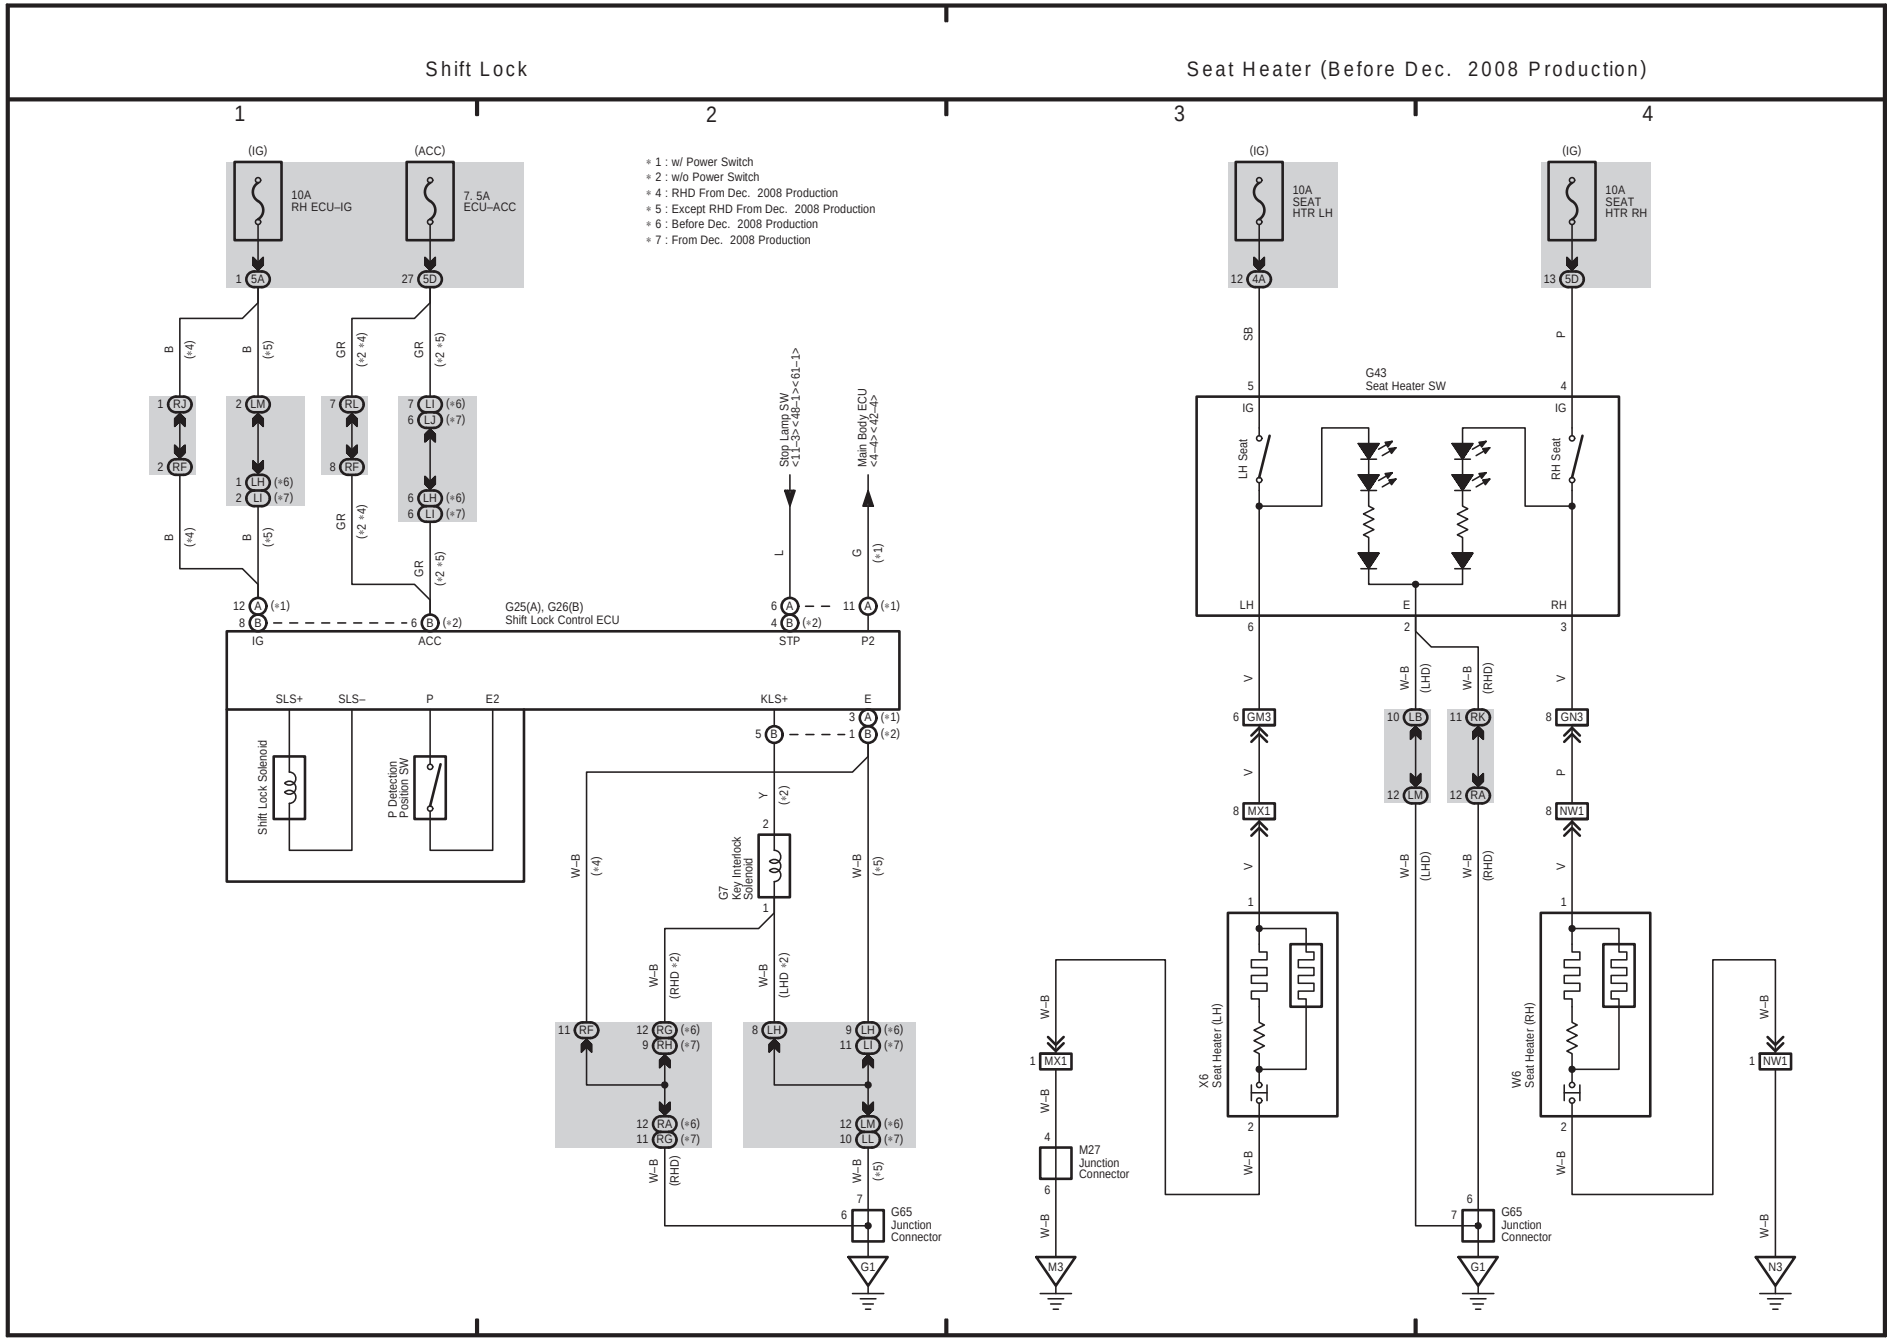

Shift Lock
Seat Heater (Before Dec. 2008 Production)
1
2
3
4
* 1 : w/ Power Switch
* 2 : w/o Power Switch
* 4 : RHD From Dec. 2008 Production
* 5 : Except RHD From Dec. 2008 Production
* 6 : Before Dec. 2008 Production
* 7 : From Dec. 2008 Production
(IG)
(ACC)
10A
RH ECU–IG
7. 5A
ECU–ACC
Stop Lamp SW
<11–3><48–1><61–1>
Main Body ECU
<4–4><42–4>
G25(A), G26(B)
Shift Lock Control ECU
IG
ACC
STP
P2
SLS+
SLS–
P
E2
KLS+
E
Shift Lock Solenoid
P Detection
Position SW
G7
Key Interlock
Solenoid
G65
Junction
Connector
G1
10A
SEAT
HTR LH
10A
SEAT
HTR RH
G43
Seat Heater SW
LH Seat
RH Seat
LH
E
RH
GM3
MX1
GN3
NW1
LB
LM
RK
RA
X6
Seat Heater (LH)
W6
Seat Heater (RH)
M27
Junction
Connector
M3
N3