

(Cont. next page)

Engine Immobiliser System (RHD w/ Power Switch), Smart Entry & Start System (RHD), Starting (RHD w/ Power Switch), Steering Lock (RHD w/ Power Switch) and Wireless Door Lock Control (RHD w/ Power Switch)

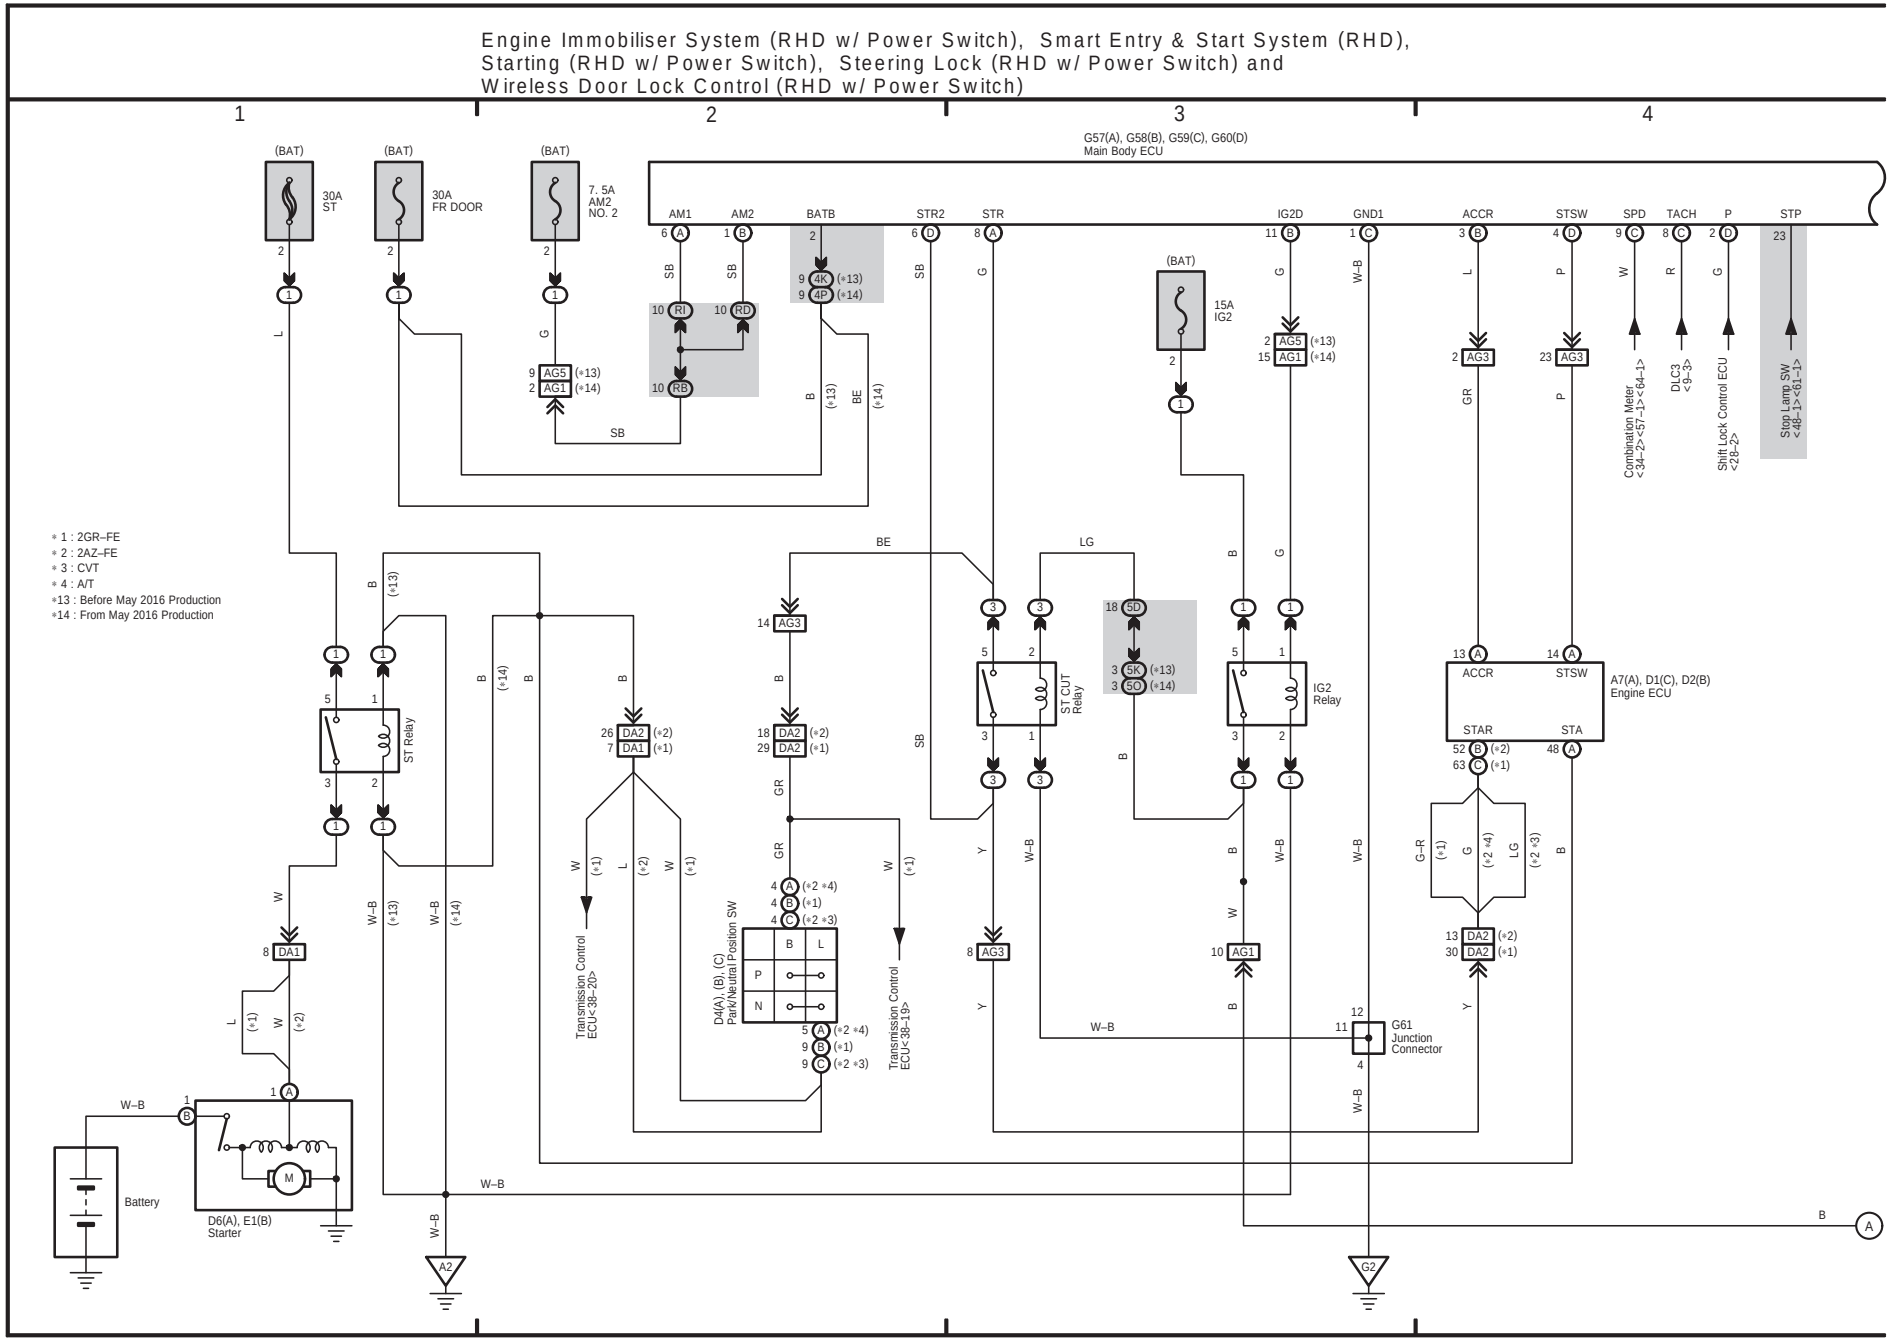

(Cont. next page)

Engine Immobiliser System (RHD w/ Power Switch), Smart Entry & Start System (RHD), Starting (RHD w/ Power Switch), Steering Lock (RHD w/ Power Switch) and Wireless Door Lock Control (RHD w/ Power Switch)

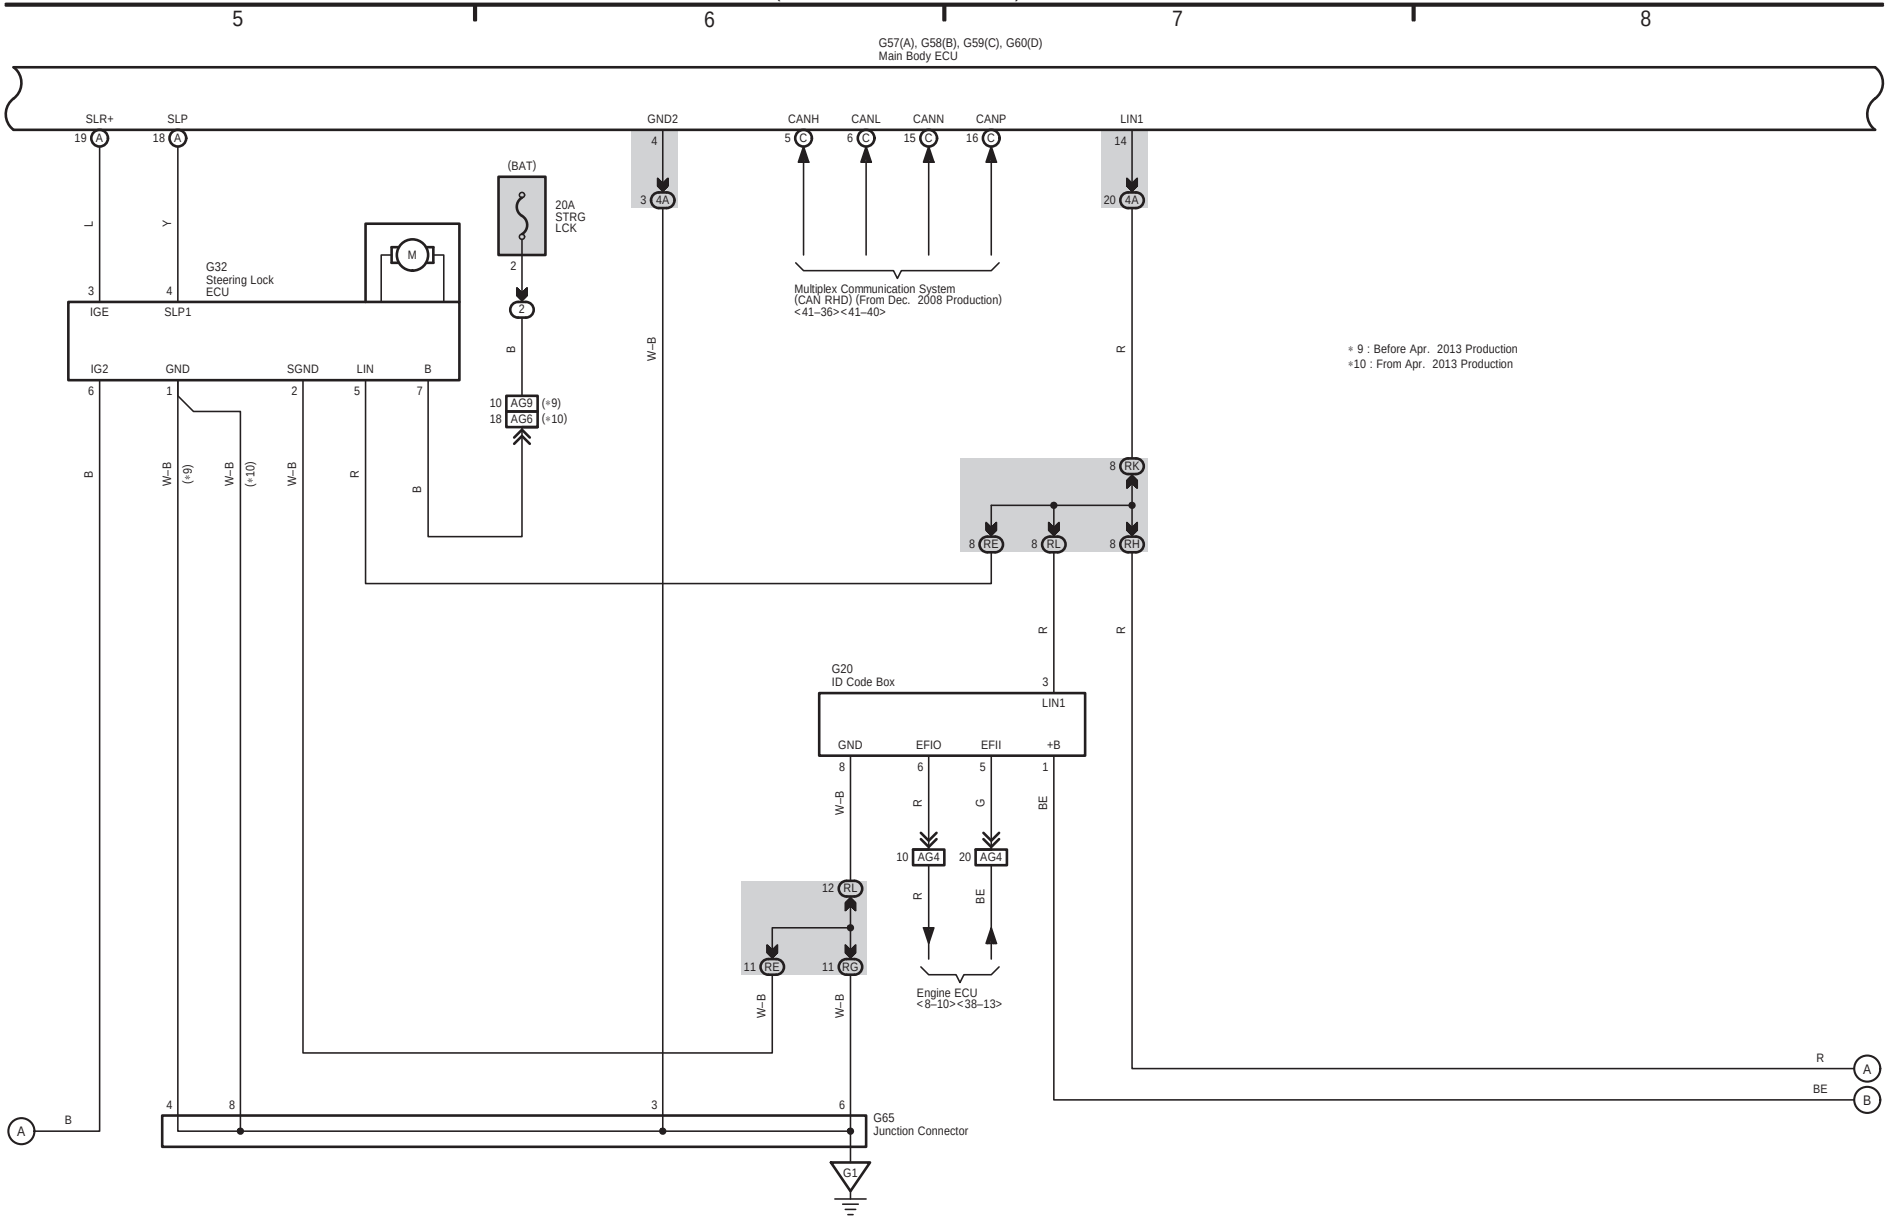


(Cont. next page)

Engine Immobiliser System (RHD w/ Power Switch), Smart Entry & Start System (RHD), Starting (RHD w/ Power Switch), Steering Lock (RHD w/ Power Switch) and Wireless Door Lock Control (RHD w/ Power Switch)


9 | 10 | 11 | 12

G57(A), G58(B), G59(C), G60(D)
Main Body ECU

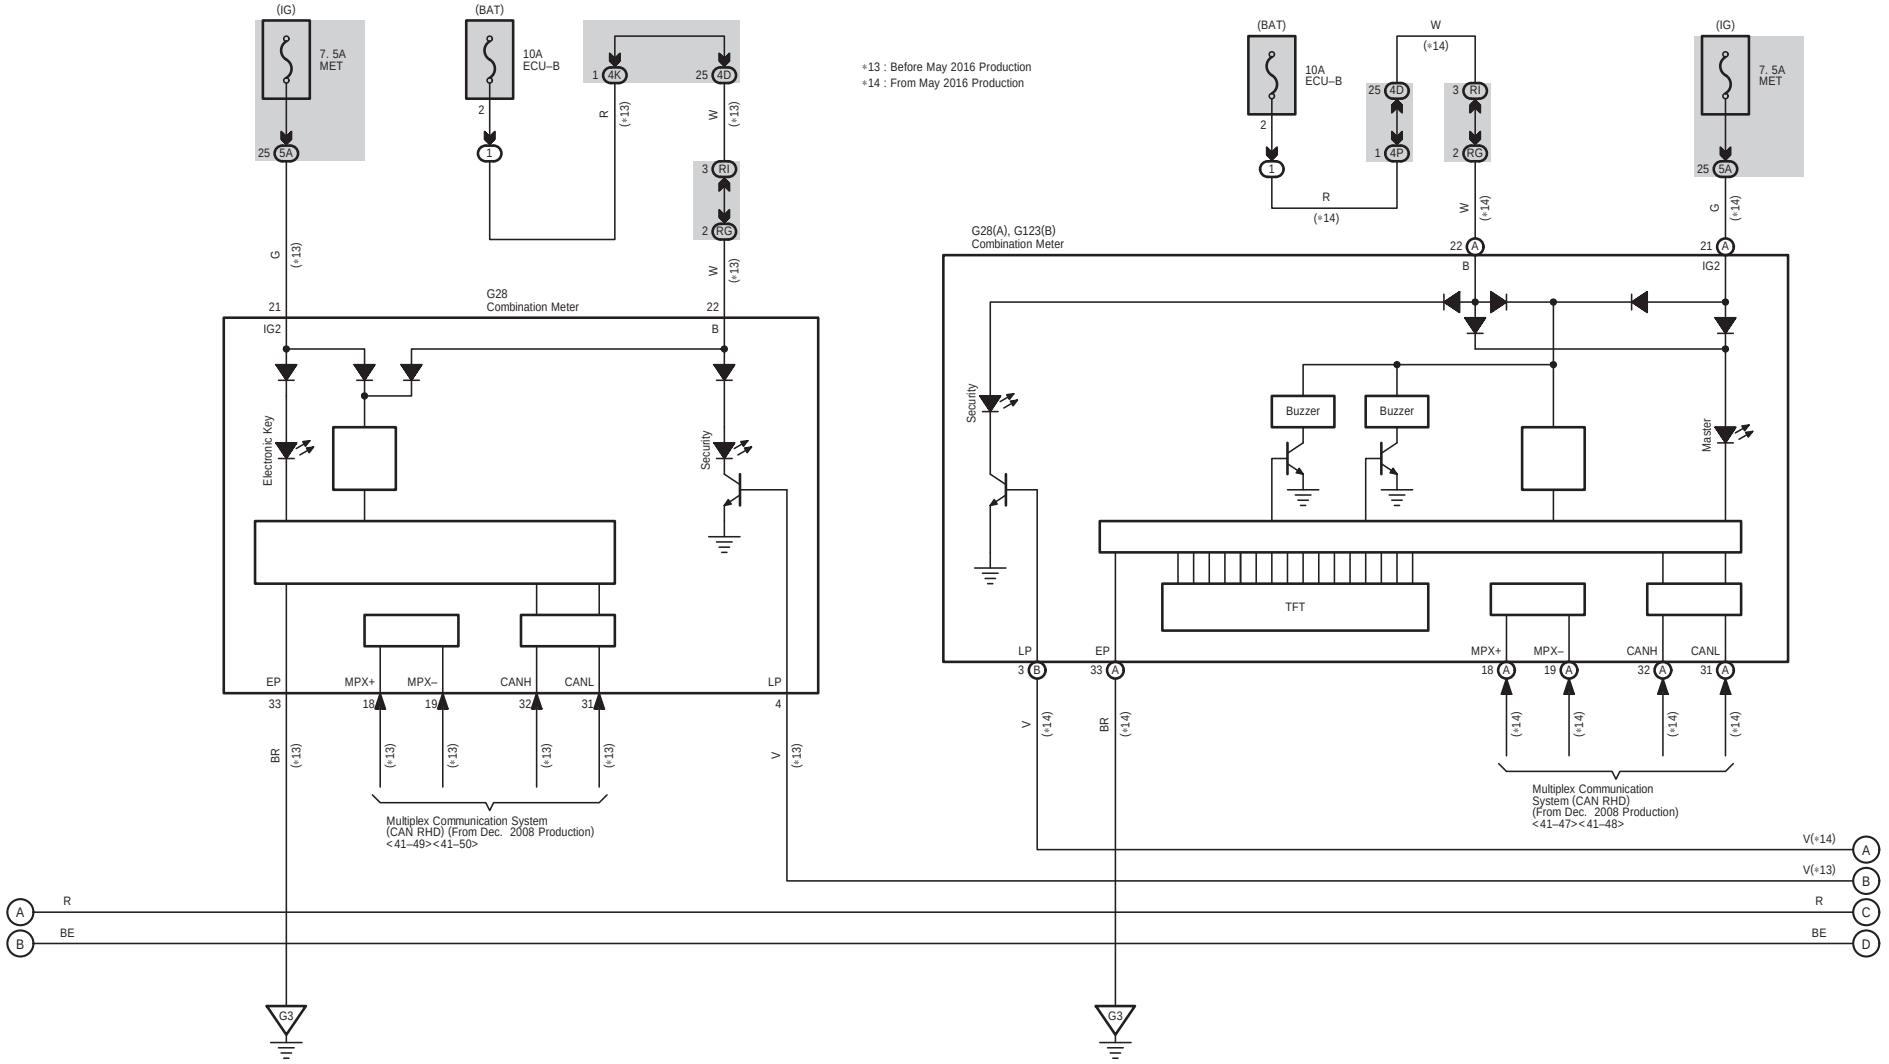


(Cont. next page)

Engine Immobiliser System (RHD w/ Power Switch), Smart Entry & Start System (RHD), Starting (RHD w/ Power Switch), Steering Lock (RHD w/ Power Switch) and Wireless Door Lock Control (RHD w/ Power Switch)

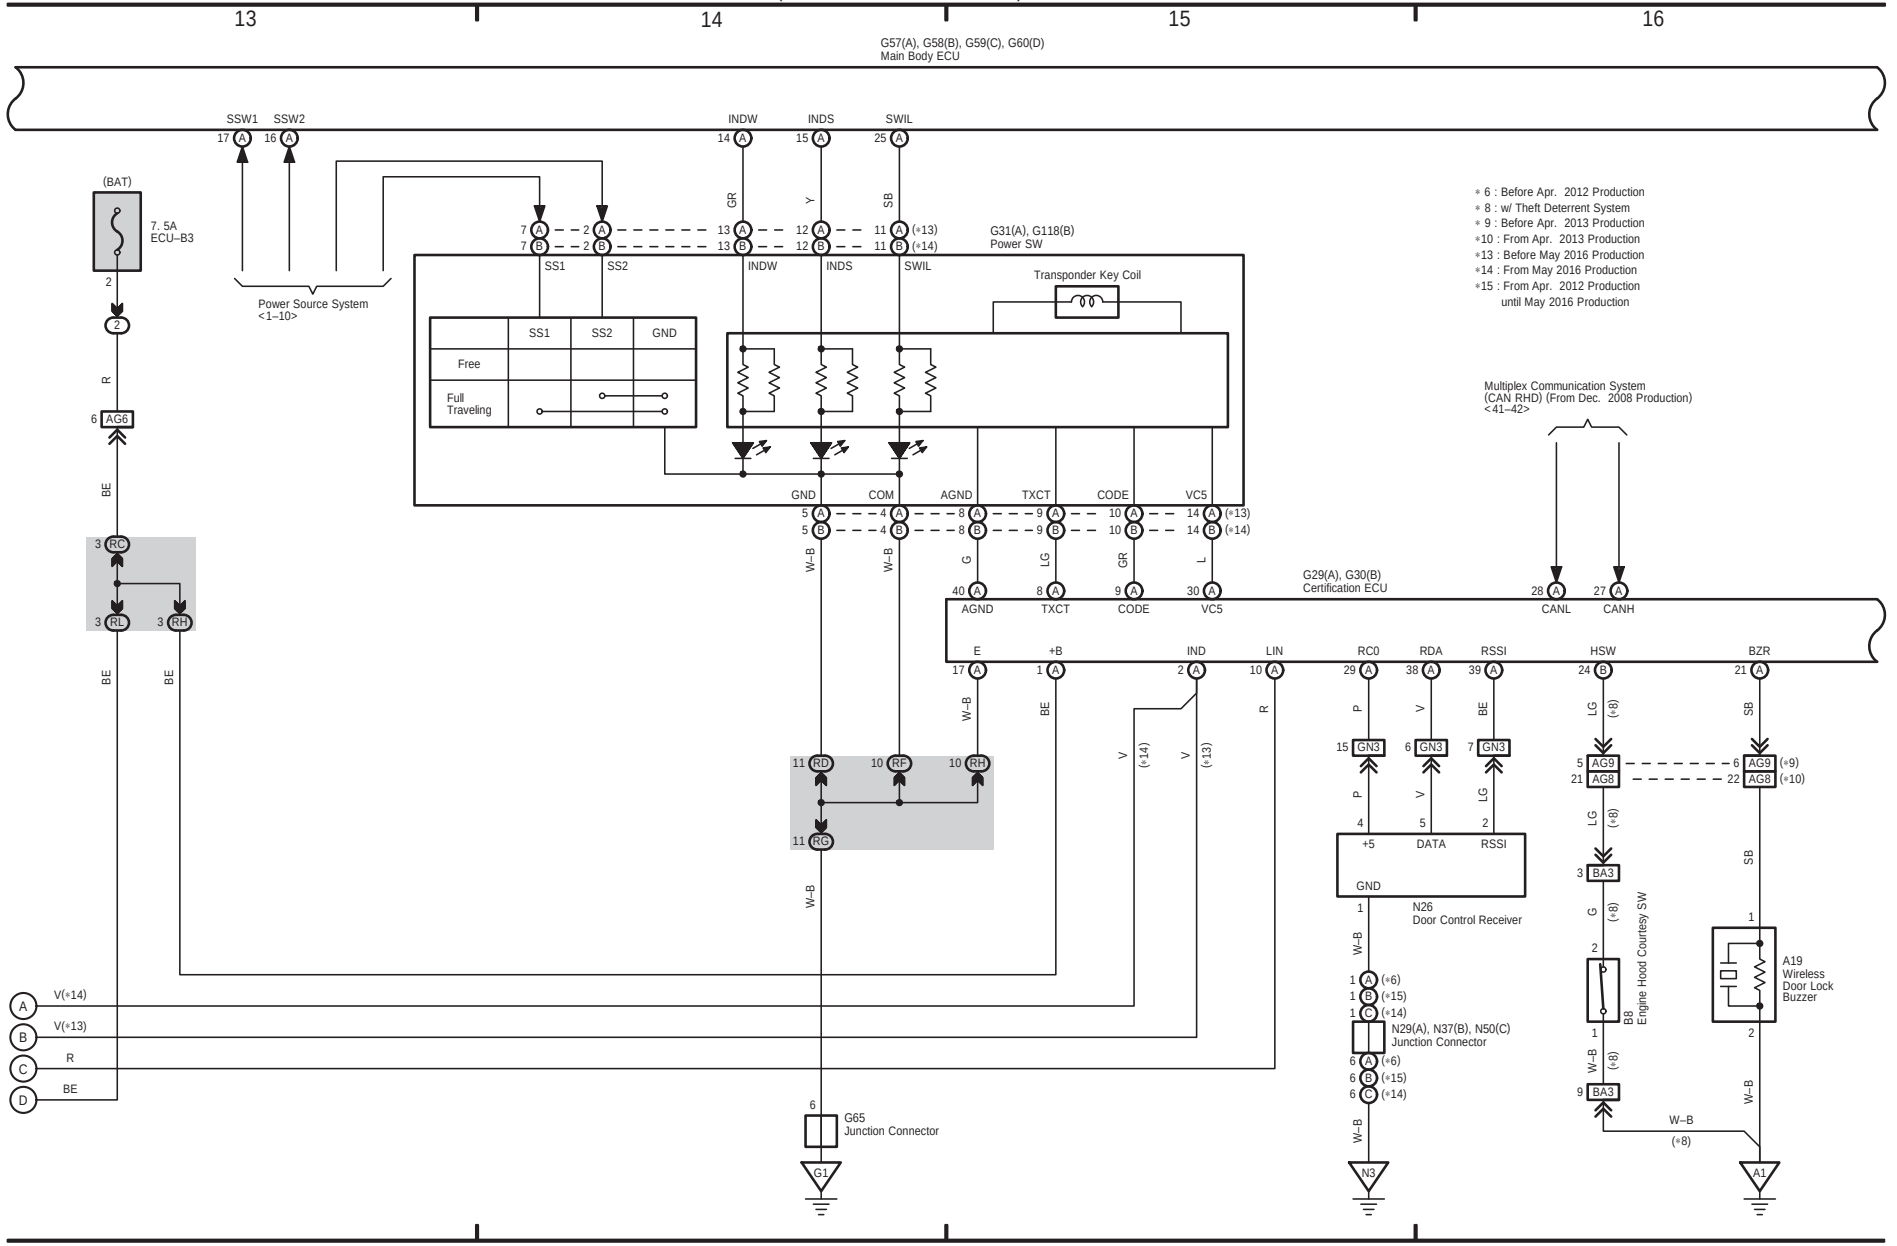

(Cont. next page)

Engine Immobiliser System (RHD w/ Power Switch), Smart Entry & Start System (RHD), Starting (RHD w/ Power Switch), Steering Lock (RHD w/ Power Switch) and Wireless Door Lock Control (RHD w/ Power Switch)

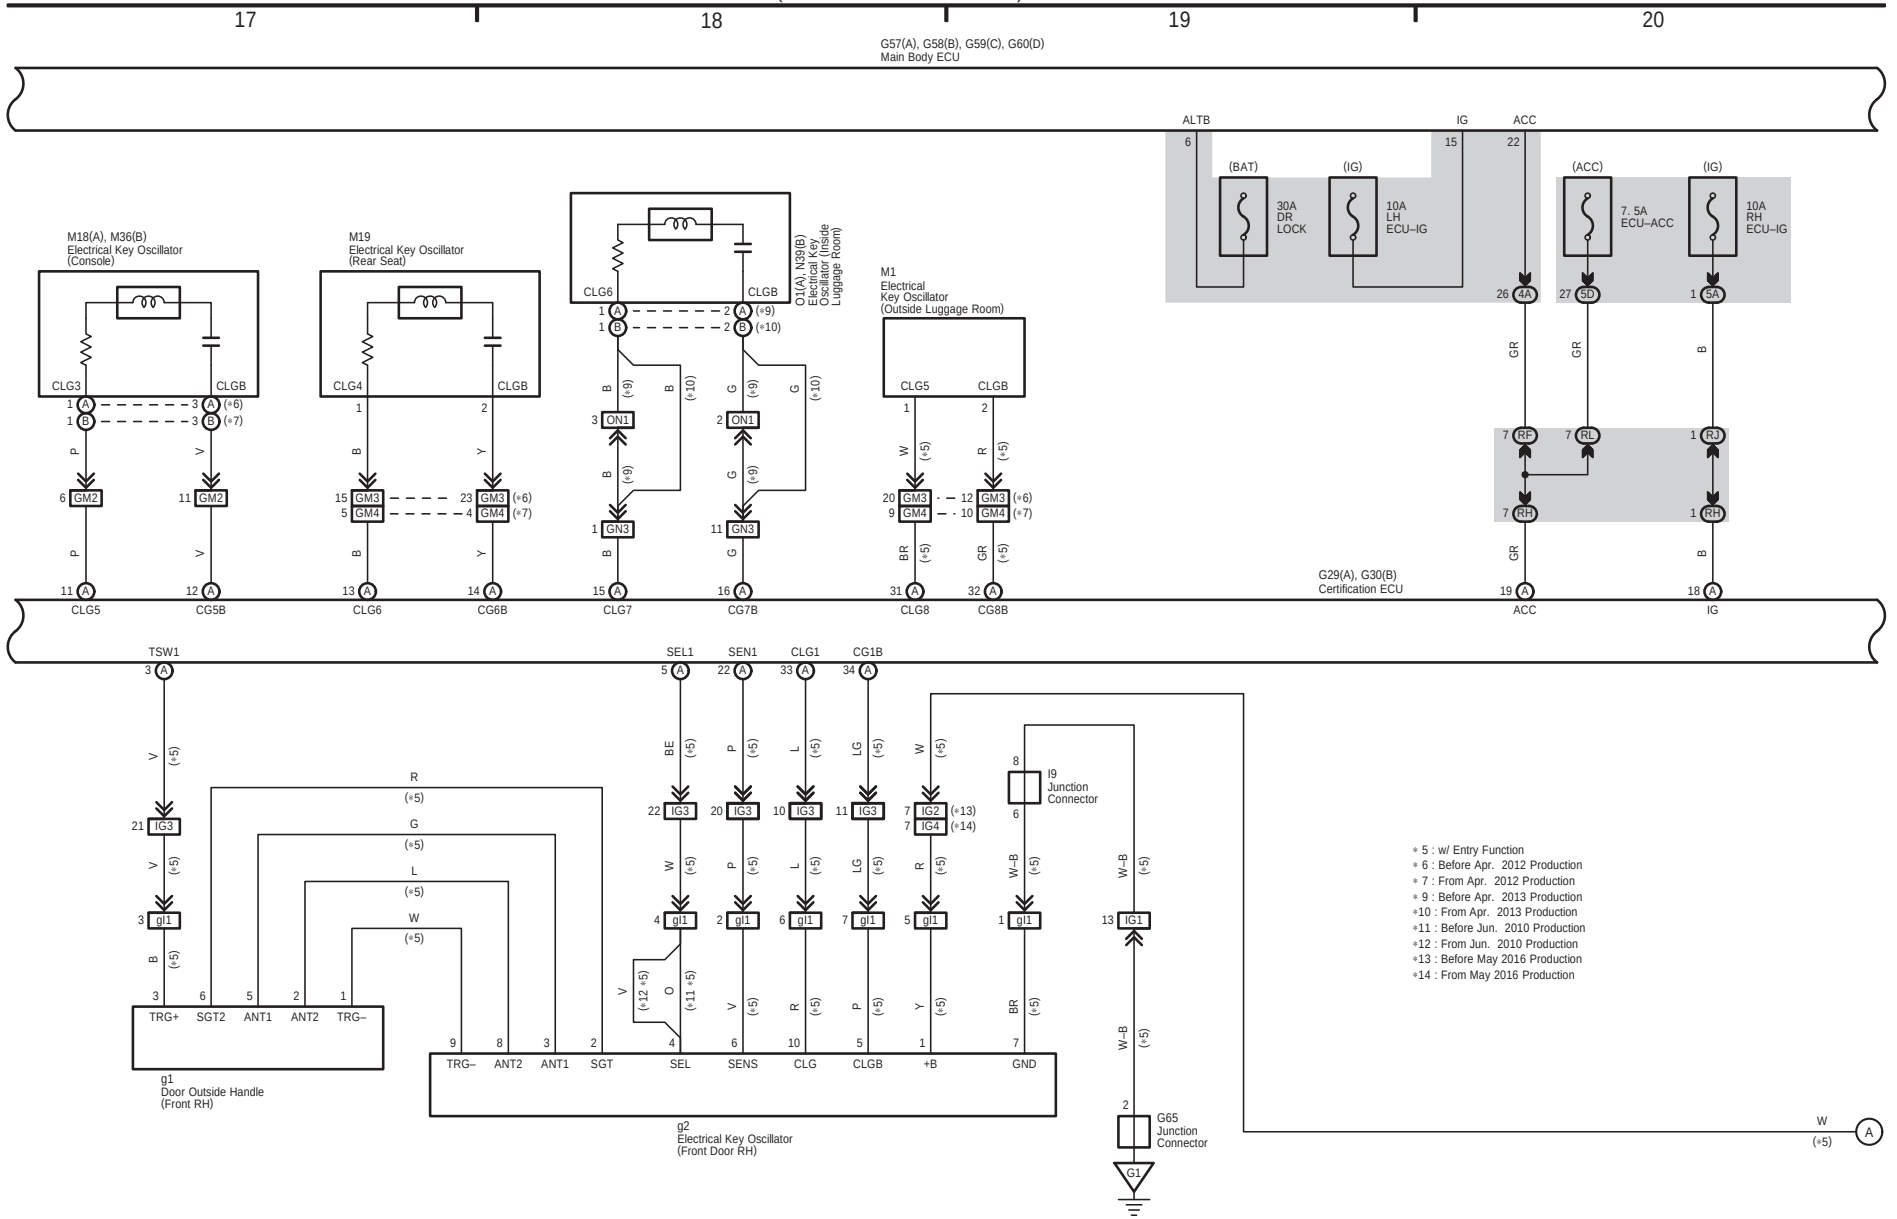

Engine Immobiliser System (RHD w/ Power Switch), Smart Entry & Start System (RHD), Starting (RHD w/ Power Switch), Steering Lock (RHD w/ Power Switch) and Wireless Door Lock Control (RHD w/ Power Switch)

