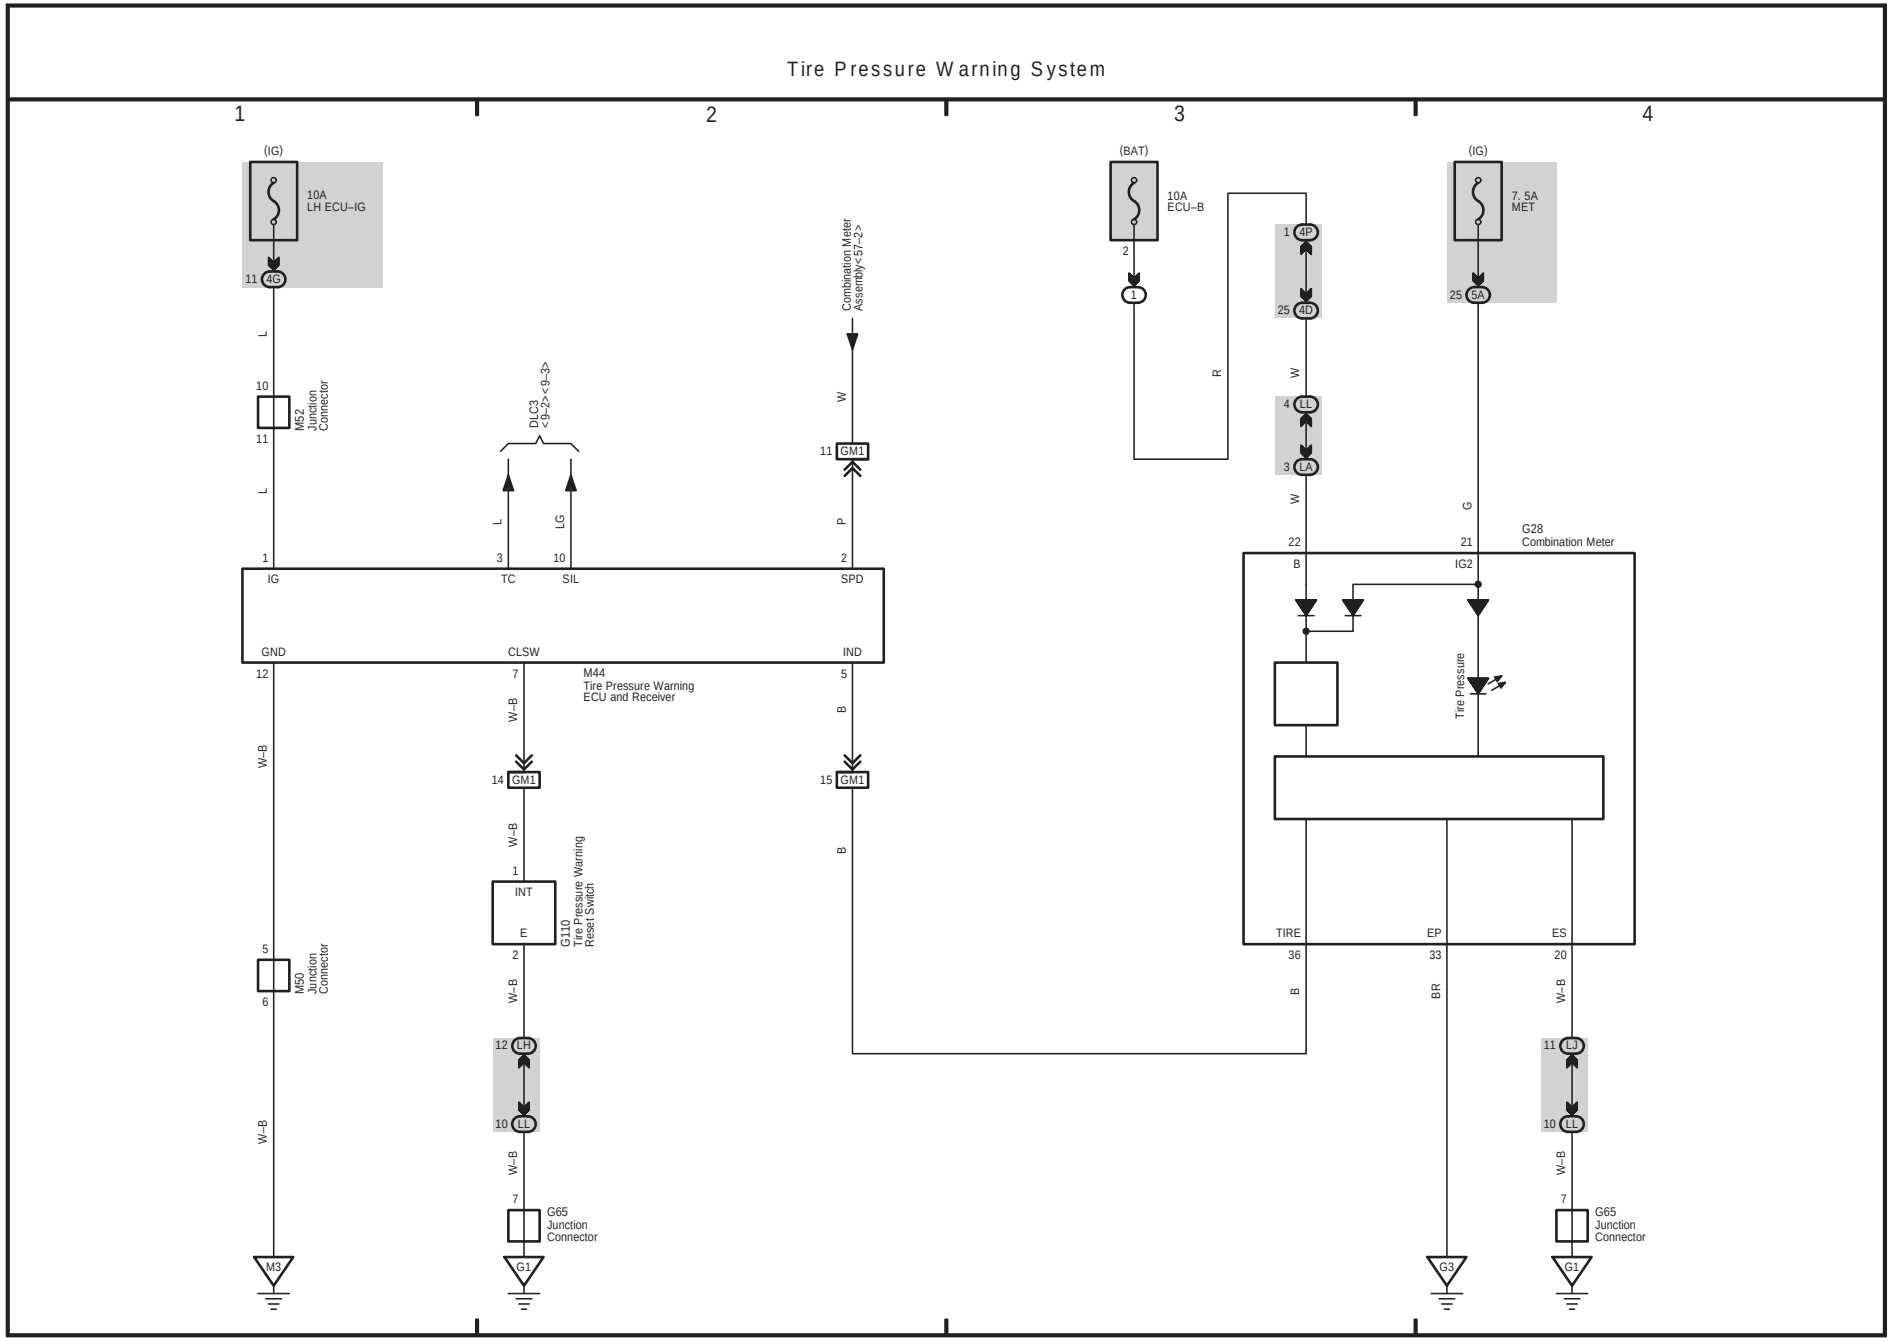

Tire Pressure Warning System
1
2
3
4
(IG)
10A
LH ECU–IG
11 4G
L
10
M52
Junction
Connector
11
L
1
IG
DLC3
<9–2><9–3>
L
3
TC
LG
10
SIL
Combination Meter
Assembly<57–2>
W
11 GM1
P
2
SPD
GND
CLSW
IND
12
7
5
M44
Tire Pressure Warning
ECU and Receiver
W–B
14 GM1
W–B
1
INT
E
G110
Tire Pressure Warning
Reset Switch
2
W–B
12 LH
10 LL
W–B
7
G65
Junction
Connector
G1
W–B
5
M50
Junction
Connector
6
W–B
M3
B
15 GM1
B
(BAT)
10A
ECU–B
2
1
R
1 4P
25 4D
W
4 LL
3 LA
W
22
B
TIRE
36
B
(IG)
7. 5A
MET
25 5A
G
21
IG2
G28
Combination Meter
Tire Pressure
EP
33
BR
ES
20
W–B
11 LJ
10 LL
W–B
7
G65
Junction
Connector
G3
G1