

(Cont. next page)

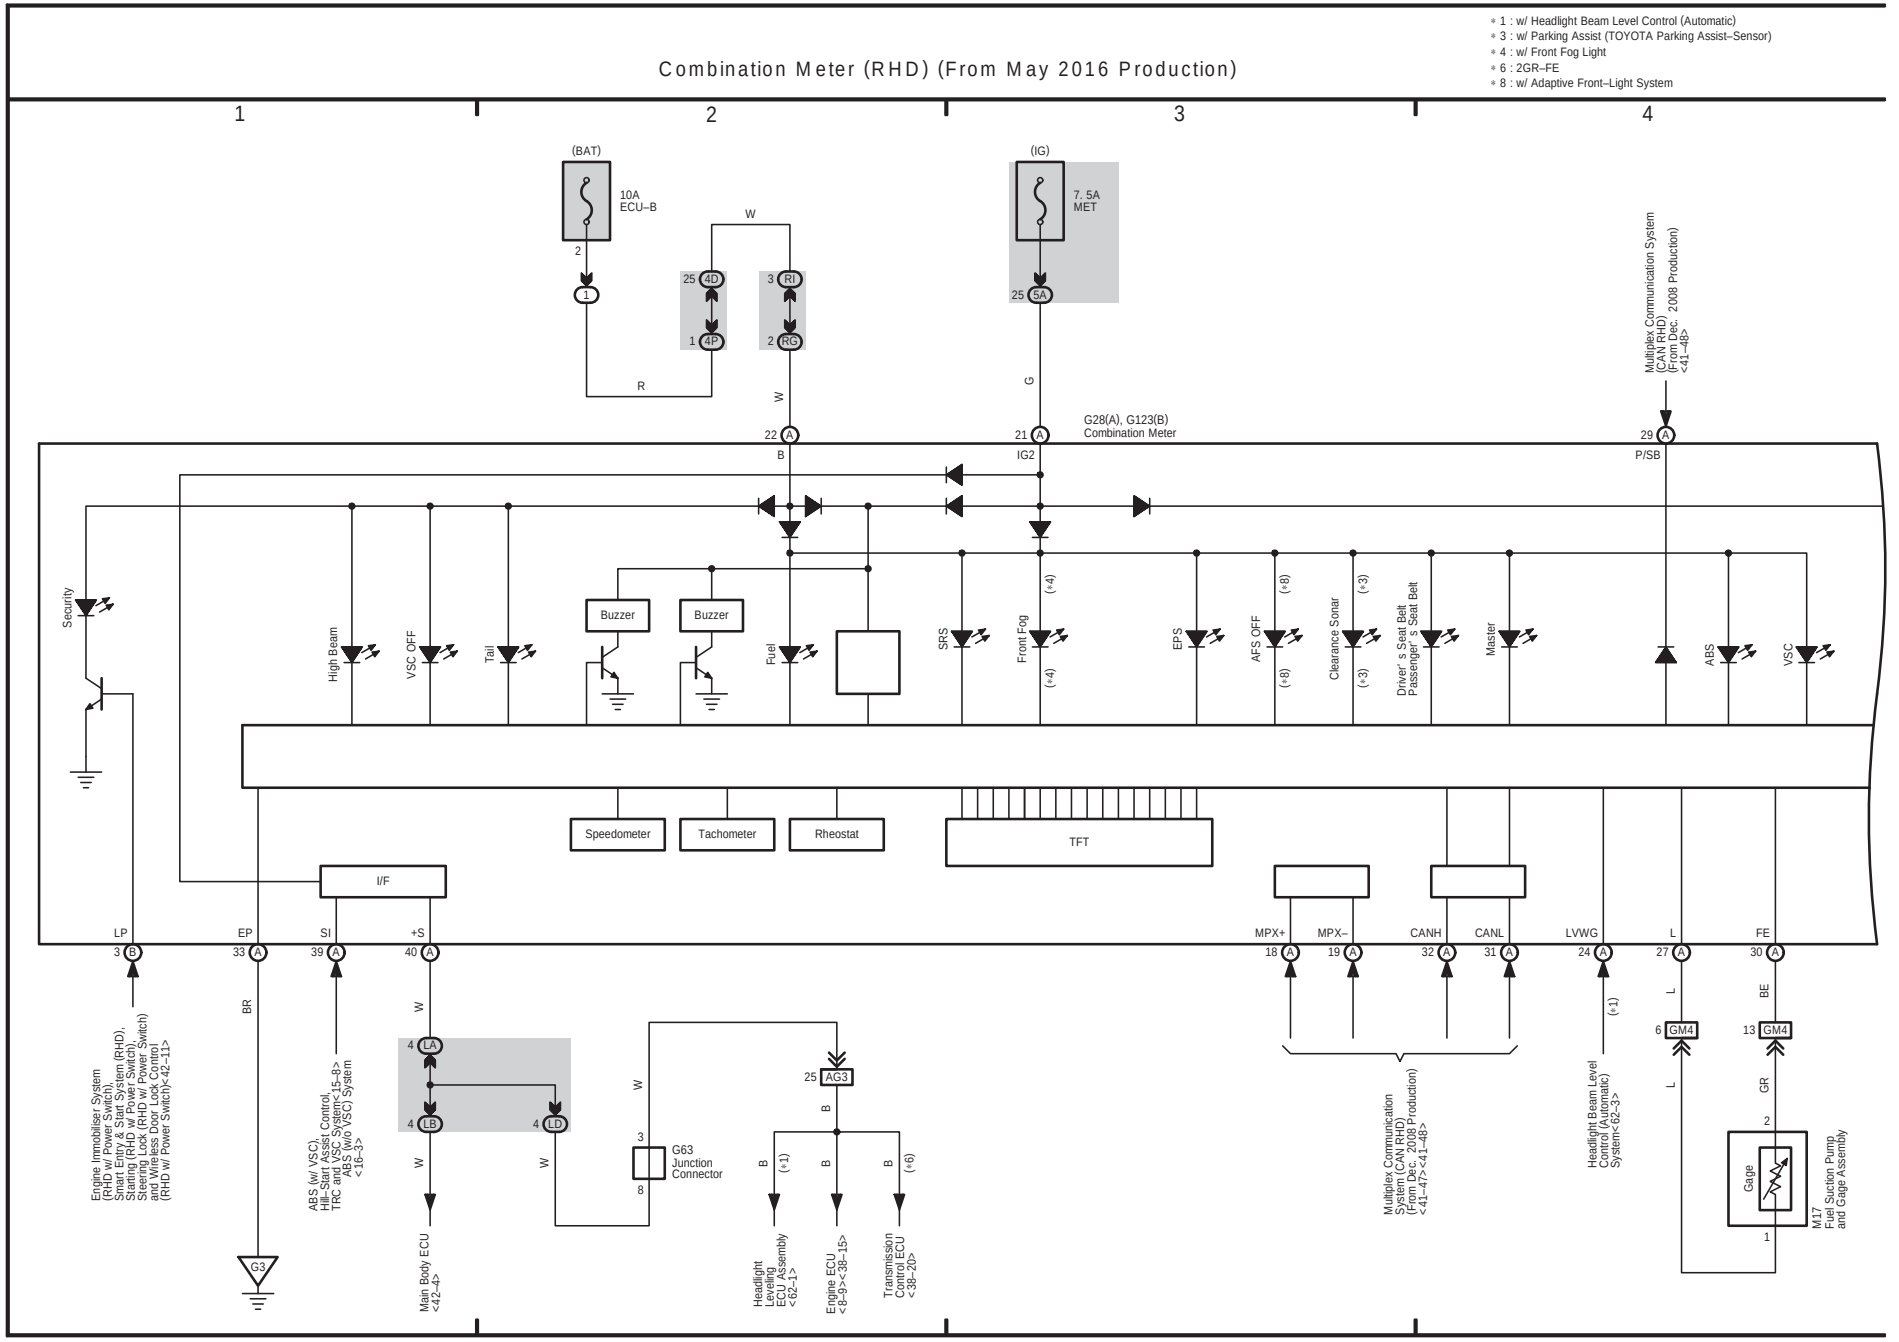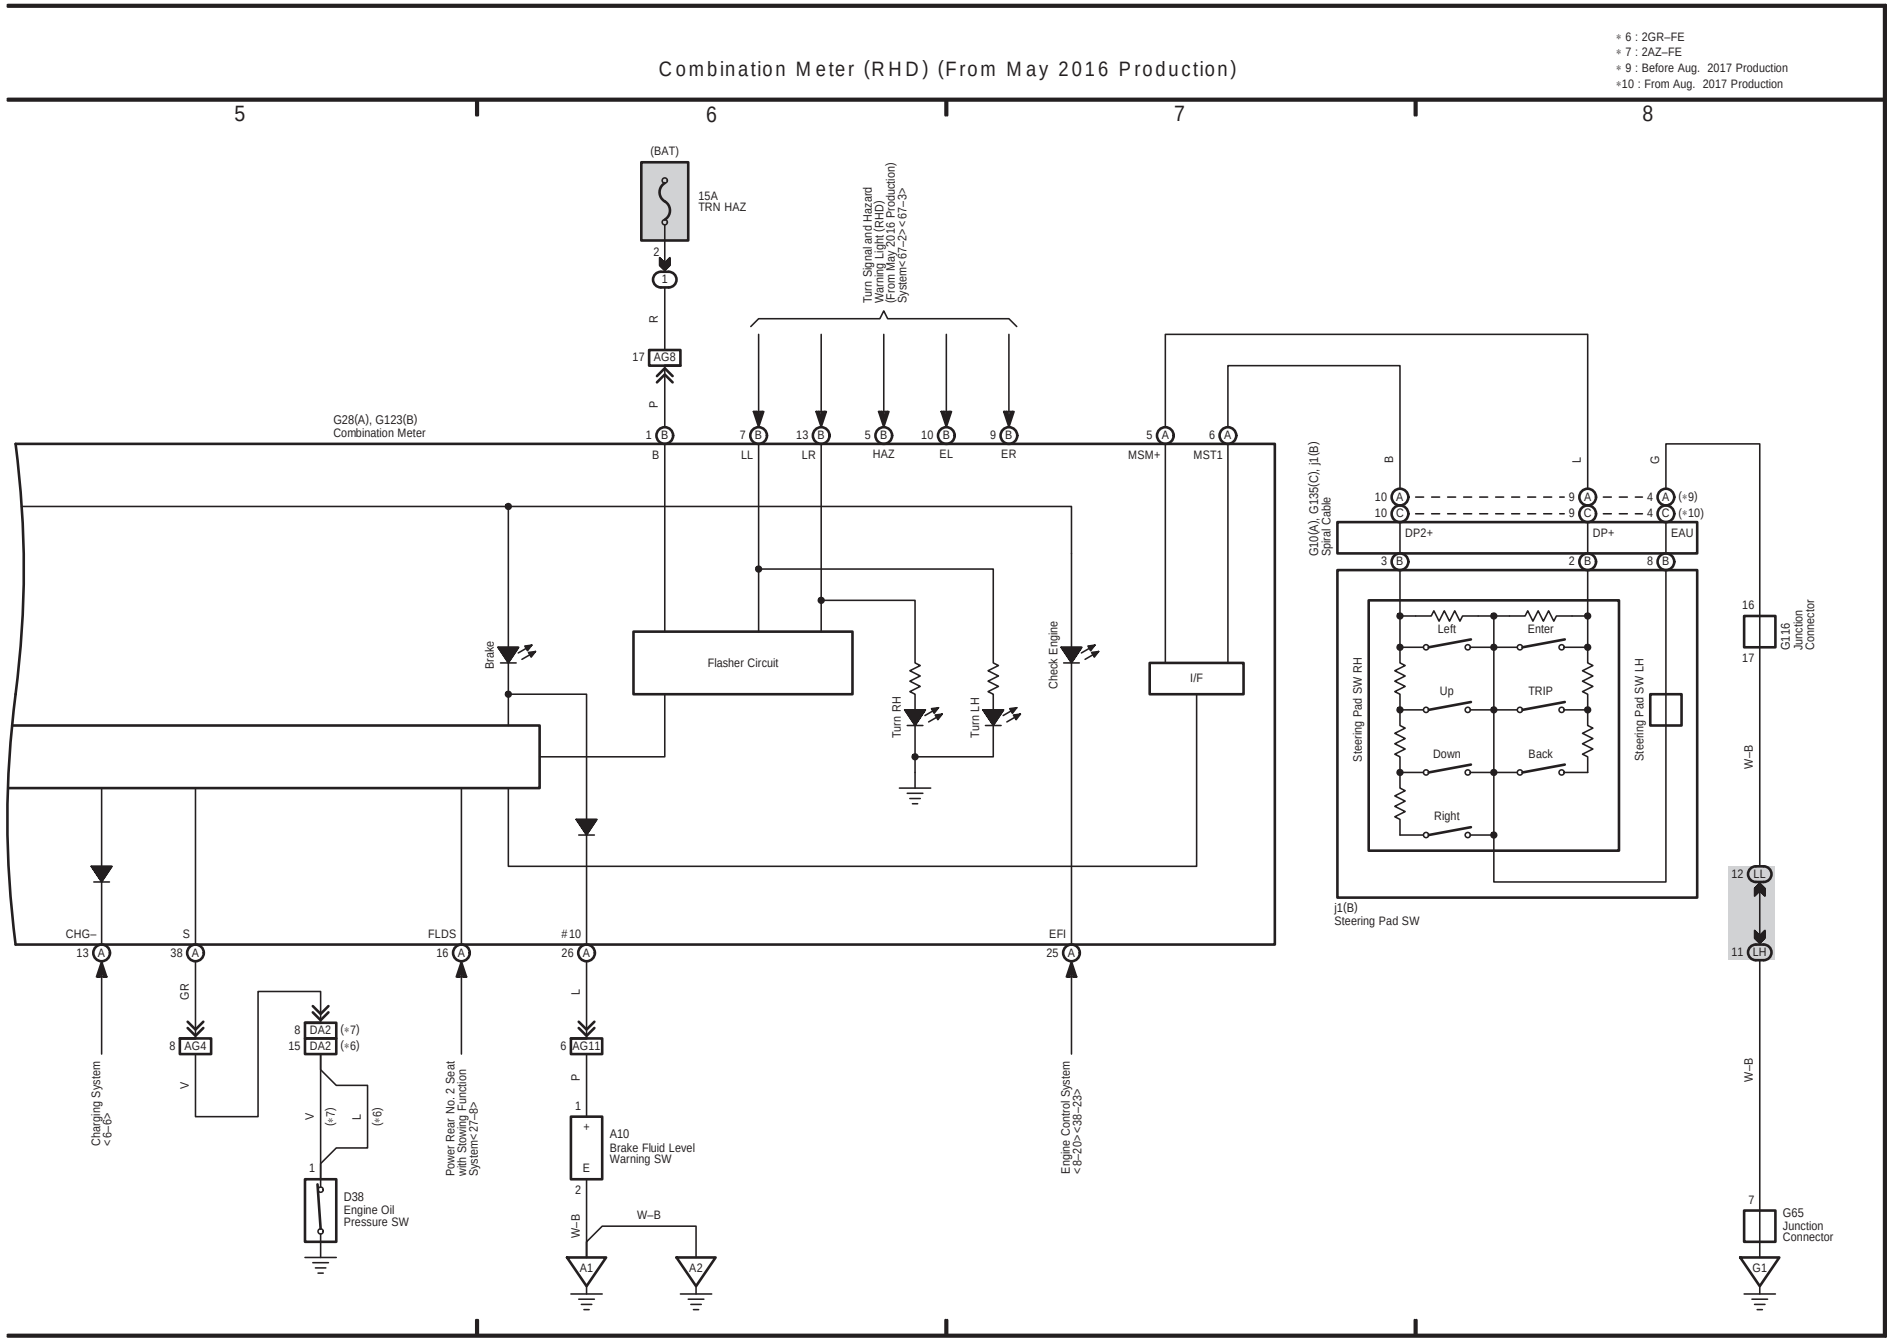


Combination Meter (RHD) (From May 2016 Production)
∗ 6 : 2GR–FE
∗ 7 : 2AZ–FE
∗ 9 : Before Aug. 2017 Production
∗10 : From Aug. 2017 Production
5
6
7
8
(BAT)
15A
TRN HAZ
Turn Signal and Hazard Warning Light (RHD) (From May 2016 Production) System<67–2>, <67–3>
G28(A), G123(B)
Combination Meter
B
LL
LR
HAZ
EL
ER
MSM+
MST1
Brake
Flasher Circuit
Turn RH
Turn LH
Check Engine
I/F
G10(A), G135(C), j1(B)
Spiral Cable
DP2+
DP+
EAU
Left
Enter
Up
TRIP
Down
Back
Right
Steering Pad SW RH
Steering Pad SW LH
j1(B)
Steering Pad SW
G116
Junction
Connector
W–B
G65
Junction
Connector
CHG–
S
FLDS
#10
EFI
Charging System
<6–6>
Power Rear No. 2 Seat with Stowing Function System<27–8>
Engine Control System
<8–2(D)>, <38–23>
D38
Engine Oil
Pressure SW
A10
Brake Fluid Level
Warning SW
W–B
A1
A2
G1