
(Cont. next page)


Engine Control (2AZ–FE)

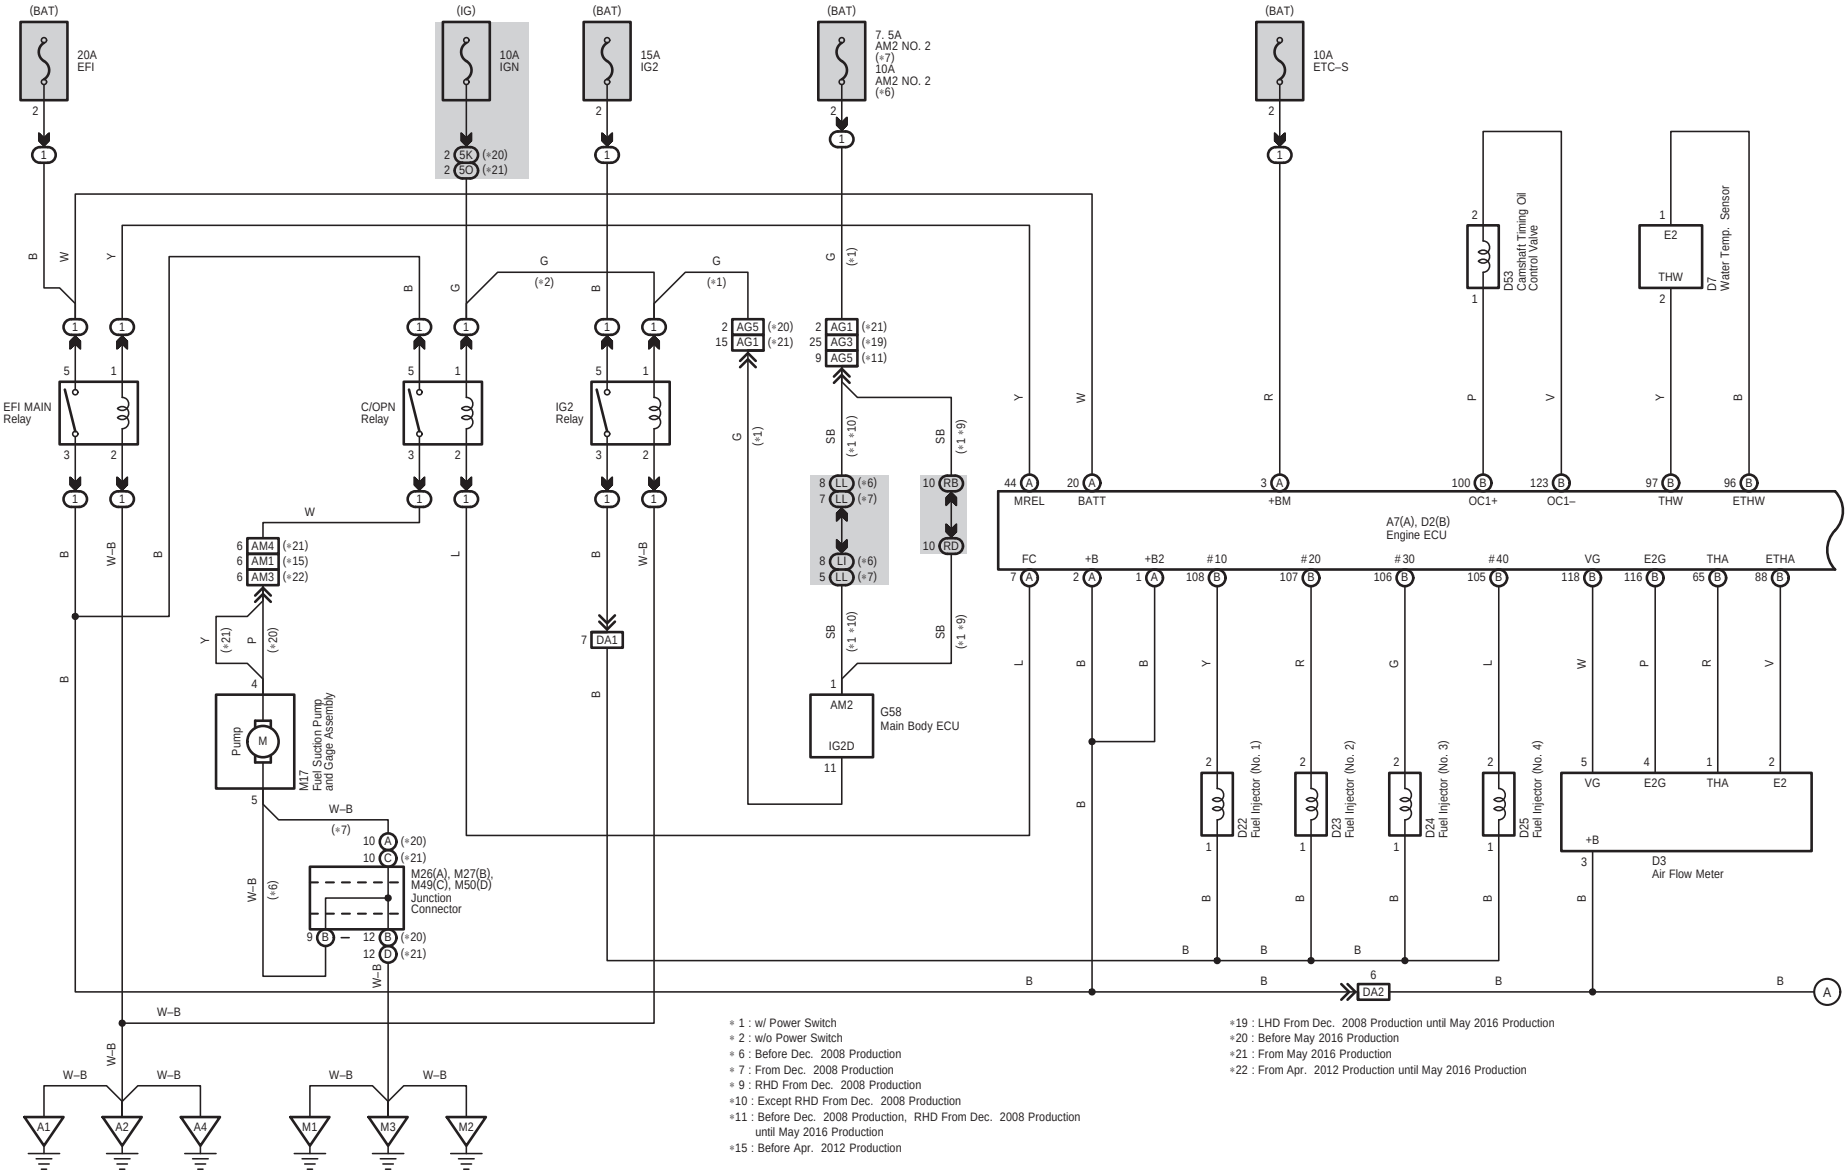


∗ 1 : w/ Power Switch
∗ 2 : w/o Power Switch
∗ 6 : Before Dec. 2008 Production
∗ 7 : From Dec. 2008 Production
∗ 9 : RHD From Dec. 2008 Production
∗10 : Except RHD From Dec. 2008 Production
∗11 : Before Dec. 2008 Production, RHD From Dec. 2008 Production until May 2016 Production
∗15 : Before Apr. 2012 Production
∗19 : LHD From Dec. 2008 Production until May 2016 Production
∗20 : Before May 2016 Production
∗21 : From May 2016 Production
∗22 : From Apr. 2012 Production until May 2016 Production

(Cont. next page)

Engine Control (2AZ–FE)

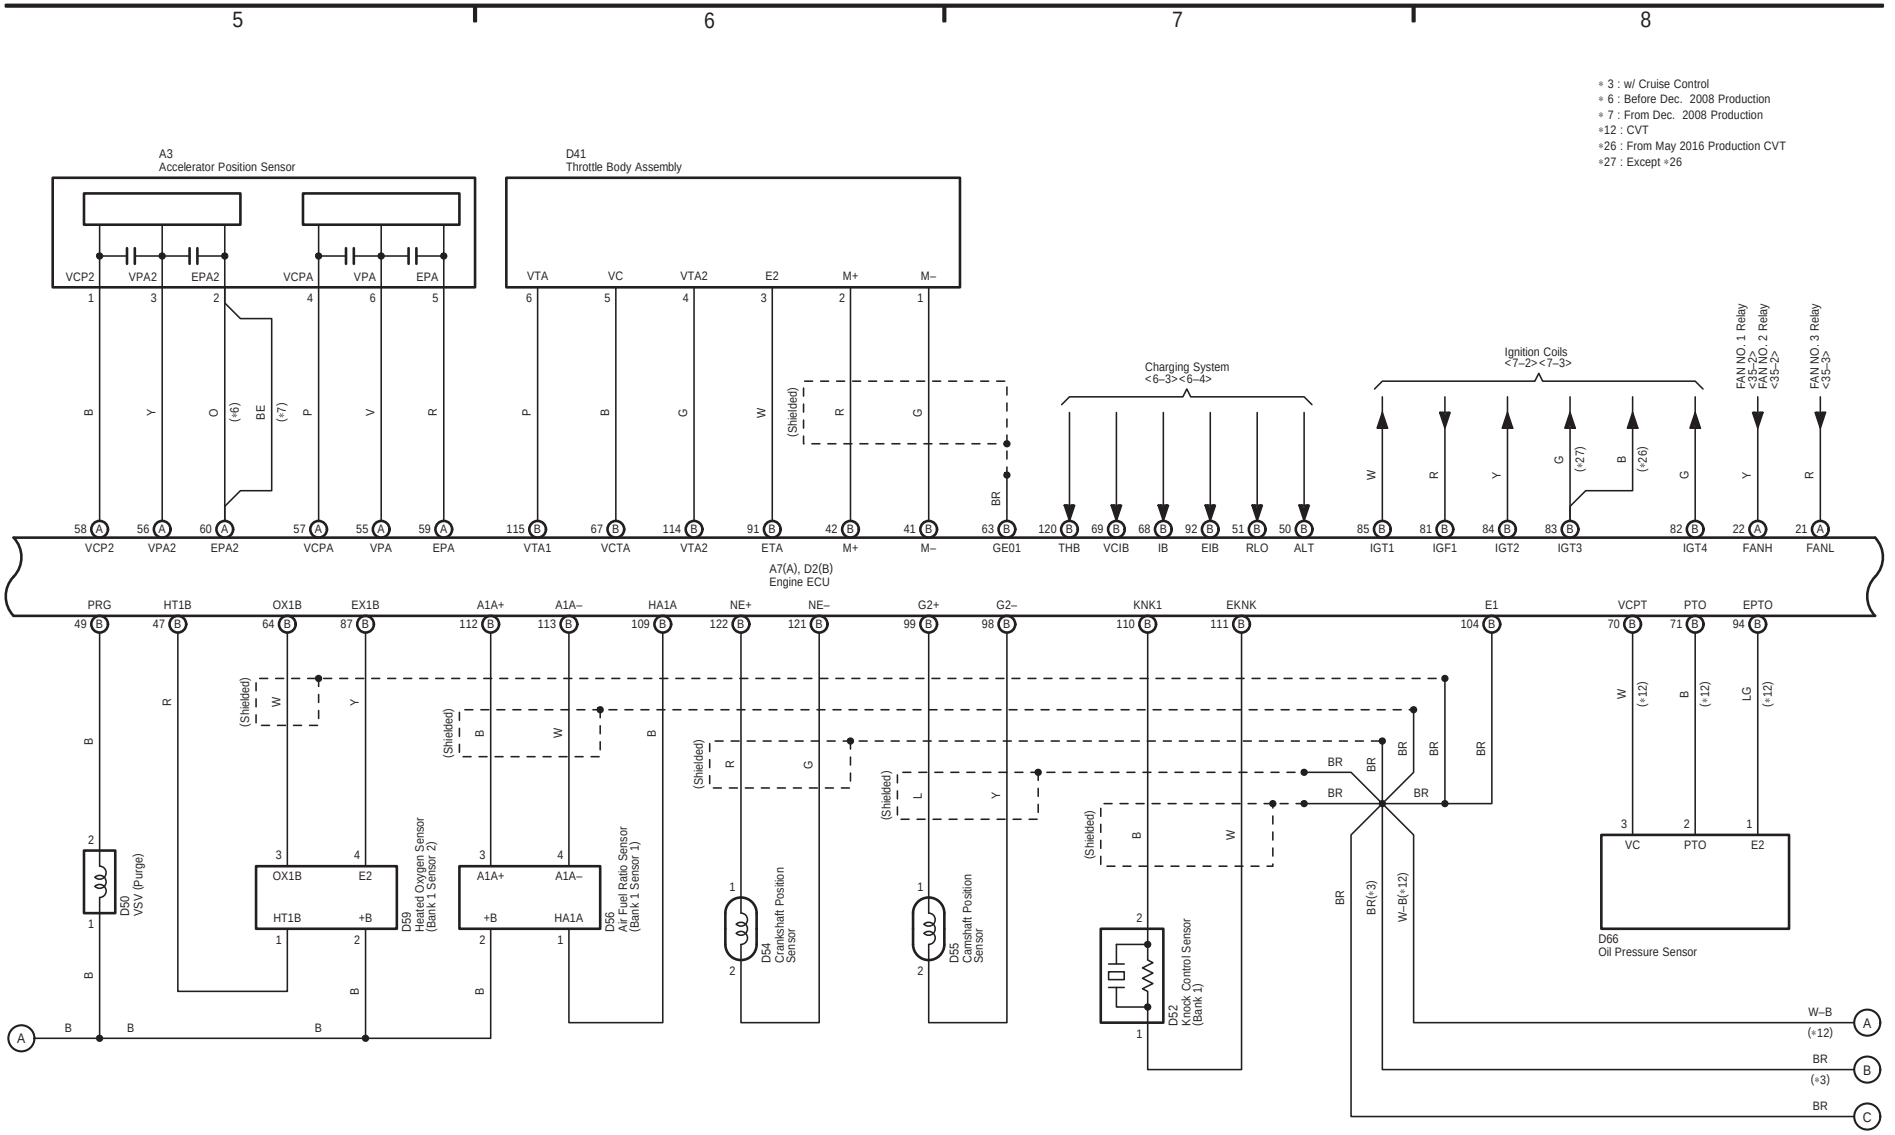


(Cont. next page)

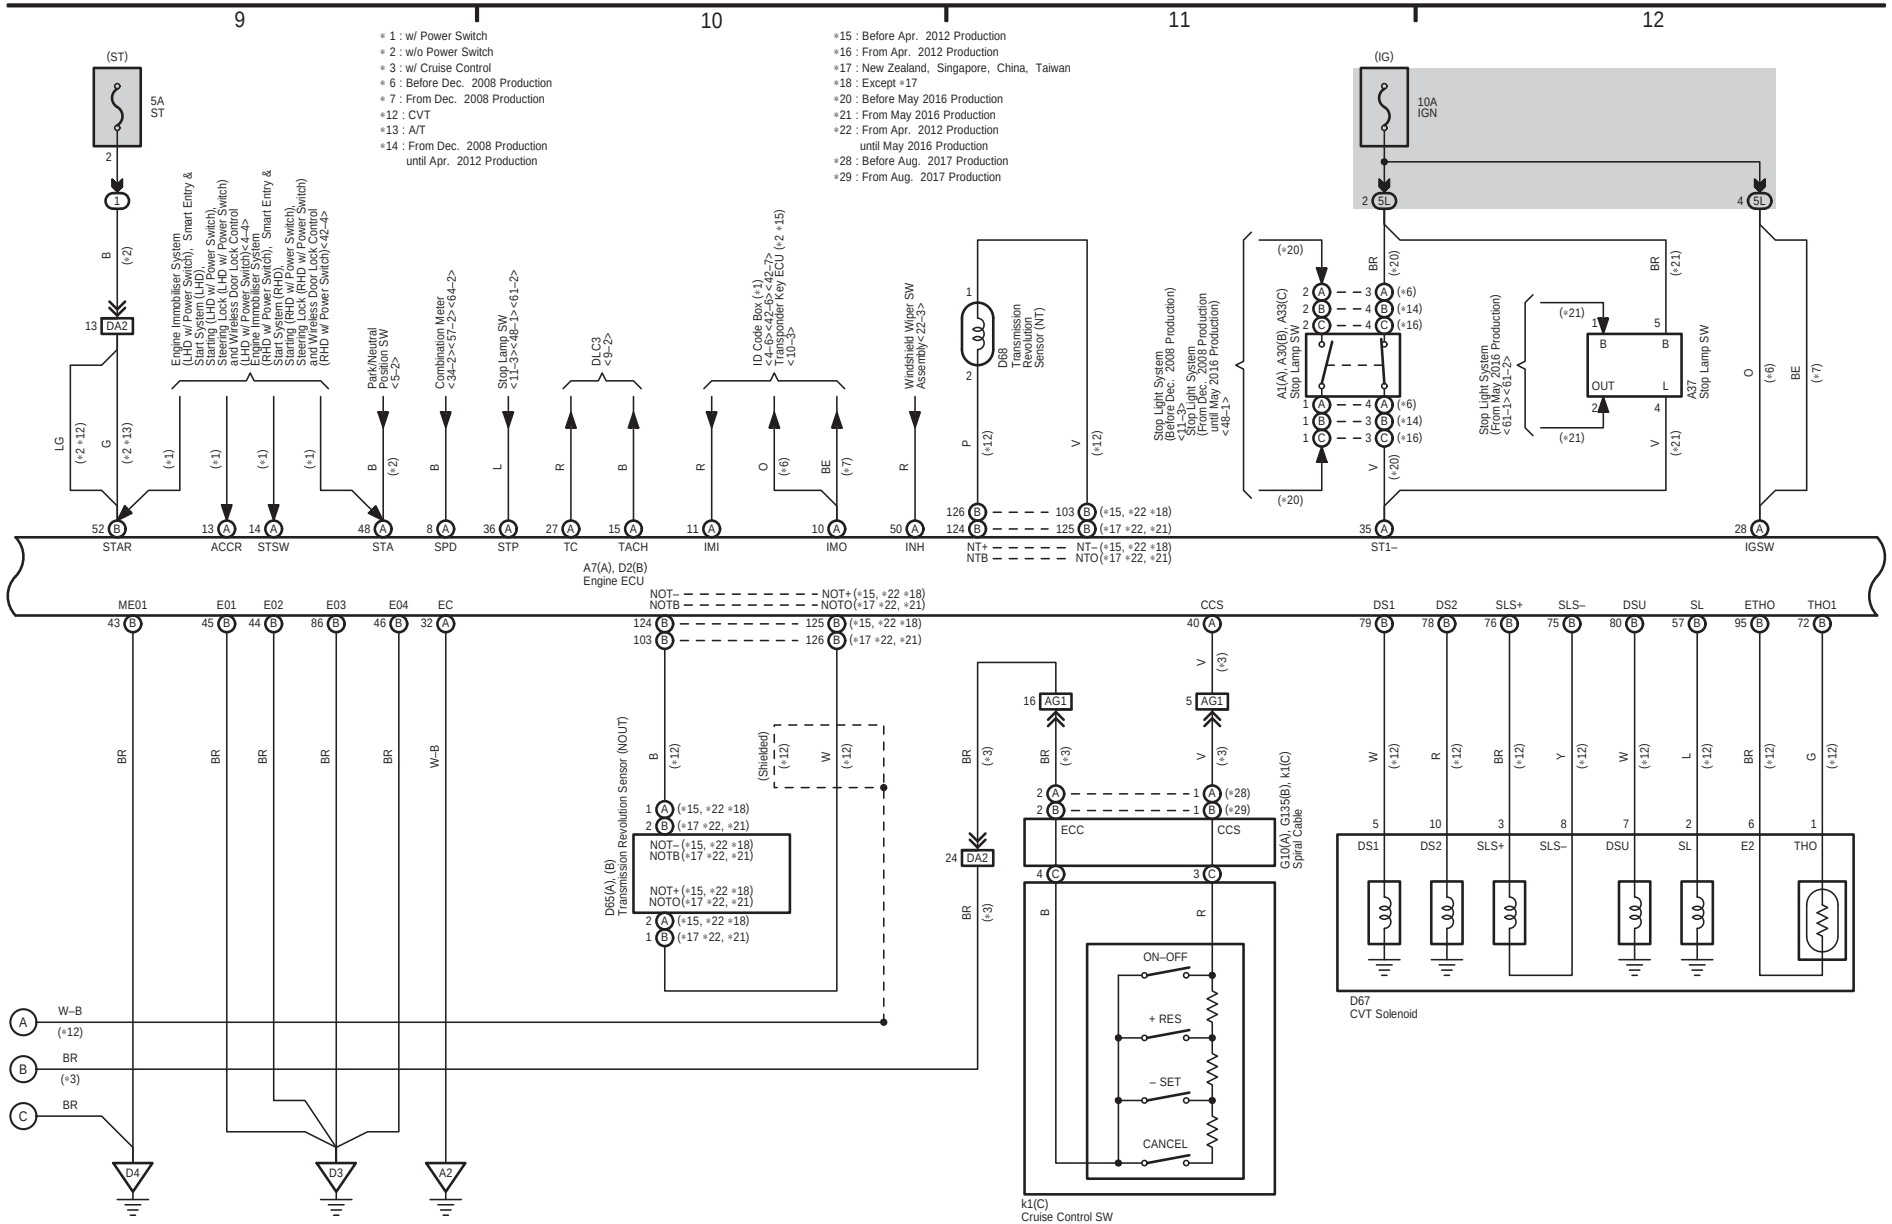

(Cont. next page)

ECT and A/T Indicator (2AZ–FE) or CVT and Shift Indicator (2AZ–FE)

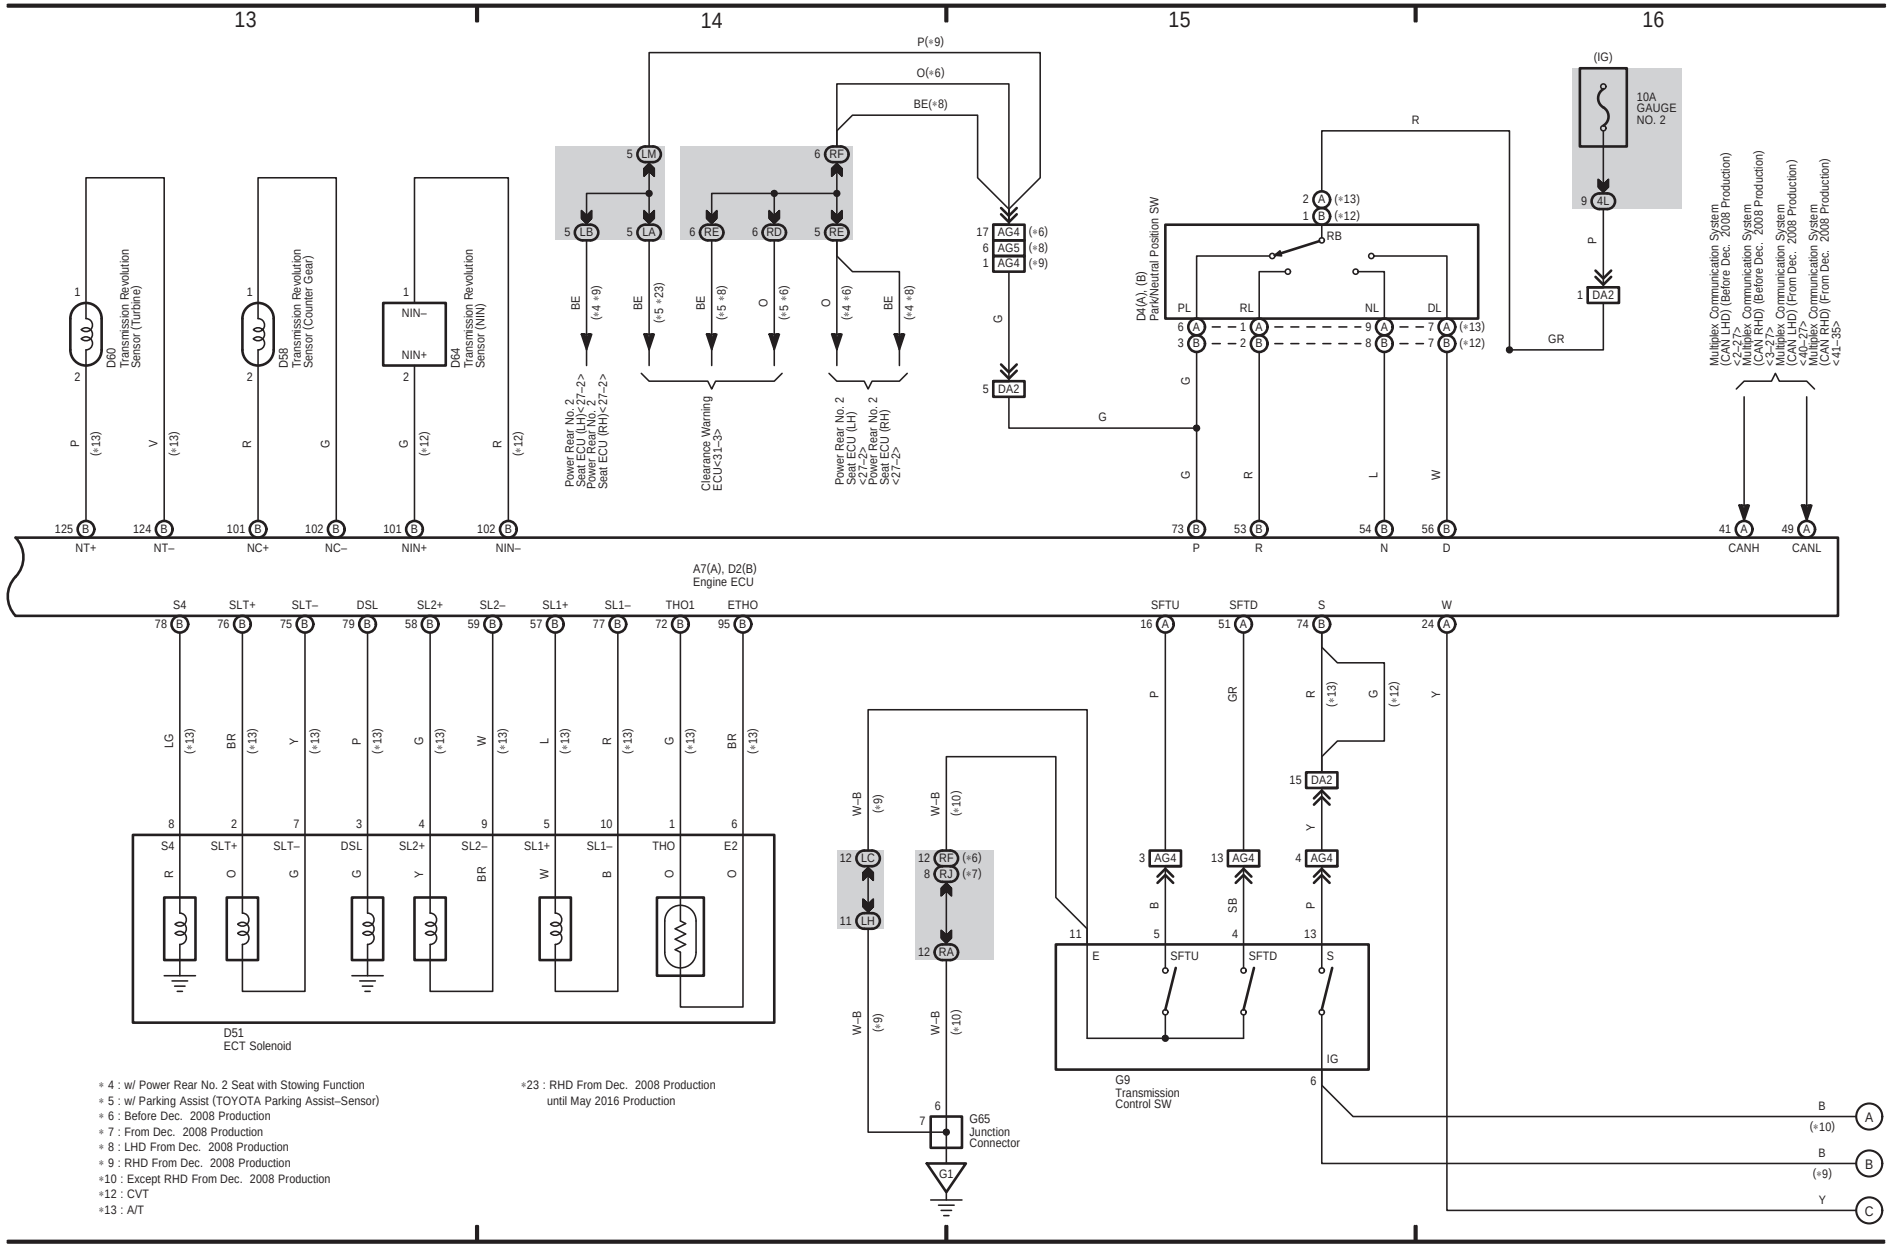


∗ 4 : w/ Power Rear No. 2 Seat with Stowing Function
∗ 5 : w/ Parking Assist (TOYOTA Parking Assist–Sensor)
∗ 6 : Before Dec. 2008 Production
∗ 7 : From Dec. 2008 Production
∗ 8 : LHD From Dec. 2008 Production
∗ 9 : RHD From Dec. 2008 Production
∗10 : Except RHD From Dec. 2008 Production
∗12 : CVT
∗13 : A/T

∗23 : RHD From Dec. 2008 Production until May 2016 Production

8 PREVIA / TARAGO (Cont' d)

ECT and A/T Indicator (2AZ–FE) or CVT and Shift Indicator (2AZ–FE)

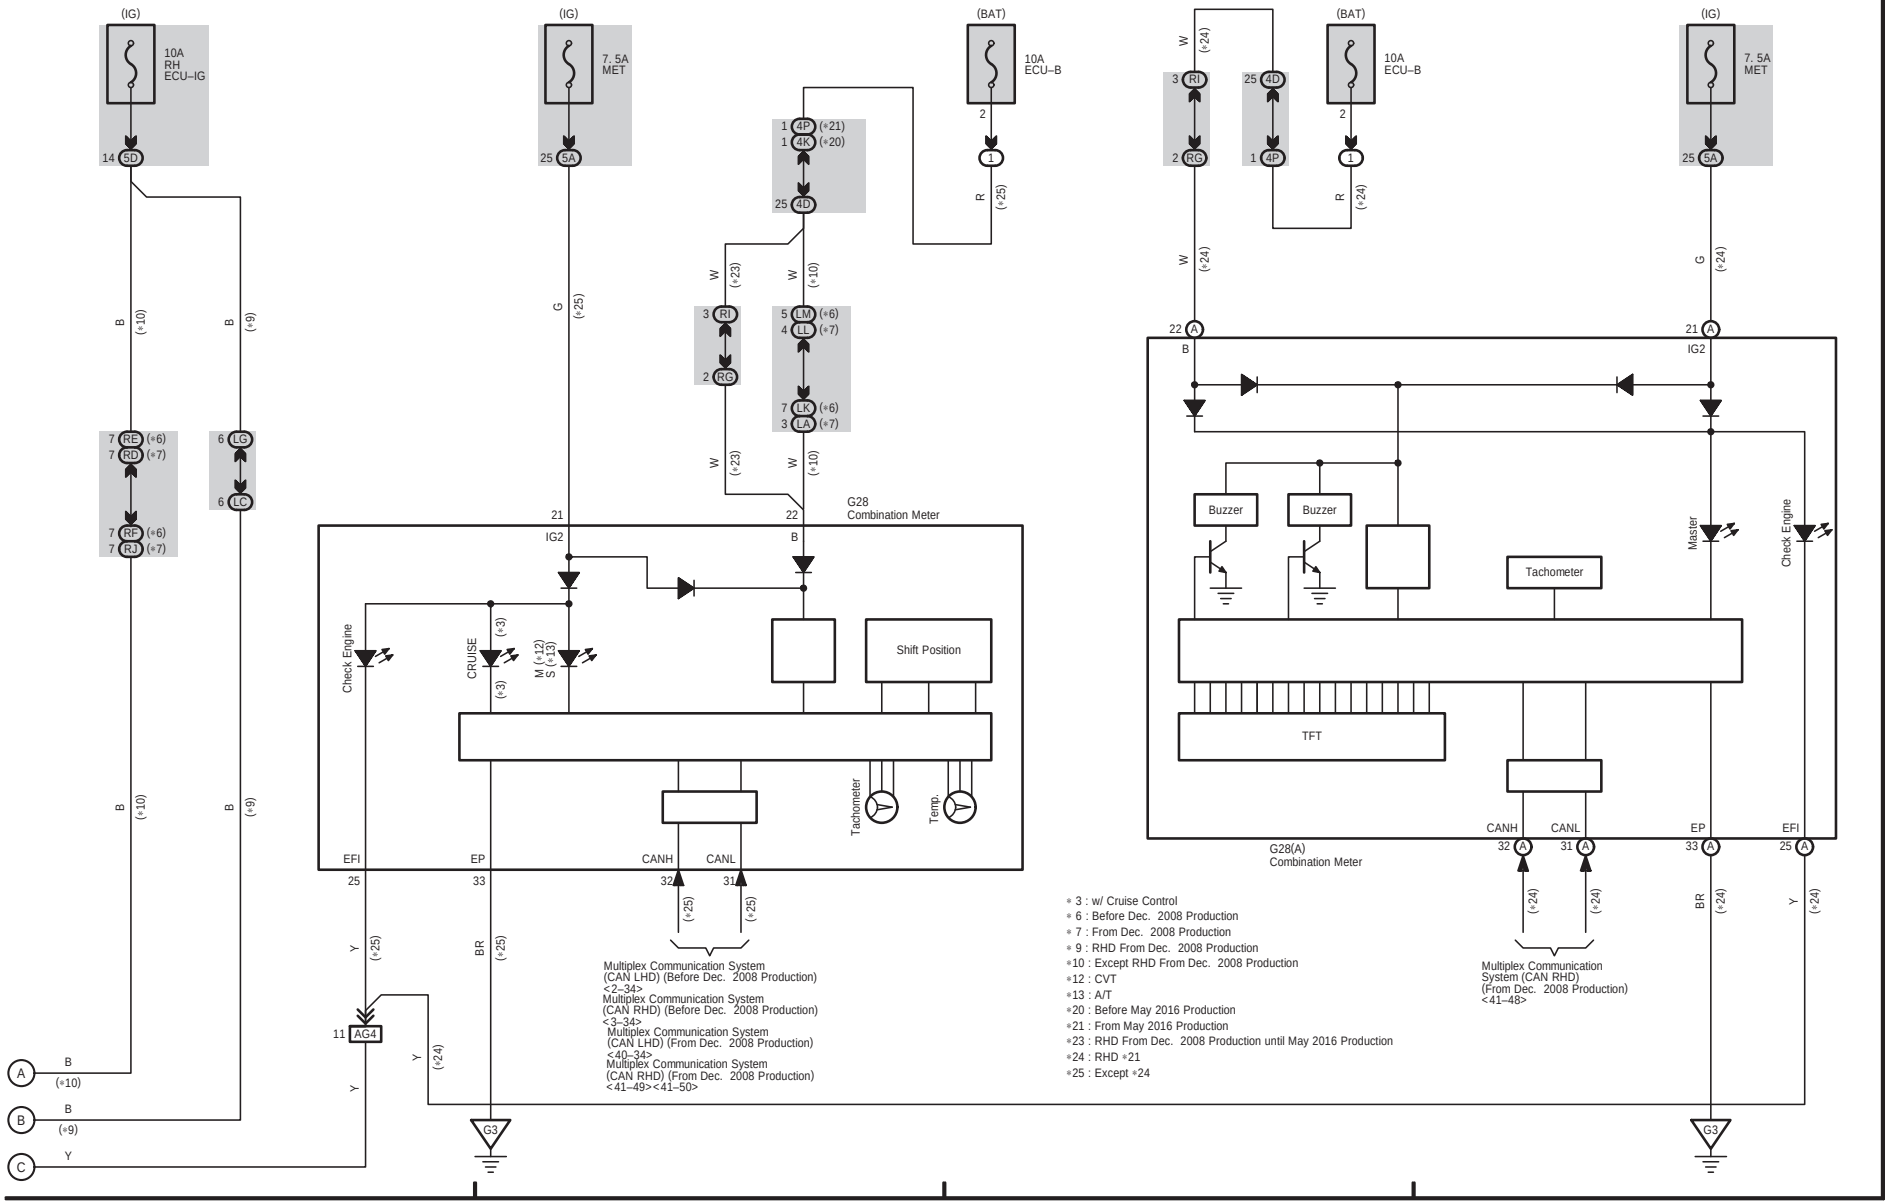

∗ 3 : w/ Cruise Control
∗ 6 : Before Dec. 2008 Production
∗ 7 : From Dec. 2008 Production
∗ 9 : RHD From Dec. 2008 Production
∗10 : Except RHD From Dec. 2008 Production
∗12 : CVT
∗13 : A/T
∗20 : Before May 2016 Production
∗21 : From May 2016 Production
∗23 : RHD From Dec. 2008 Production until May 2016 Production
∗24 : RHD ∗21
∗25 : Except ∗24