

* 5:Before Dec. 2008 Production
* 6:From Dec. 2008 Production
* 7:CVT
* 8:A/T

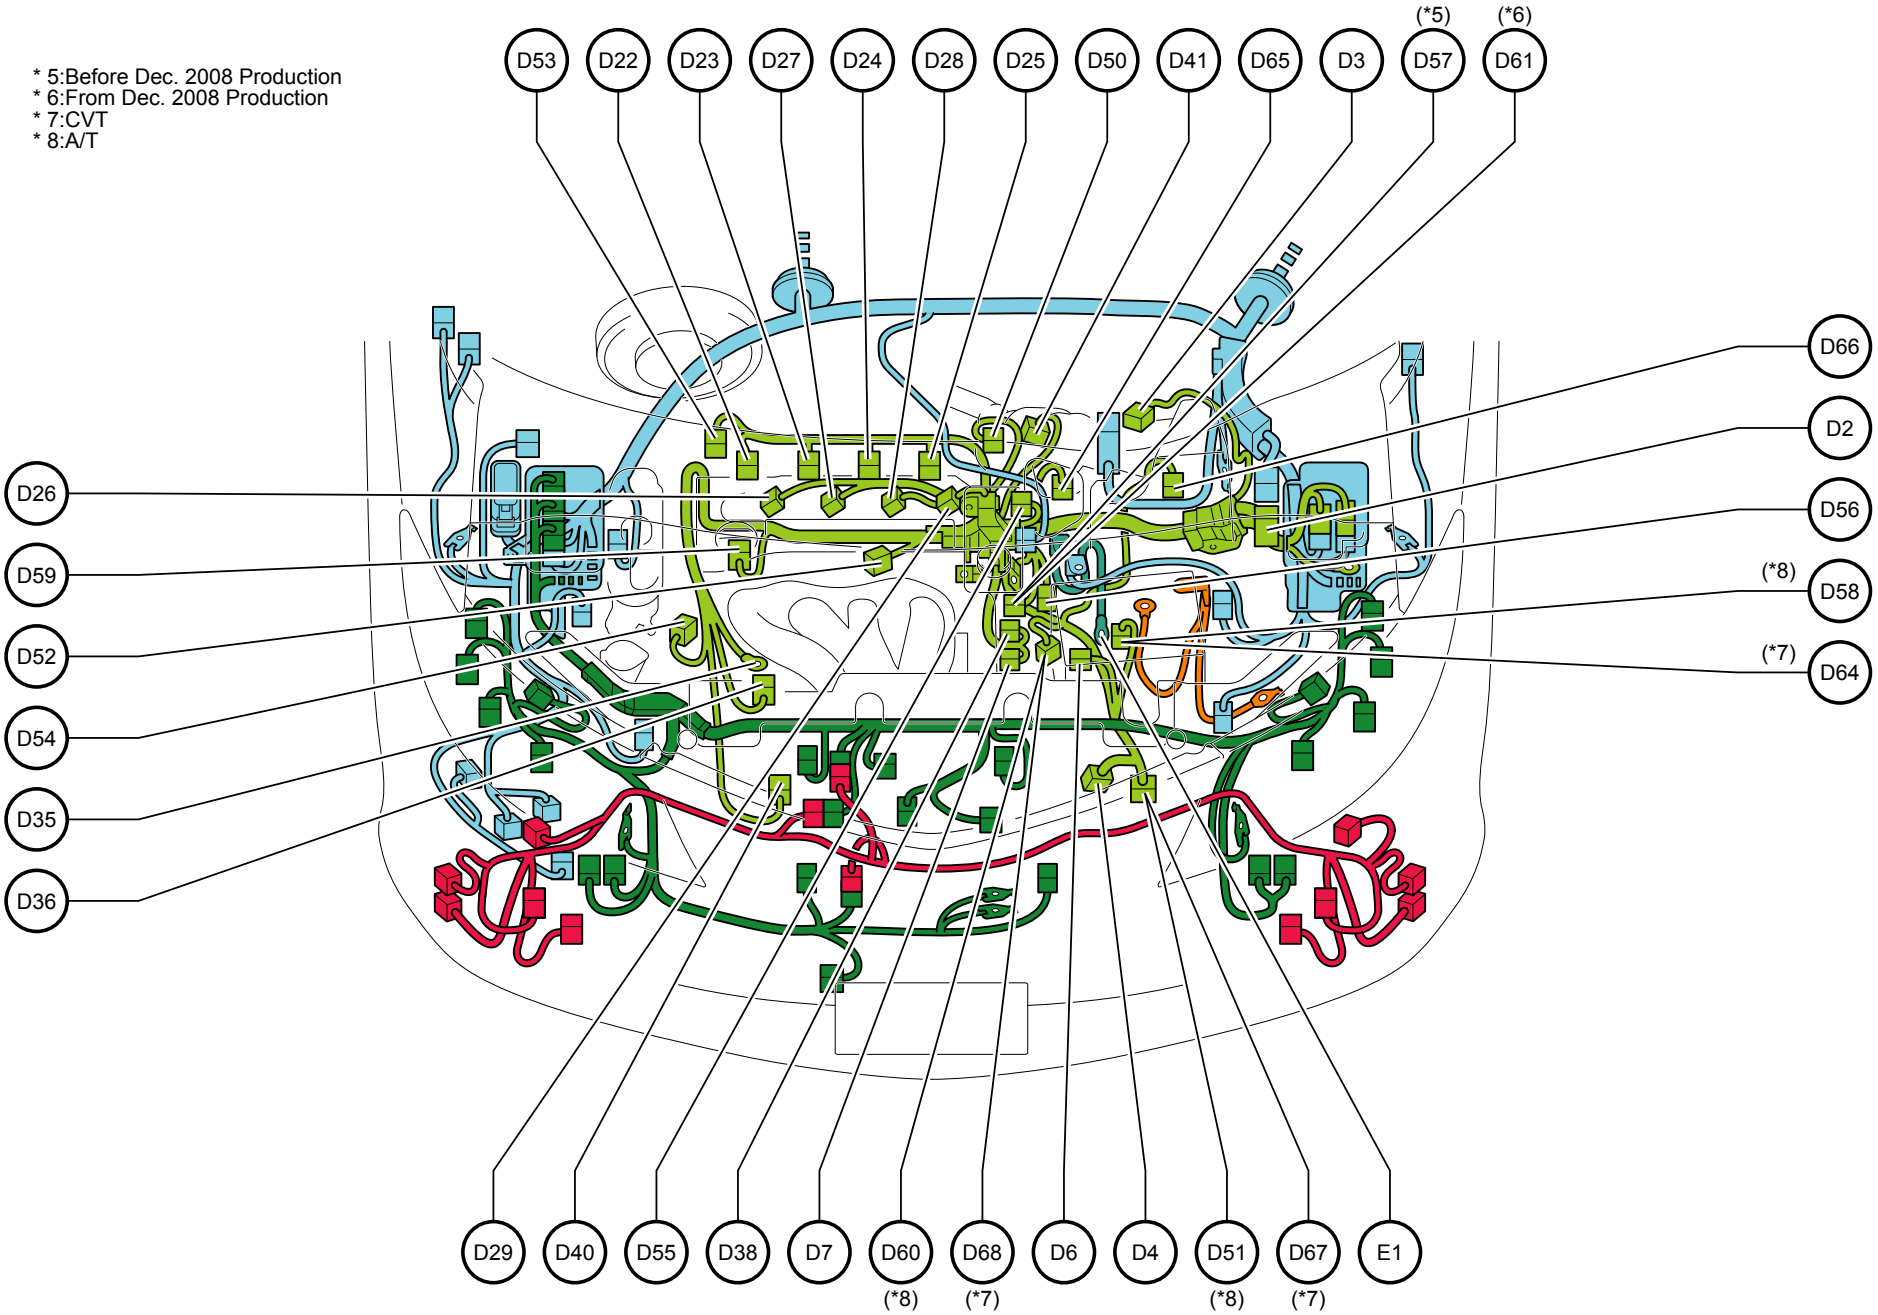


D 2 Engine ECU
D 3 Air Flow Meter
D 4 Park/Neutral Position SW
D 6 Starter
D 7 Water Temp. Sensor
D 22 Fuel Injector (No.1)
D 23 Fuel Injector (No.2)
D 24 Fuel Injector (No.3)
D 25 Fuel Injector (No.4)
D 26 Ignition Coil (No.1)
D 27 Ignition Coil (No.2)
D 28 Ignition Coil (No.3)
D 29 Ignition Coil (No.4)
D 35 Alternator
D 36 Alternator
D 38 Engine Oil Pressure SW
D 40 A/C Compressor
D 41 Throttle Body Assembly
D 50 VSV (Purge)
D 51 ECT Solenoid
D 52 Knock Control Sensor (Bank 1)
D 53 Camshaft Timing Oil Control Valve
D 54 Crankshaft Position Sensor
D 55 Camshaft Position Sensor
D 56 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
D 57 Noise Filter (Ignition)
D 58 Transmission Revolution Sensor (Counter Gear)
D 59 Heated Oxygen Sensor (Bank 1 Sensor 2)
D 60 Transmission Revolution Sensor (Turbine)
D 61 Noise Filter (Ignition)
D 64 Transmission Revolution Sensor (NIN)
D 65 Transmission Revolution Sensor (NOUT)
D 66 Oil Pressure Sensor
D 67 CVT Solenoid
D 68 Transmission Revolution Sensor (NT)

E 1 Starter


D 2
Black

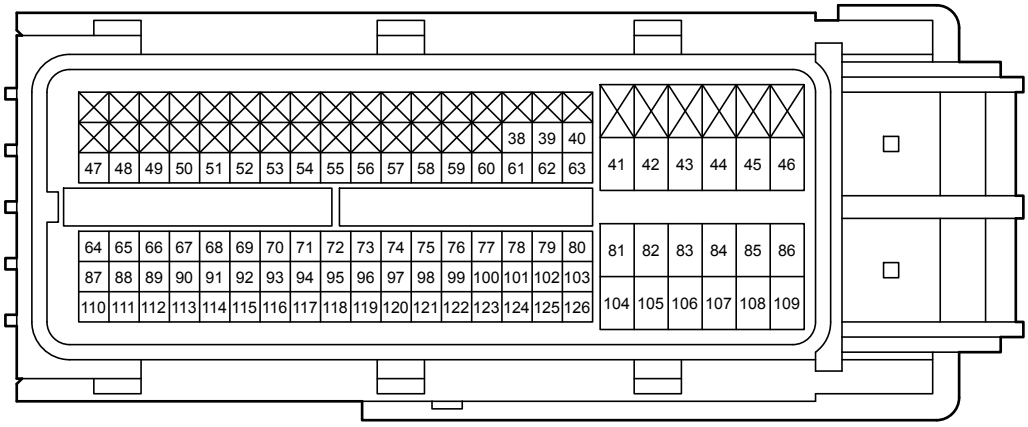

D 3
Black

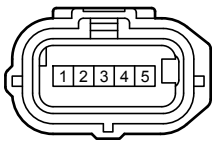

D 4
Gray

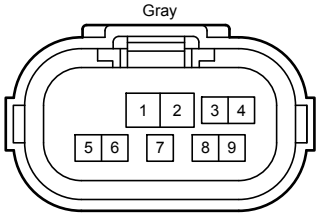


D 6
Black




D 7
Black




D 22
Brown




D 23
Gray

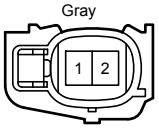


D 24
Brown




D 25
Gray

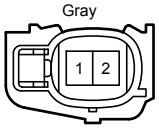


D 26
Black




D 27
Black




D 28
Black



D 29
Black



D 35




D 36
Black



D 38
Gray




D 40
Gray

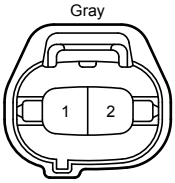


(2AZ-FE)

D 40
Black

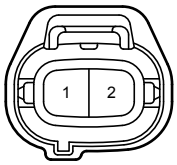


(2GR-FE Before Jun. 2010 Production)


D 41
Black

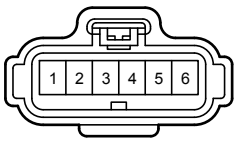


D 50
Black

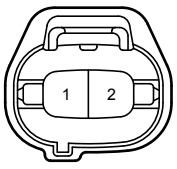

D 51
Gray

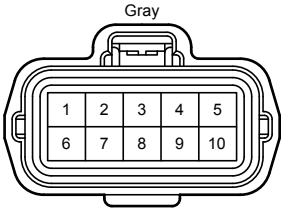


D 52
Black



D 53
Black



D 54
Gray

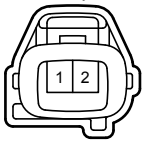


D 55
Black




D 56
Dark Gray



D 57
Gray

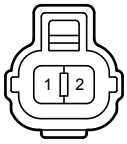


D 58
Black

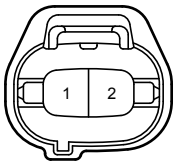


D 59
Dark Gray




D 60
Black

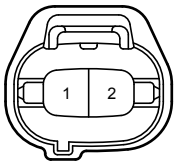


D 61
Gray

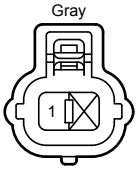


D 64
Black

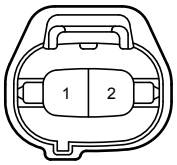


D 65
Black

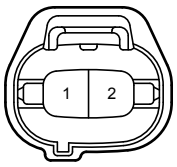


D 66
Black

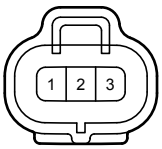

D 67
Gray

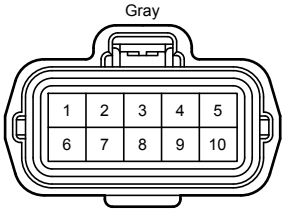

D 68
Black

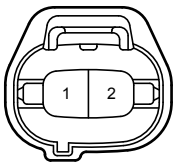

E 1

