



Engine Wire
D2
DU1
Engine No.2 Wire
A4
Engine Room
Main Wire
BA1
BA2
A1
BA3
A2
DA1
Sensor Wire
Engine Room
No.4 Wire
DA2
B2
Engine Room
No.3 Wire
BC1
CB1
B4
B3
D1
B1


BA1
White

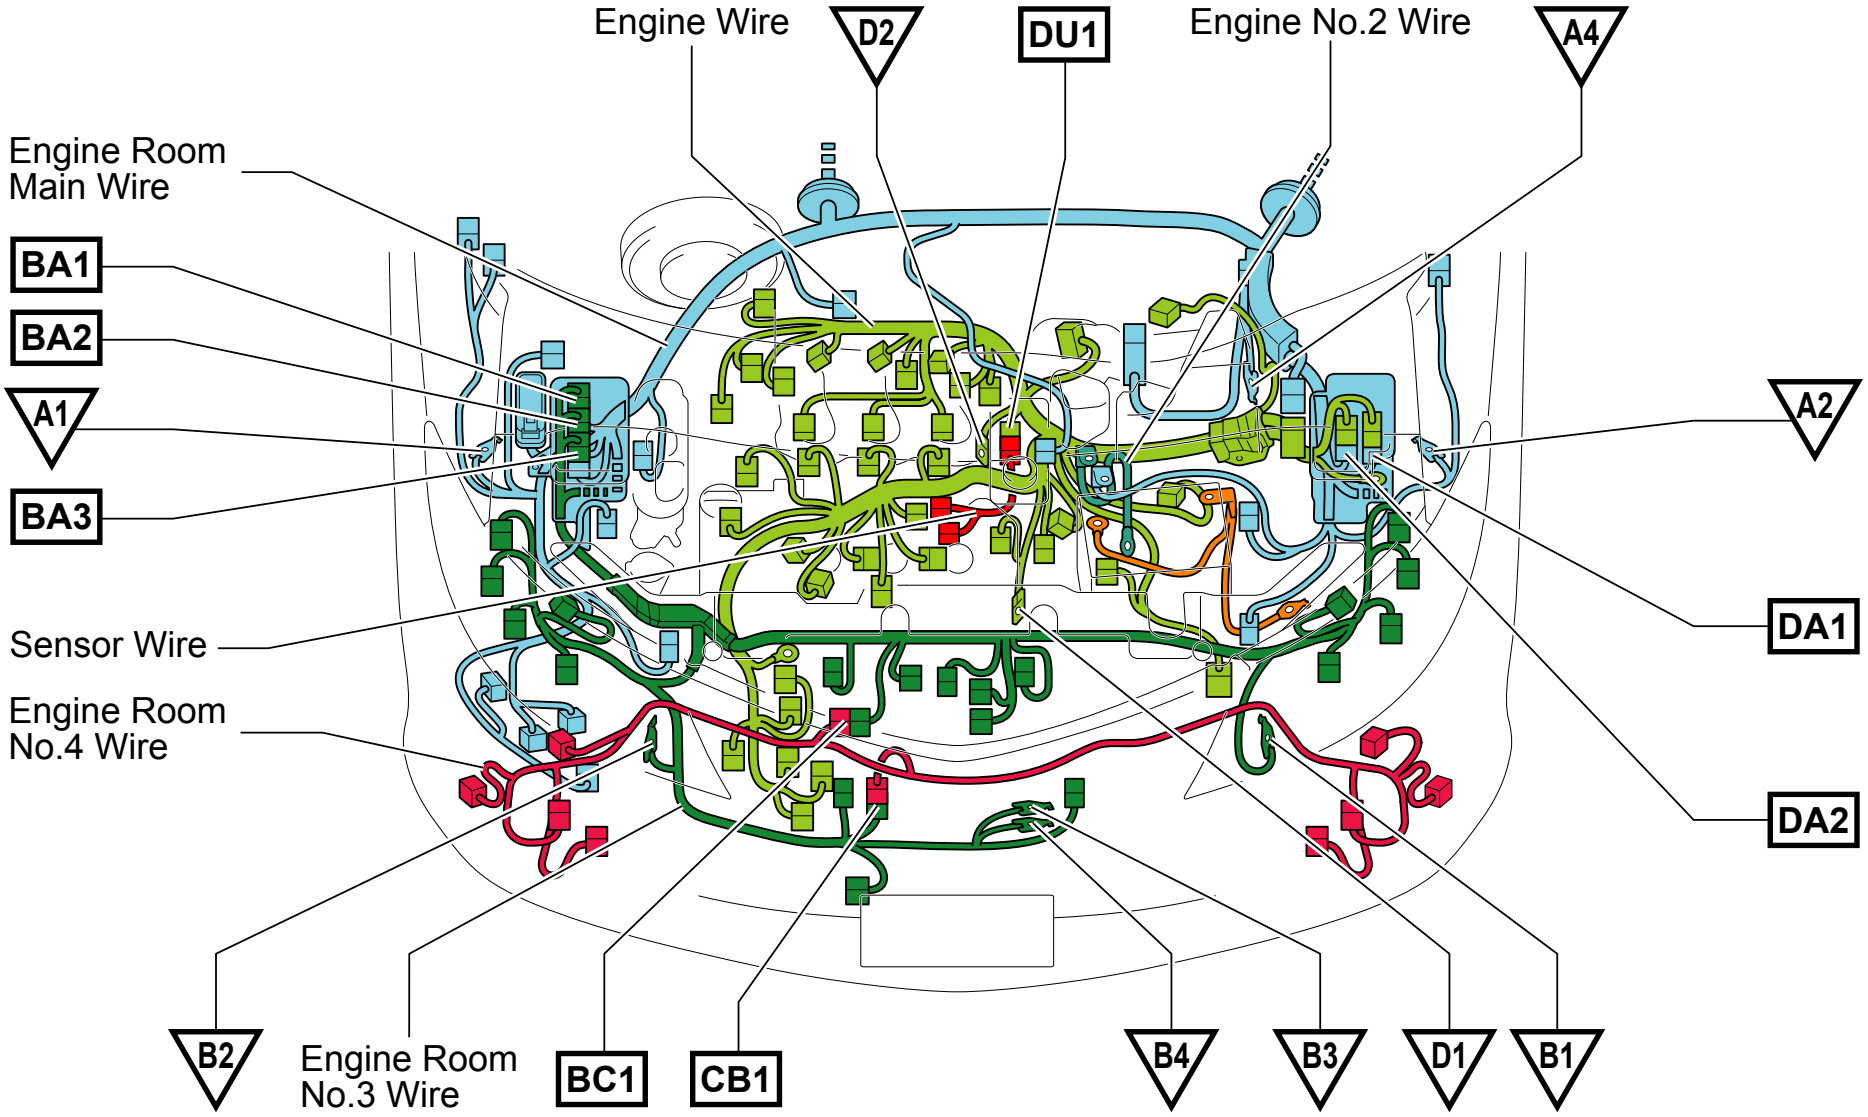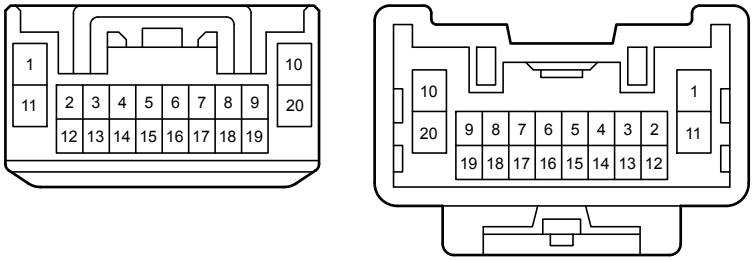


BA2
Gray

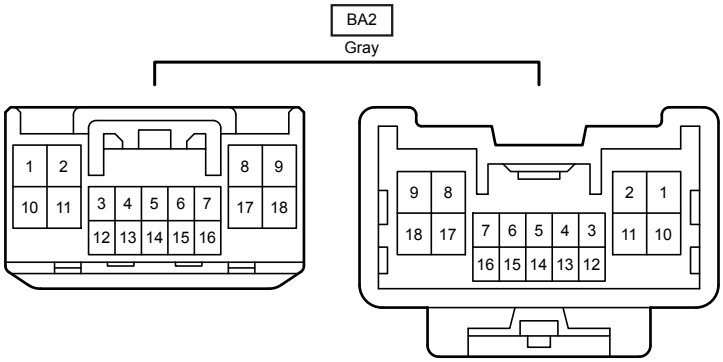


BA3
White

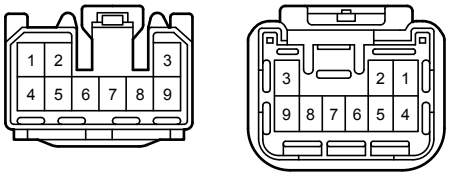


BC1
Black

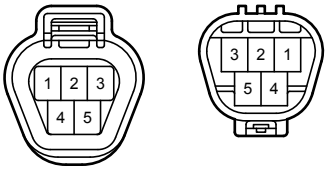


CB1
Gray

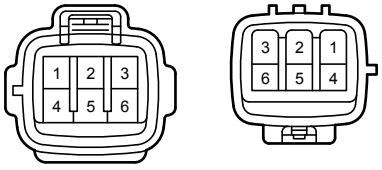


DA1
White

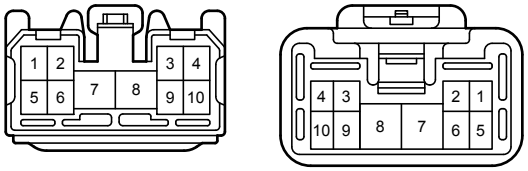

DA2
White

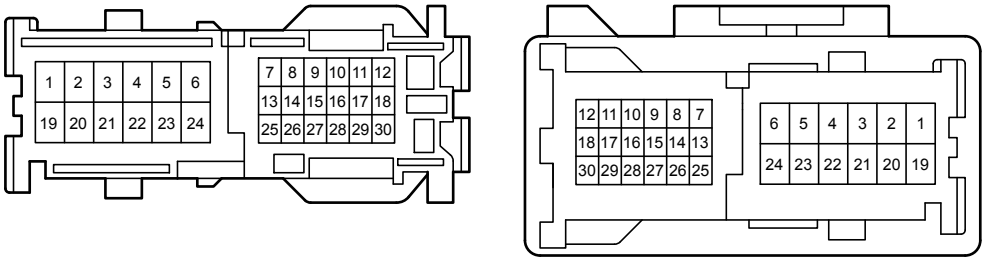

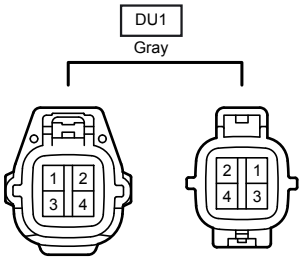
DU1
Gray
1
2
3
4
2
1
4
3