





(BAT)
10A
ECU–B
2
1
R
25 4D
1 4K
W
5 LM
7 LK
W
22
(IG)
7. 5A
MET
25 5A
G
21
Turn Signal Flasher
Y
Y
24
23
G28
Combination Meter
B
B
B
IG2
Security
Turn LH
Turn RH
High Beam
Door
Tail
Fuel
SRS
PCS
Clock
ODO TRIP
Shift Position
LP
EP
H
M
RSET
ODO
TC O
4
33
10
9
8
34
35
V
BR
L
R
W
V
P
(*1)
10 A 8 A 2 A 5 A 4 A (LHD)
4 B 8 B 6 B 1 B 2 B (RHD)
H
M
REST
+
TC
H
M
: 00
ODO
TRIP
Rheostat
E
6 A (LHD)
10 B (RHD)
G46(A), (B)
Trip SW
W–B
W–B
12 LM
11 LF
Certification ECU (*2)
Transponder Key ECU
(w/o Power Switch)
7
G65
Junction
Connector
G3
G1



∗ 1 : w/ Rheostat
∗ 2 : w/ Power Switch
∗ 3 : w/ Navigation System
∗ 4 : w/ Parking Assist (TOYOTA Parking Assist–Sensor)
∗ 5 : w/o Parking Assist (TOYOTA Parking Assist–Sensor)
∗ 6 : Middle East
∗ 7 : 2GR–FE
Clearance Warning Indicator (∗4)
Passenger Seat Belt Warning Lamp (∗5)
Front Seat Inner Belt (LH)
Front Seat Inner Belt (RH)
SB
G
G28
Combination Meter
6
29
PBLT
P/SB
Front Fog
Rear Fog
EPS
CRUISE
AFS OFF
S
120km/h
(∗6)
Electronic Key
Driver' s Seat Belt
Speedometer
Tachometer
Fuel
Temp.
I/F
+S
SI
40
39
W
V
25 AG3
2 AG4
3 RH
3 RF
3 RG
3 RD
3 RI
B
(∗7)
(∗3)
(∗4)
(∗2)
27 DA2
3
SPD
SPD1
G49
Navigation Receiver Assembly
G23
Clearance Warning ECU
D5
Transmission Control ECU
V
W(∗2)
B

∗ 2 : w/ Power Switch
∗ 7 : 2GR–FE
∗ 8 : 2AZ–FE

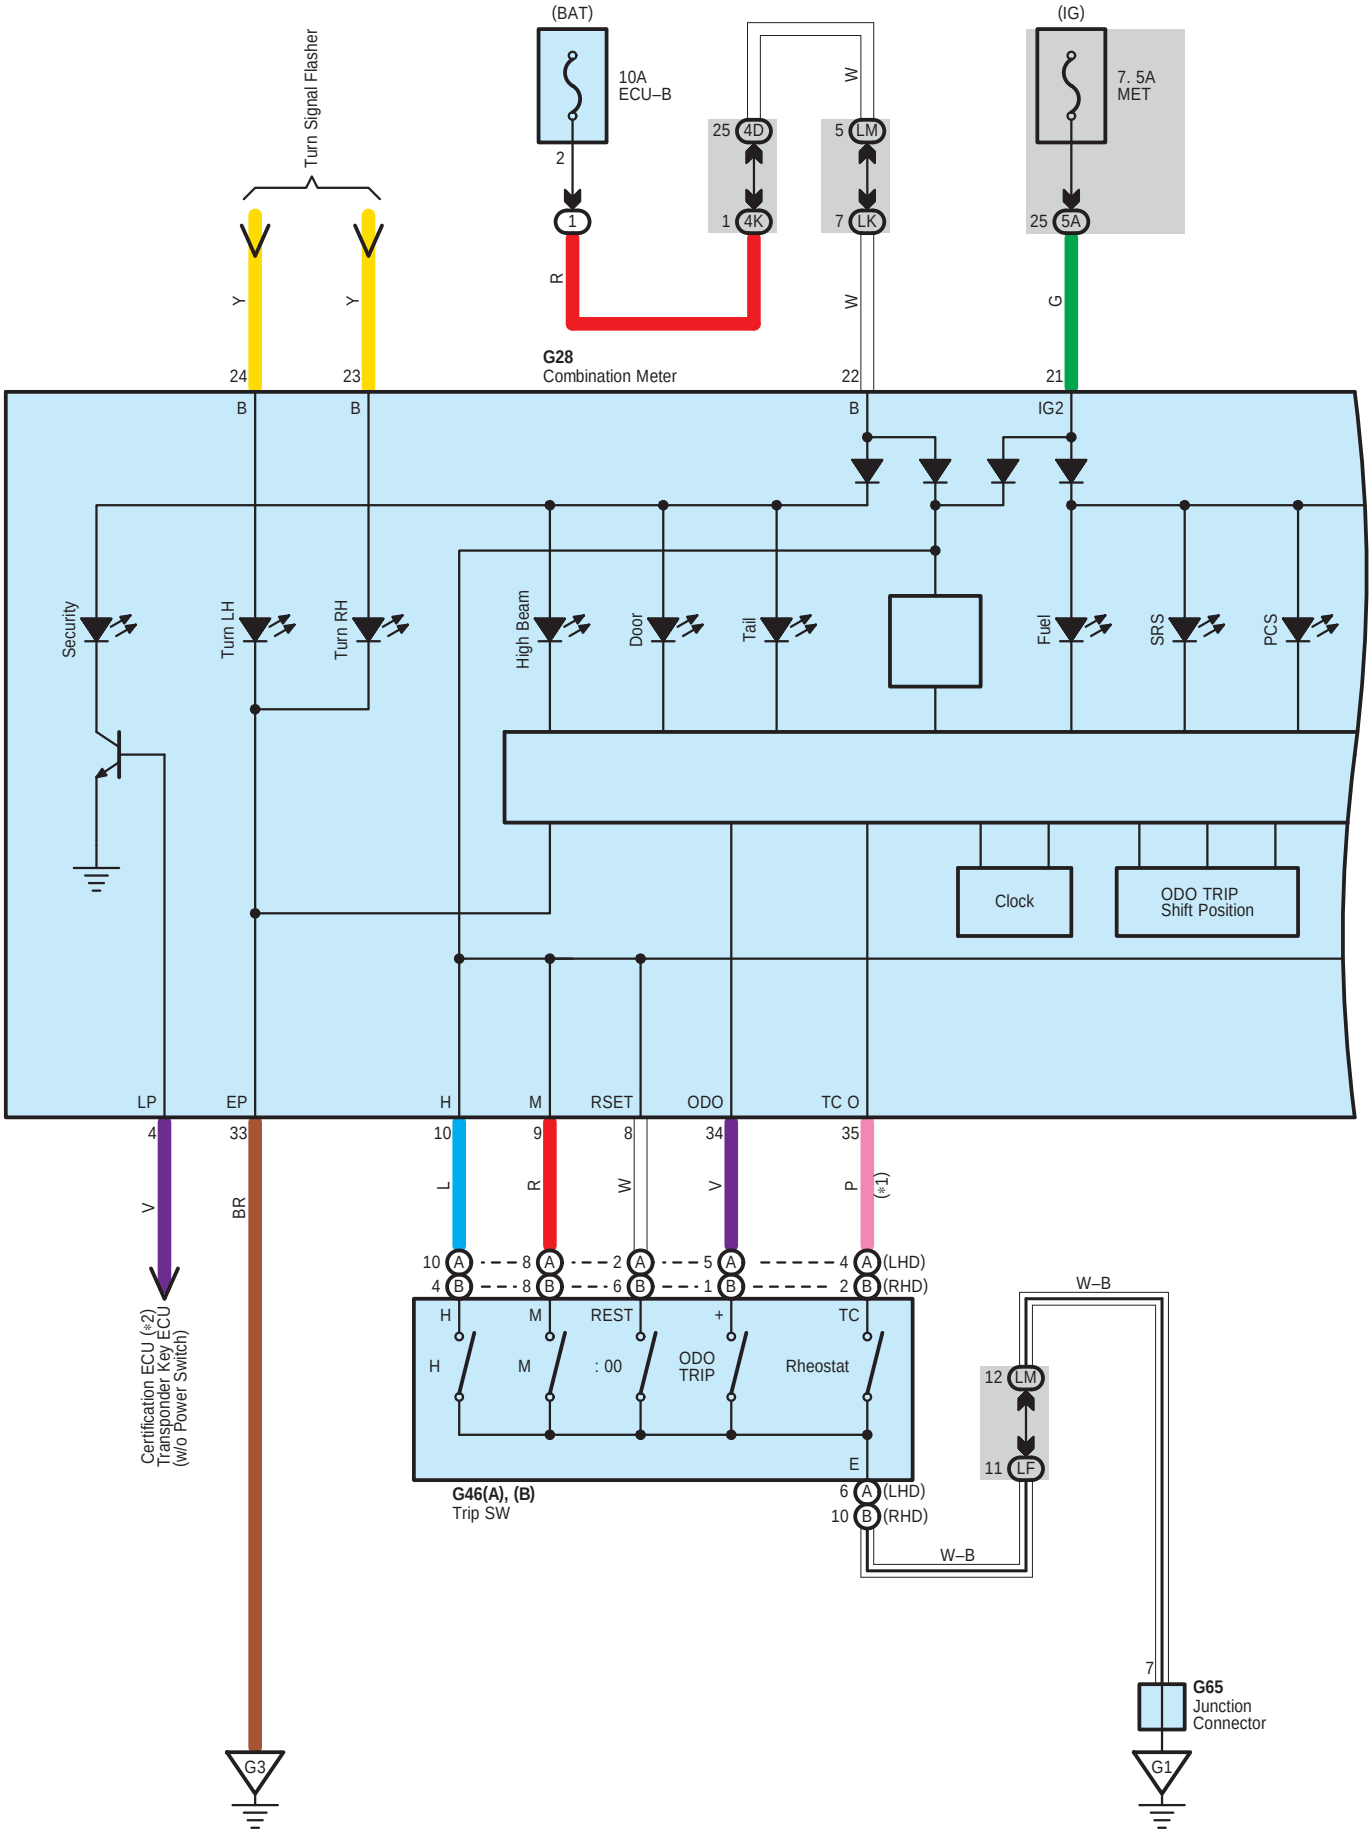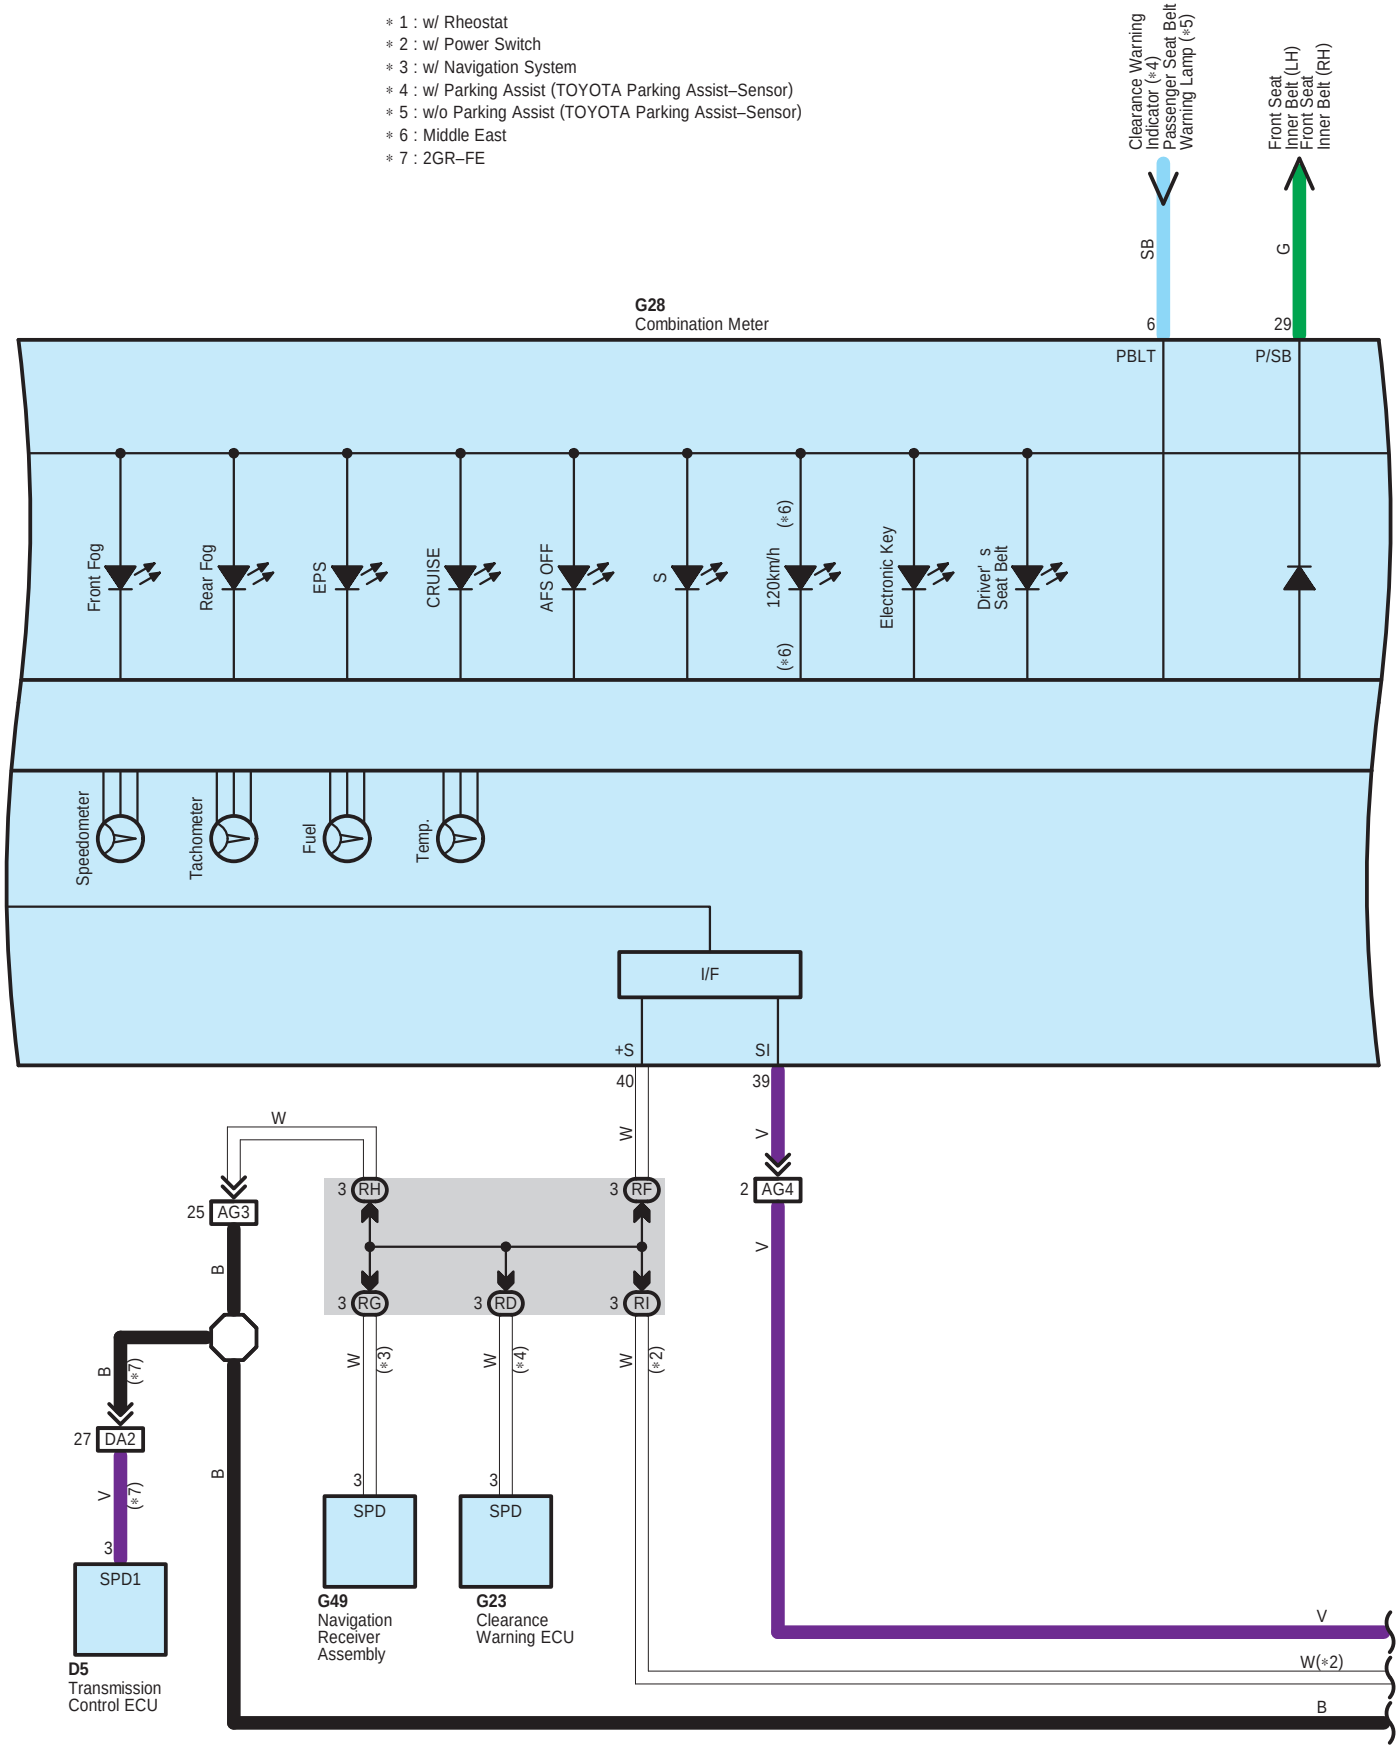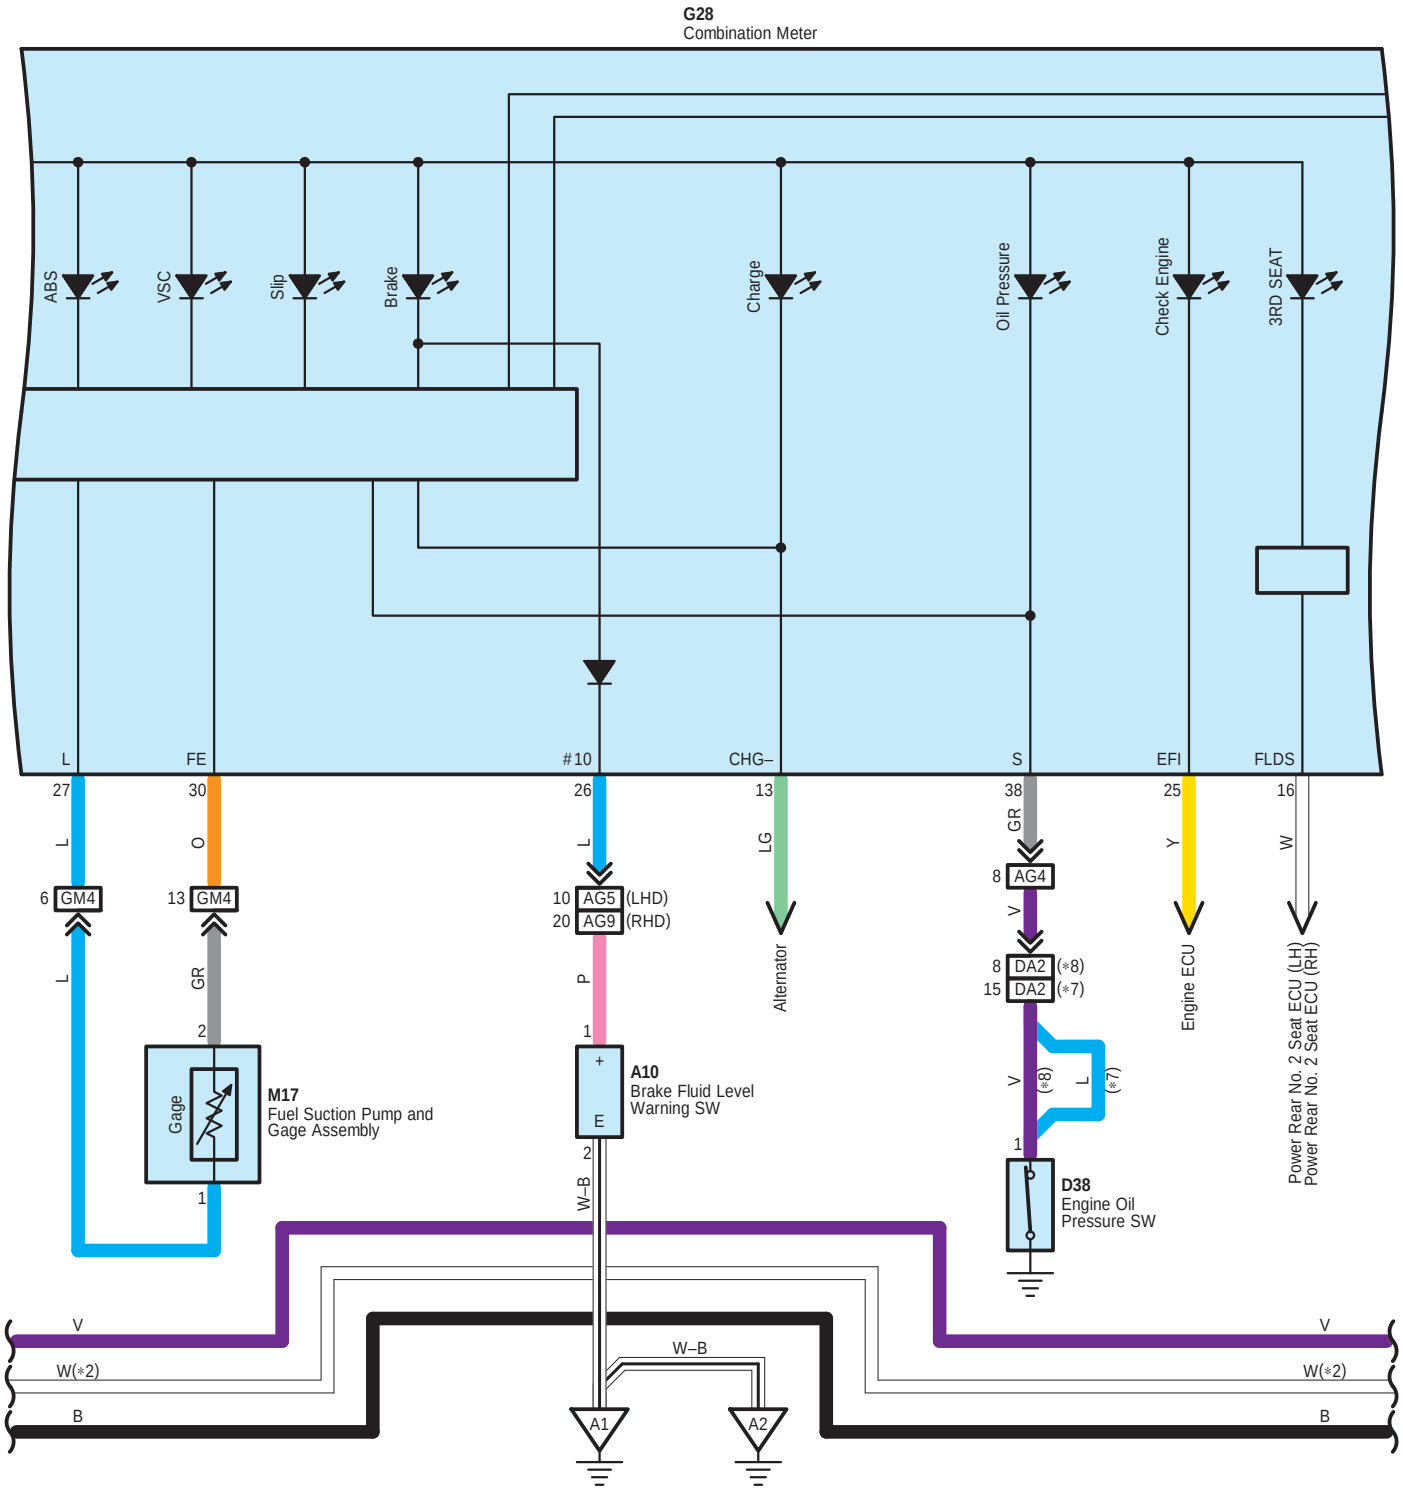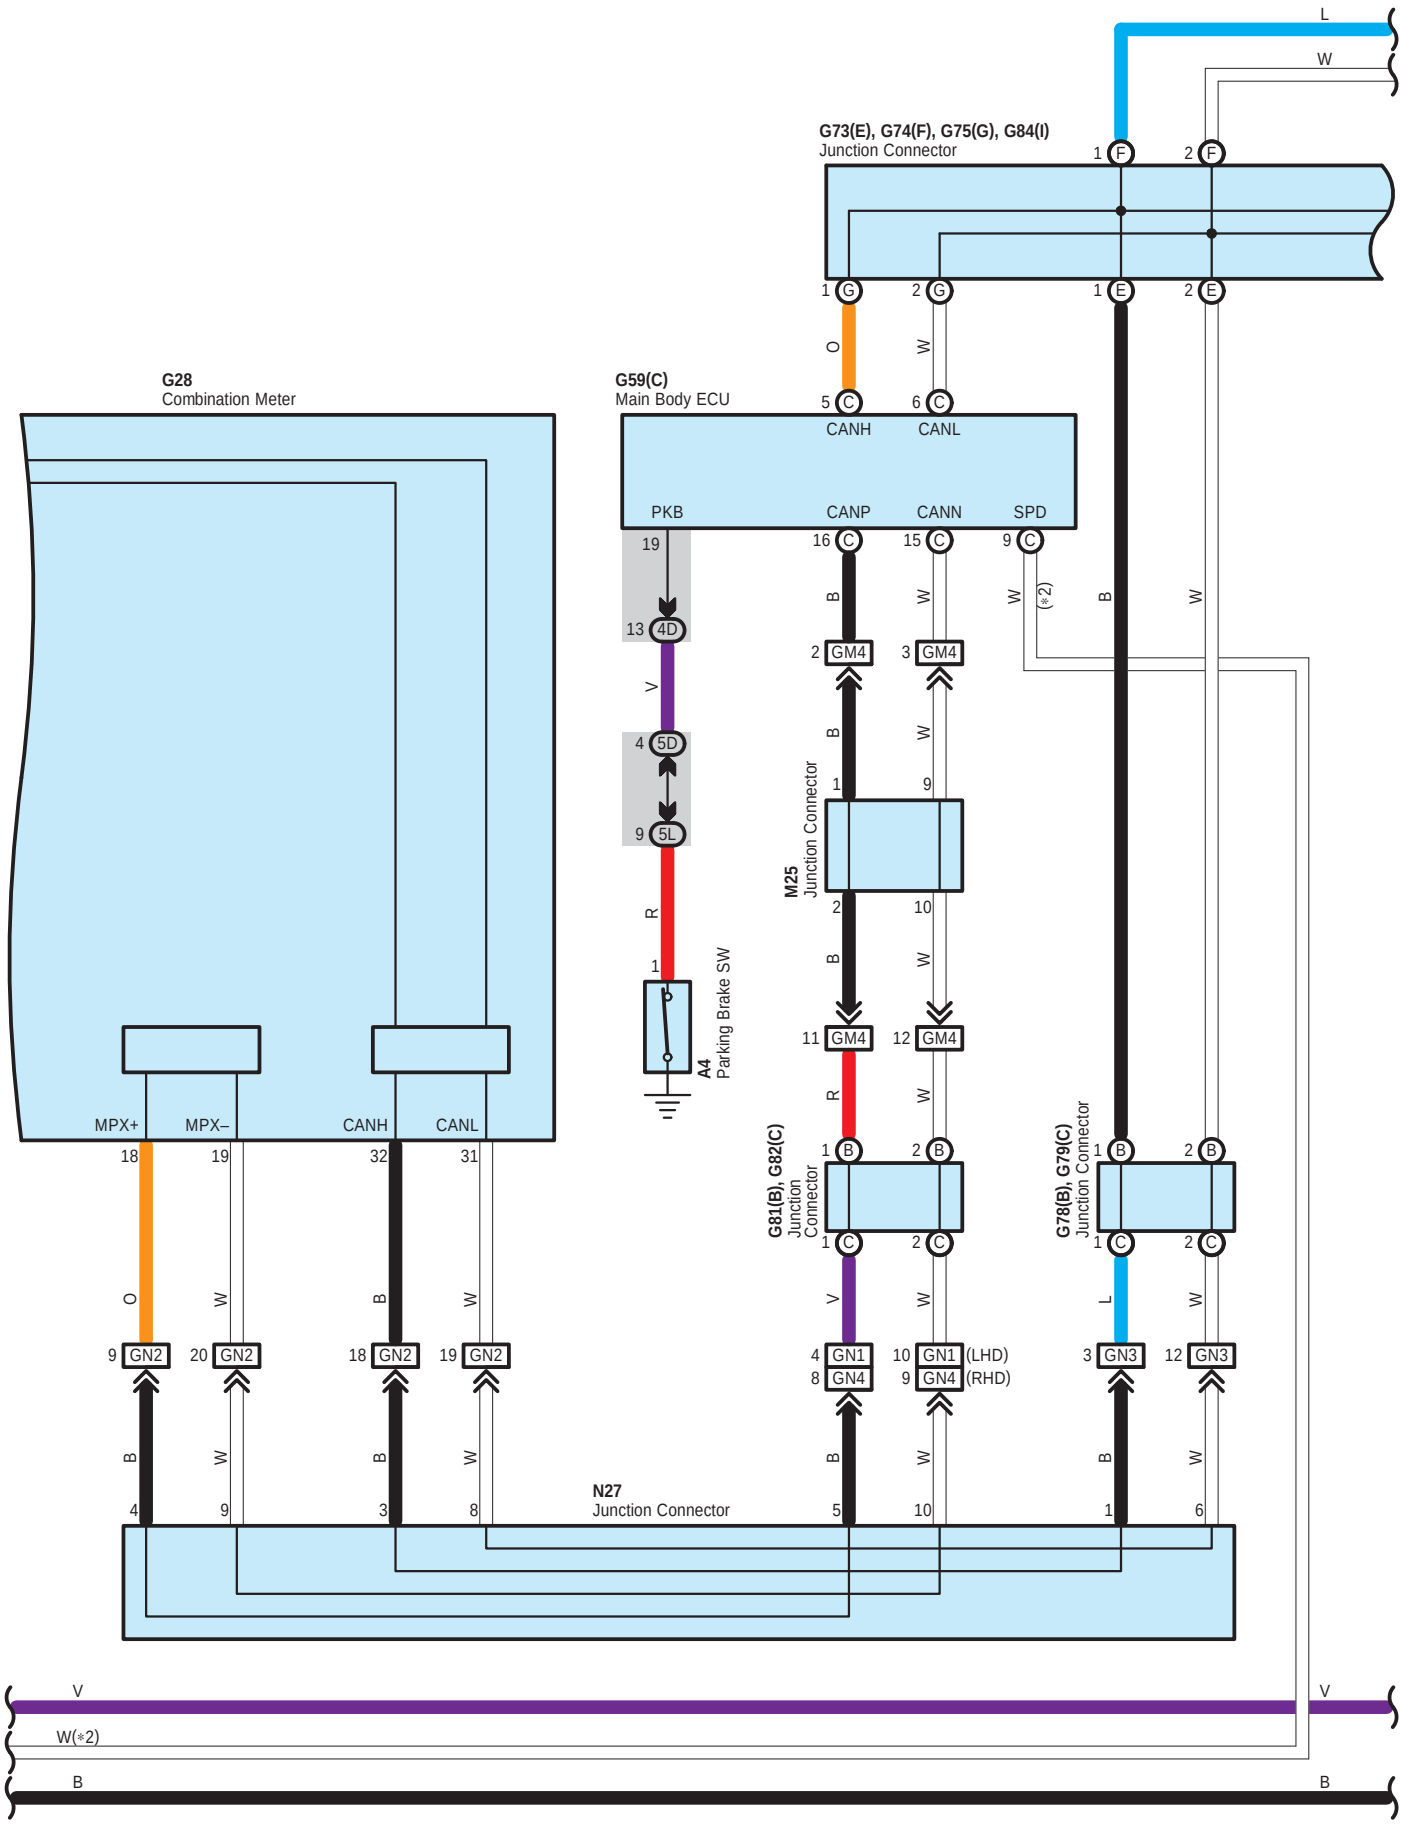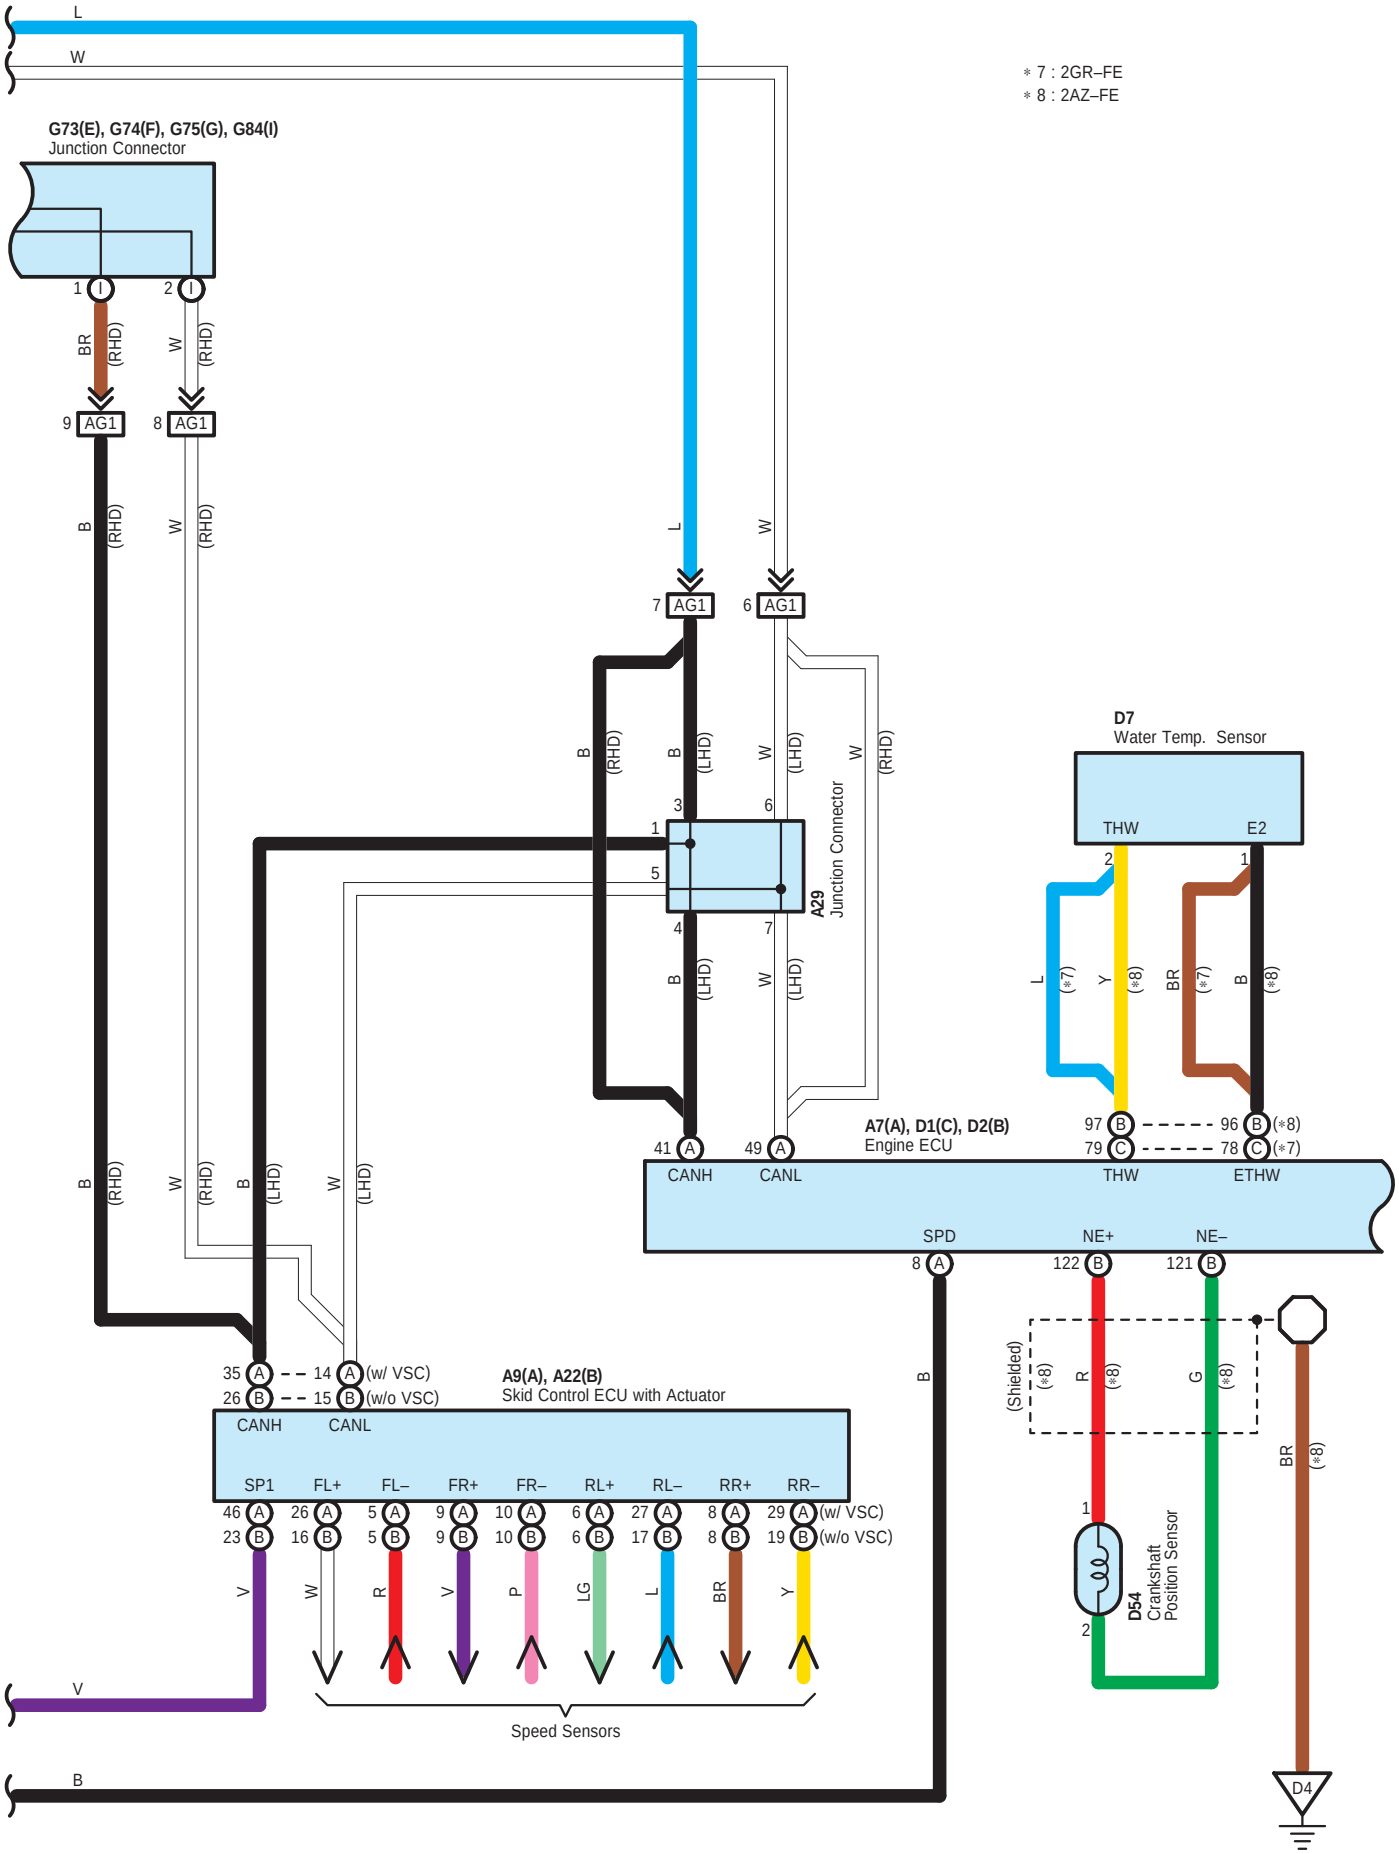


L
W
G73(E), G74(F), G75(G), G84(I)
Junction Connector
1 F
2 F
1 G
2 G
1 E
2 E
O
W
G28
Combination Meter
G59(C)
Main Body ECU
5 C
6 C
CANH
CANL
PKB
CANP
CANN
SPD
19
16 C
15 C
9 C
13 4D
2 GM4
3 GM4
V
4 5D
9 5L
B
W
(*2)
M25
Junction Connector
R
1
A4
Parking Brake SW
2
10
11 GM4
12 GM4
MPX+
MPX–
CANH
CANL
18
19
32
31
G81(B), G82(C)
Junction Connector
G78(B), G79(C)
Junction Connector
1 B
2 B
1 C
2 C
L
9 GN2
20 GN2
18 GN2
19 GN2
4 GN1
8 GN4
10 GN1 (LHD)
9 GN4 (RHD)
3 GN3
12 GN3
N27
Junction Connector
4
9
3
8
5
10
1
6
V
W(*2)
B



∗ 7 : 2GR–FE
∗ 8 : 2AZ–FE
G73(E), G74(F), G75(G), G84(I)
Junction Connector
A29
Junction Connector
D7
Water Temp. Sensor
THW
E2
A7(A), D1(C), D2(B)
Engine ECU
CANH
CANL
THW
ETHW
SPD
NE+
NE–
A9(A), A22(B)
Skid Control ECU with Actuator
(w/ VSC)
(w/o VSC)
SP1
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
Speed Sensors
(Shielded)
D54
Crankshaft
Position Sensor
D4

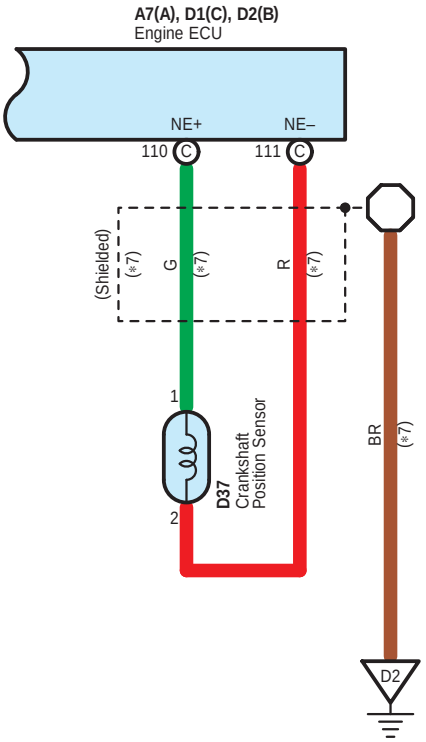
A7(A), D1(C), D2(B)
Engine ECU
NE+
NE–
110
C
111
C
(Shielded)
(*7)
G
(*7)
R
(*7)
1
2
D37
Crankshaft
Position Sensor
BR
(*7)
D2


A 4
White



A 7
Black

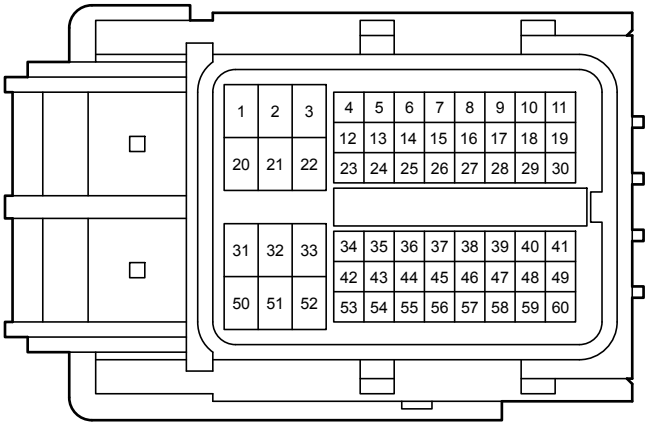


A 9
Black

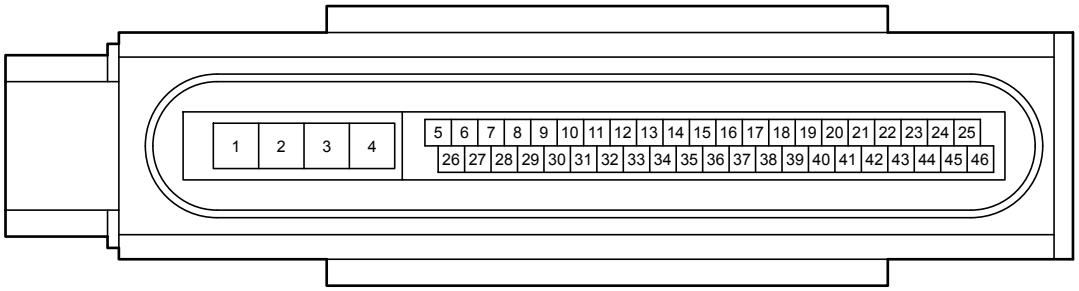


A 10
Gray




A 22
Black

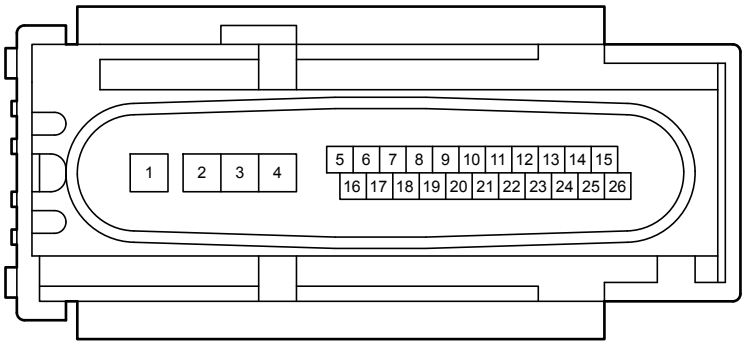


A 29
White

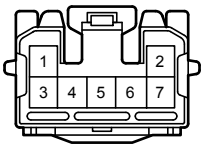


D 1
Black

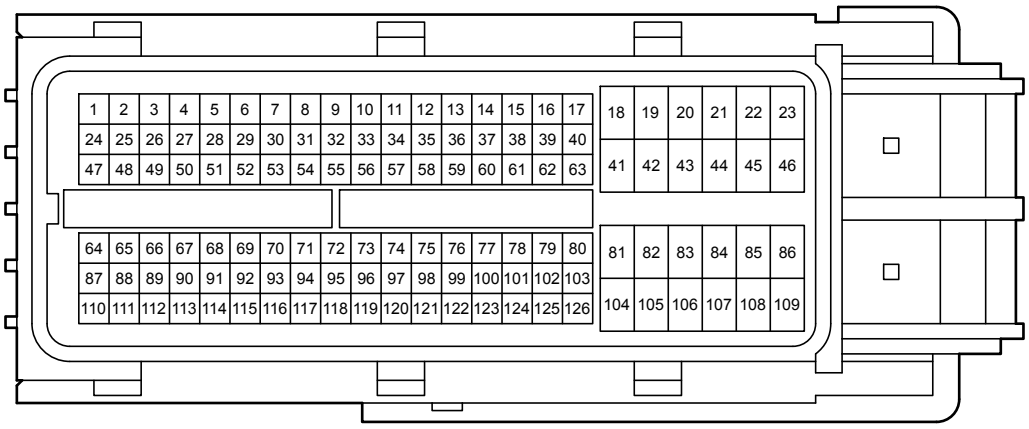

D 2
Black

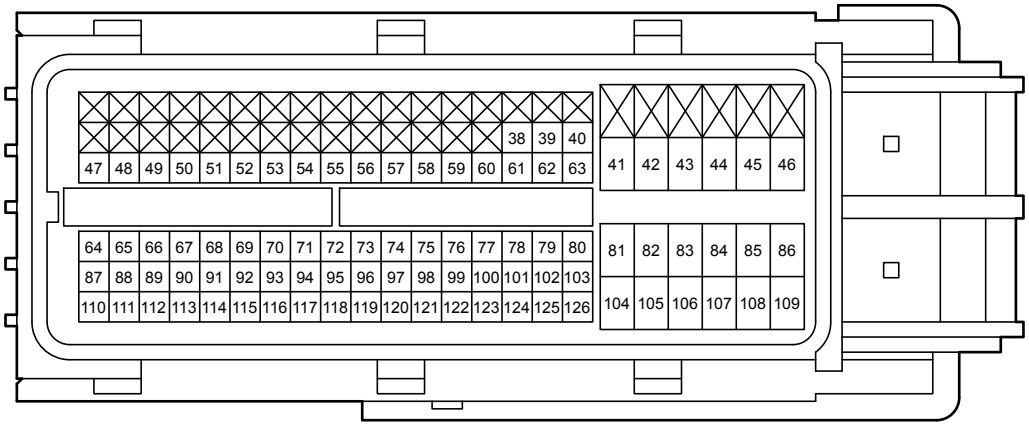


D 5
Black

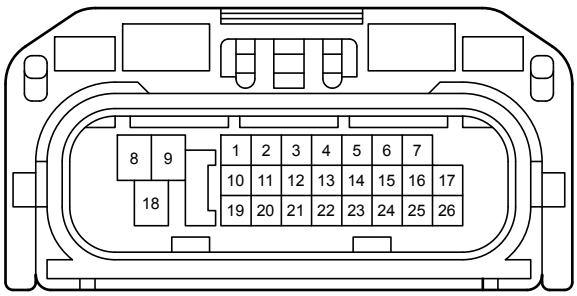

D 7
Black



D 37
Black

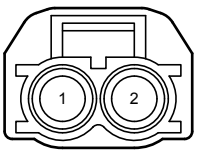


D 38
Gray




D 54
Gray




G 23
White

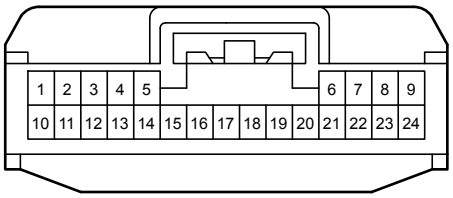


G 28
White

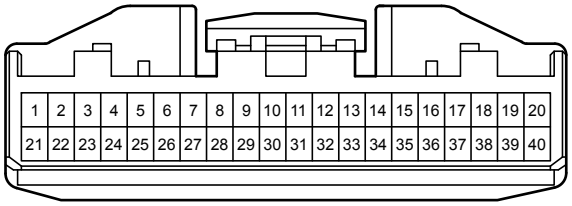


G 46
White

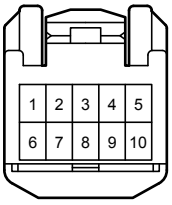


G 49
Gray

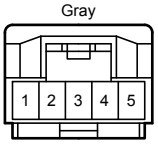


G 59
White

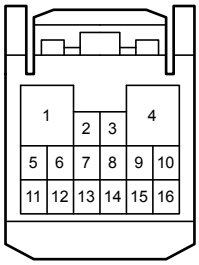


G 65
Black

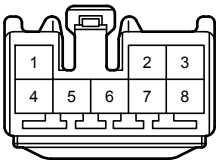


G 73
White




G 74
White




G 75
White




G 78
White




G 79
White




G 81
White



G 82
White




G 84
White




M 17
White




M 25
White

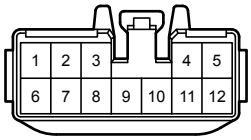


N 27
Black



4D
White

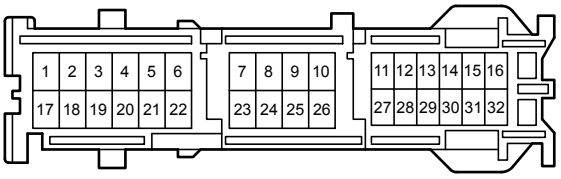


4K
Gray

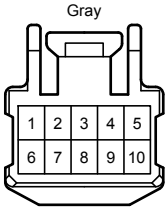


(Before Dec. 2008 Production)

4K
Blue

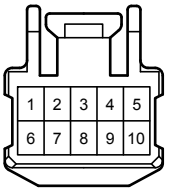


(From Dec. 2008 Production until May 2016 Production)


5A
White

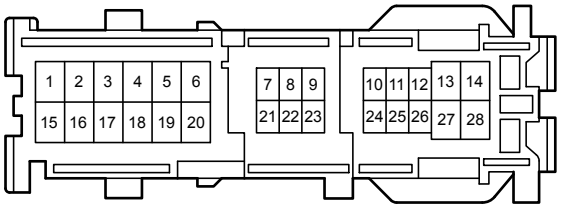

5D
White

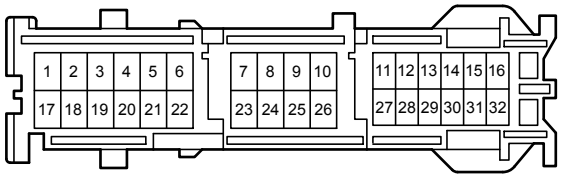


5L
Gray

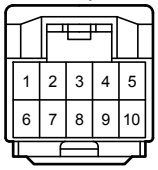


(Before Dec. 2008 Production)

5L
White

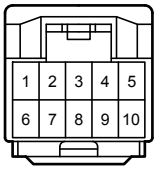


(From Dec. 2008 Production until May 2016 Production, From May 2016 Production)


LF
Gray




LK
White




LM
White




RD
Gray




RF
Gray




RG
White




RH
Gray




RI
White




AG1
White

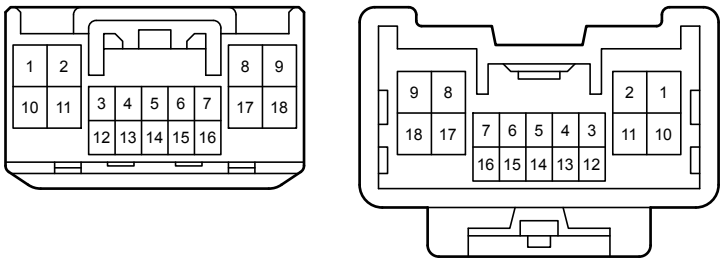


AG3
Gray

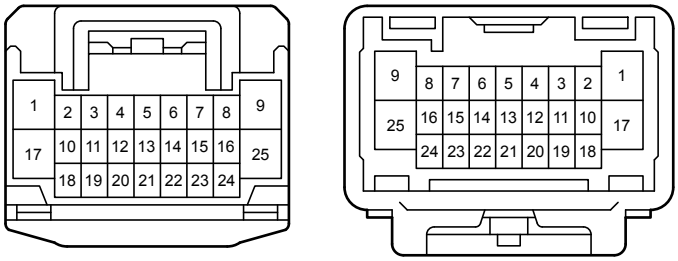


AG4
Blue

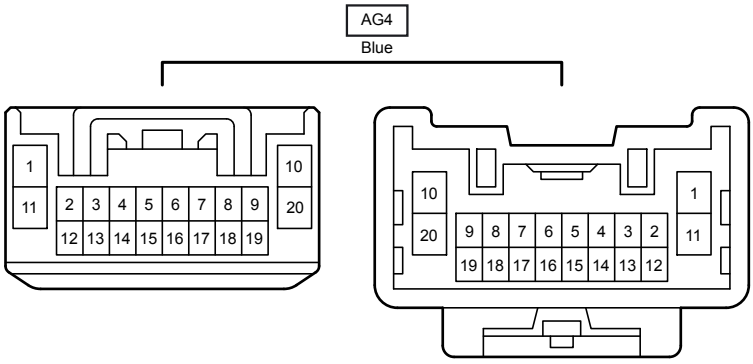


AG5
Blue

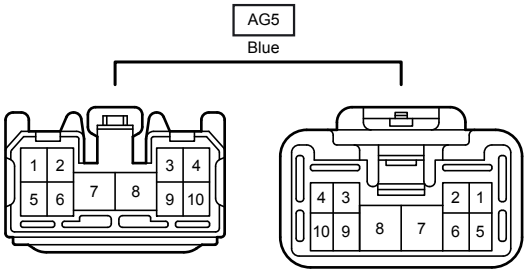


AG9
Blue

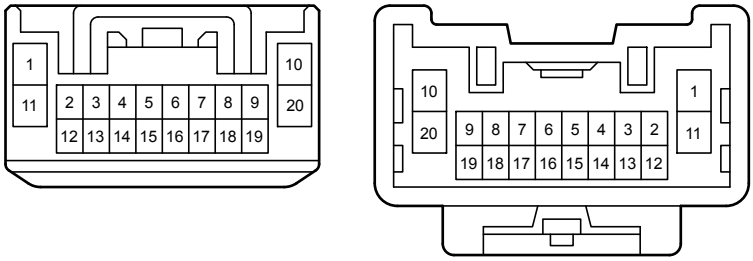


DA2
White

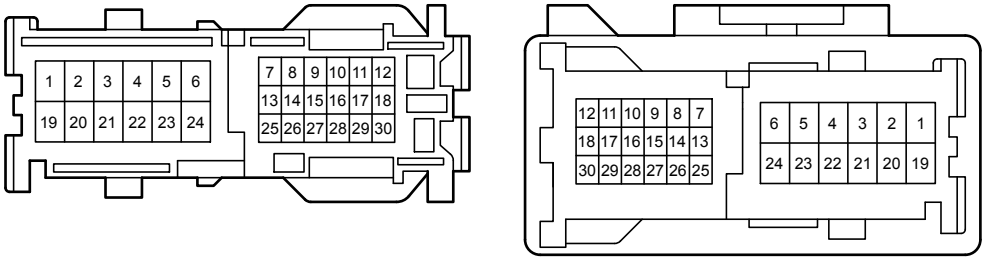


GM4
White

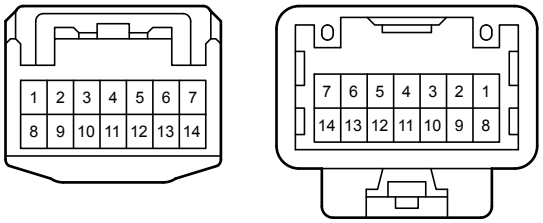


GN1
Black

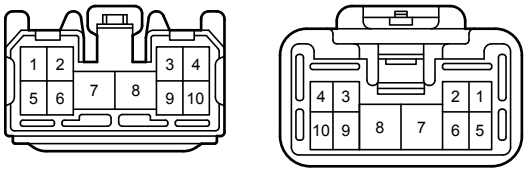

GN2
White

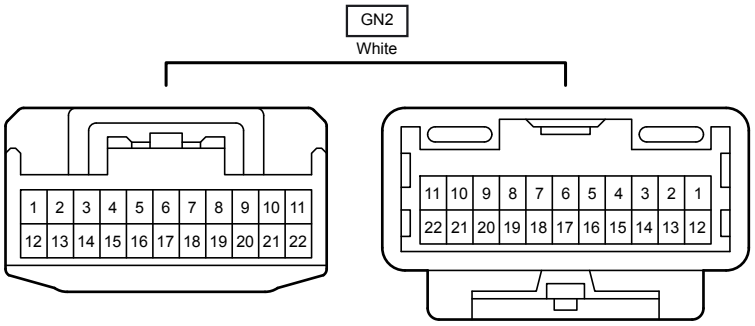

GN3
White

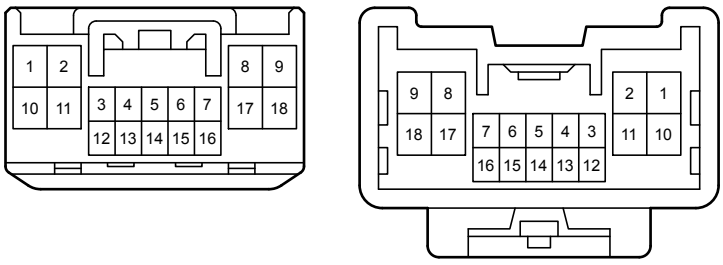

GN4
White

