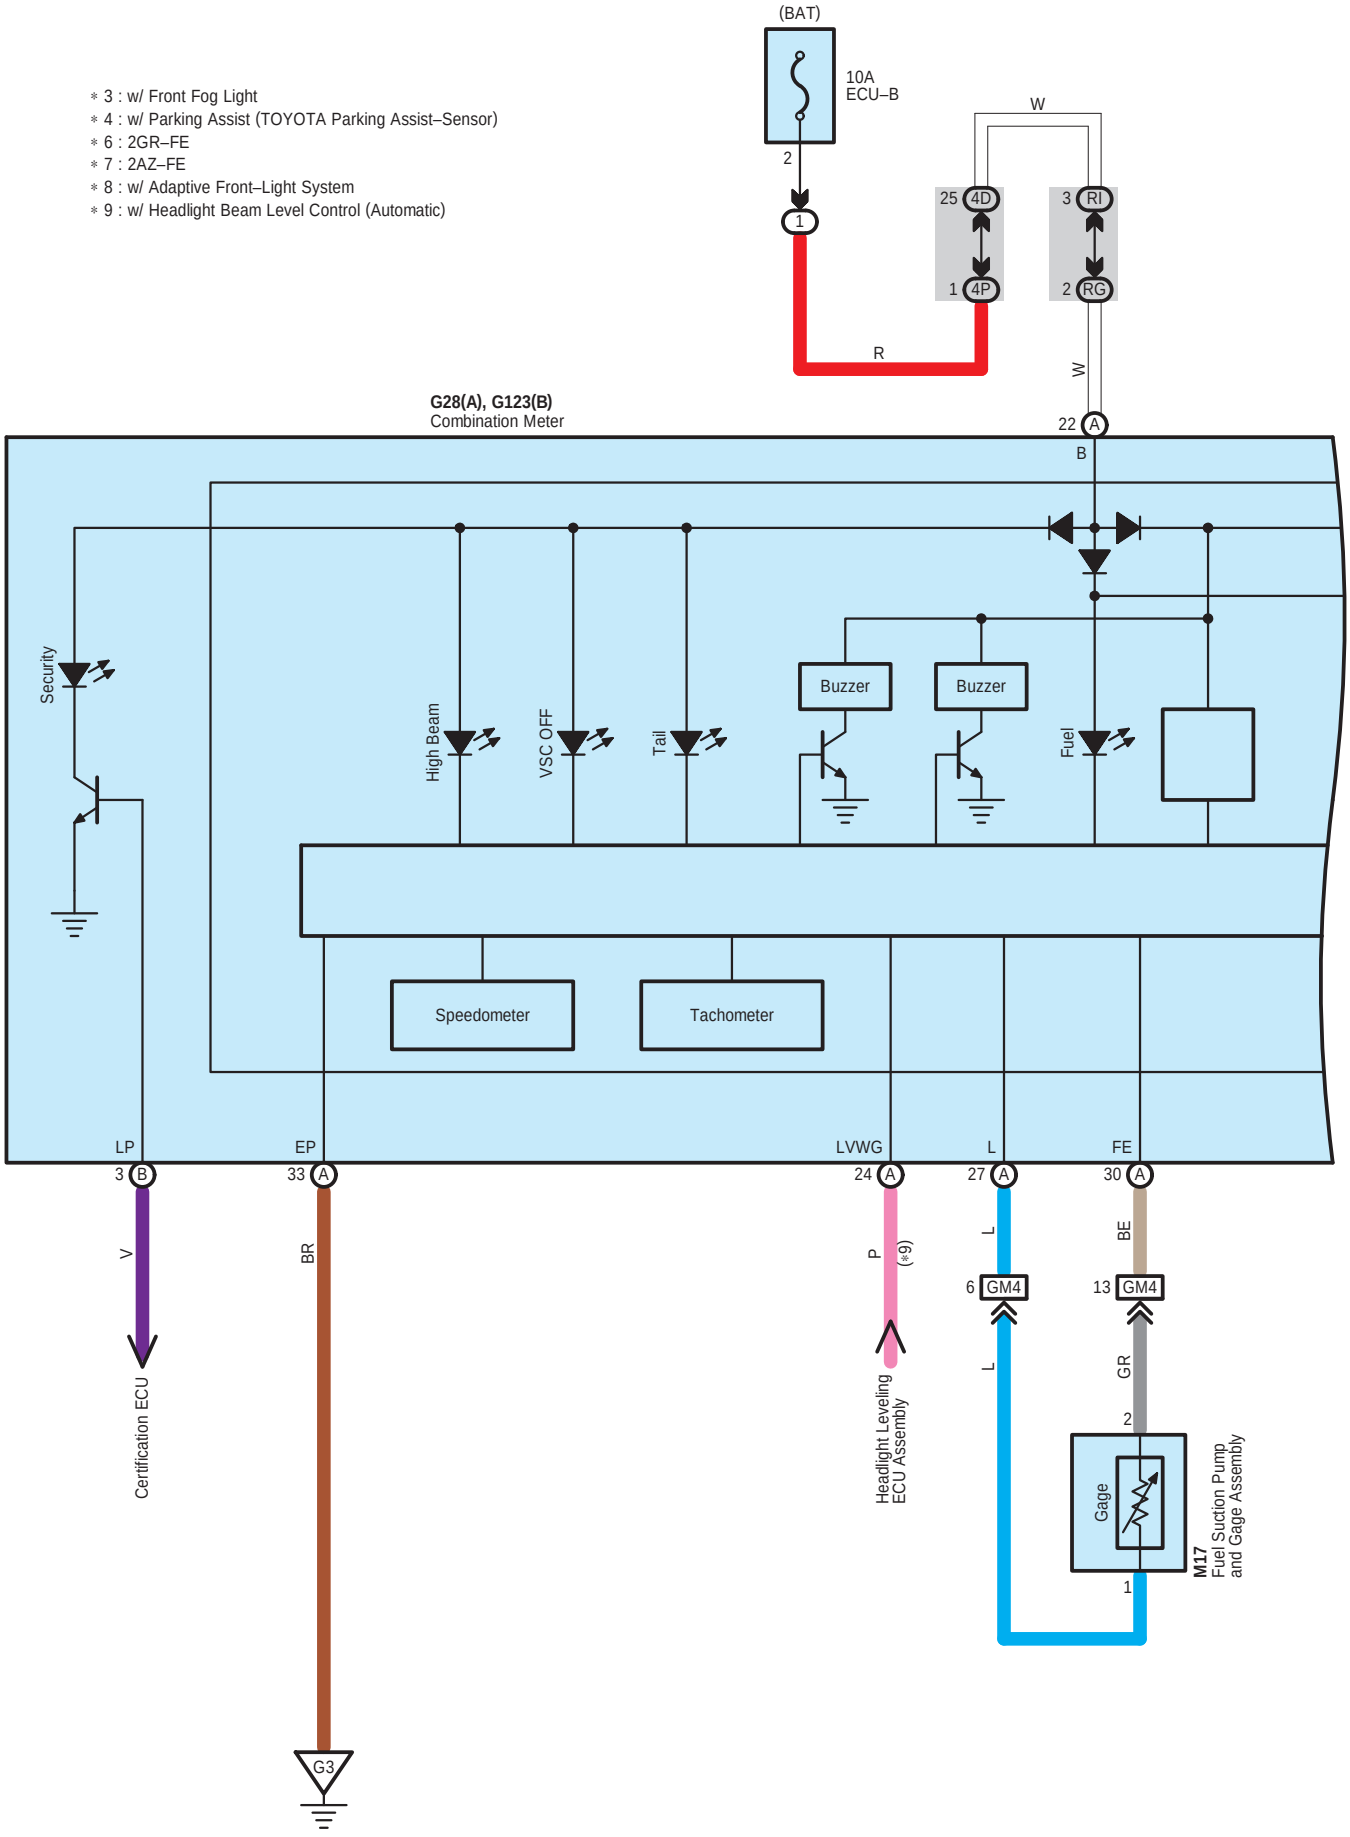
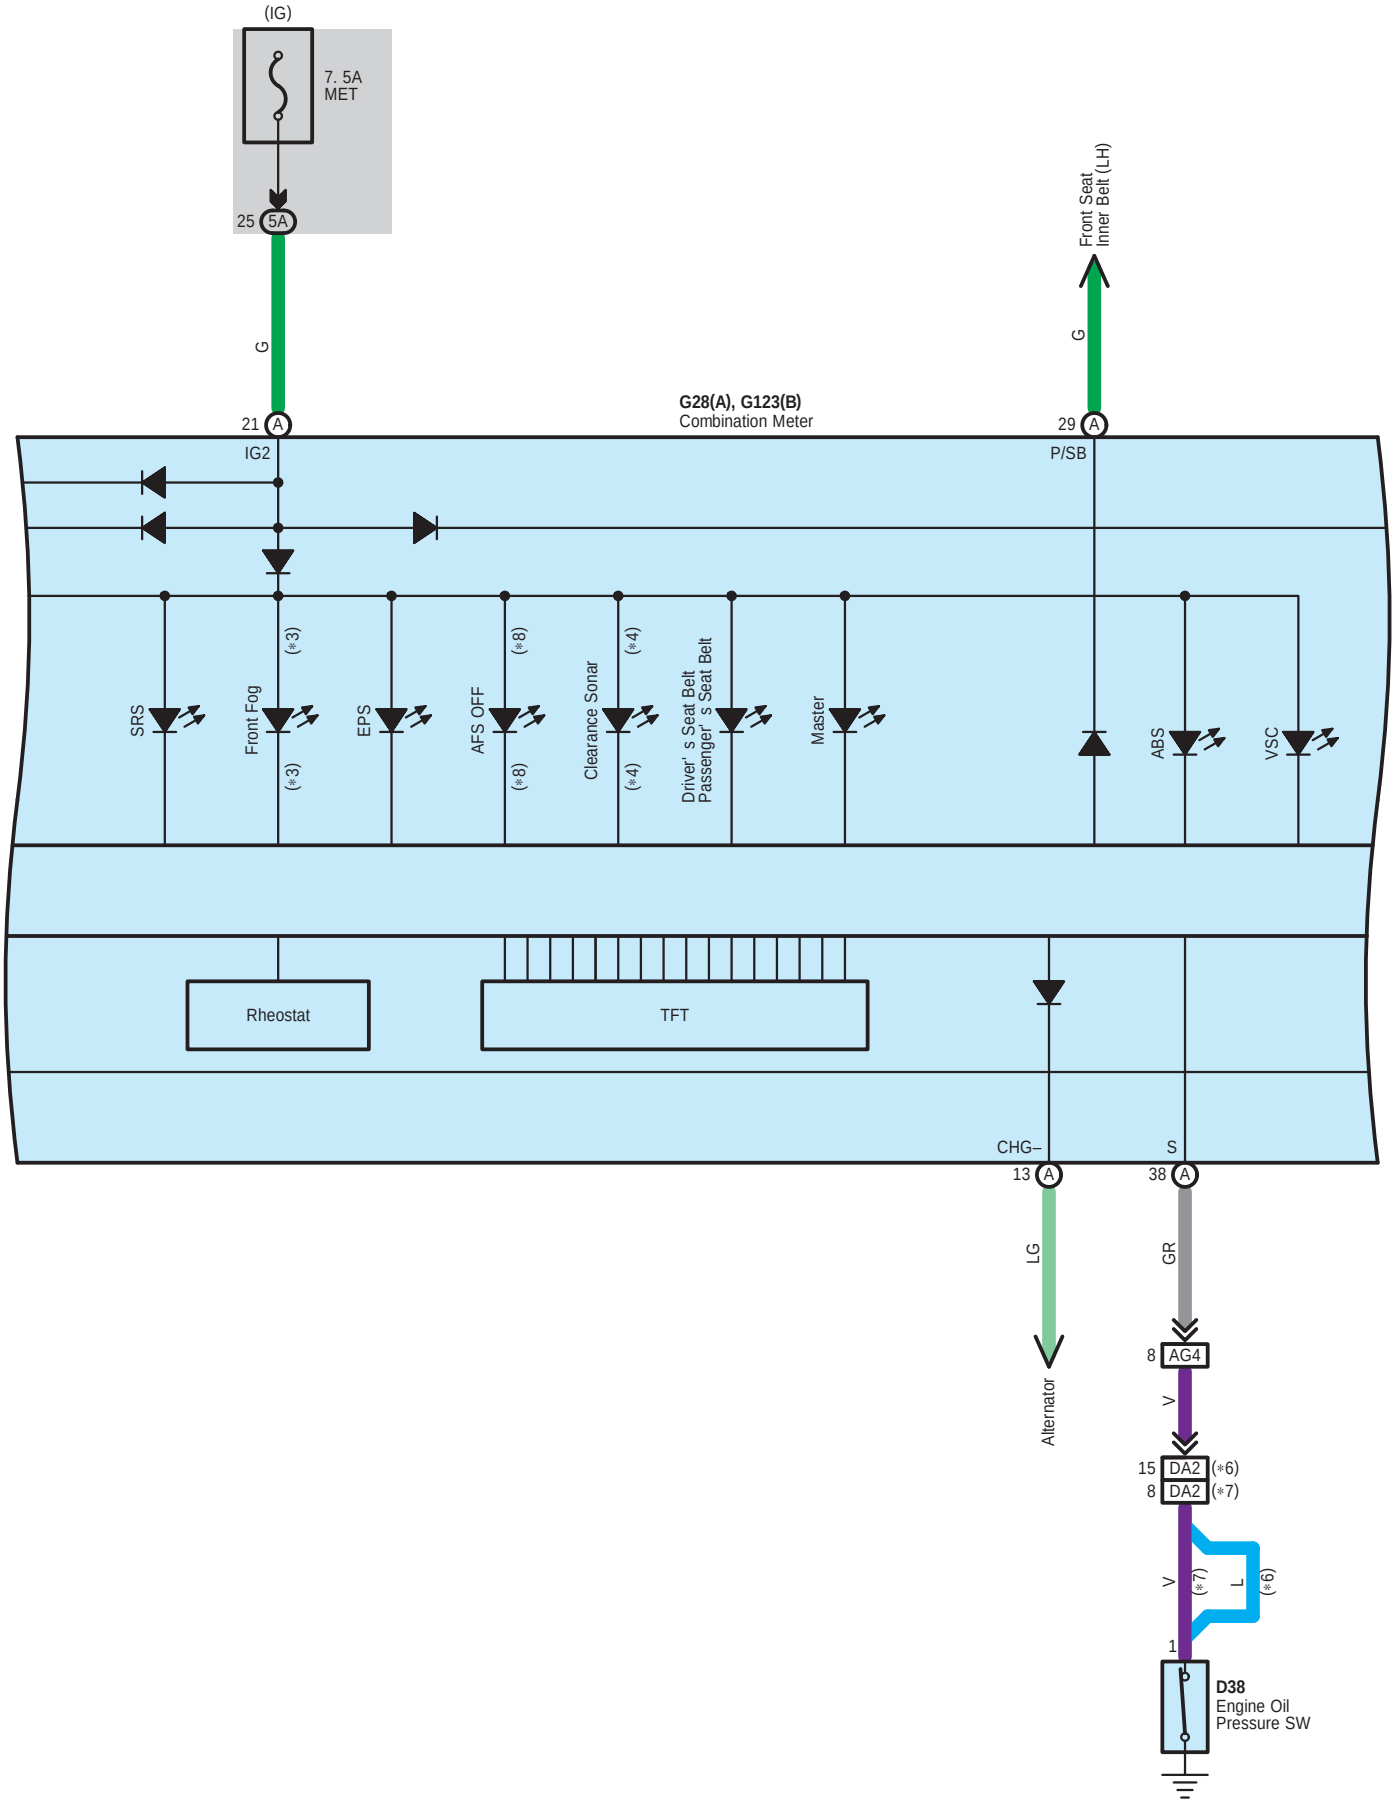
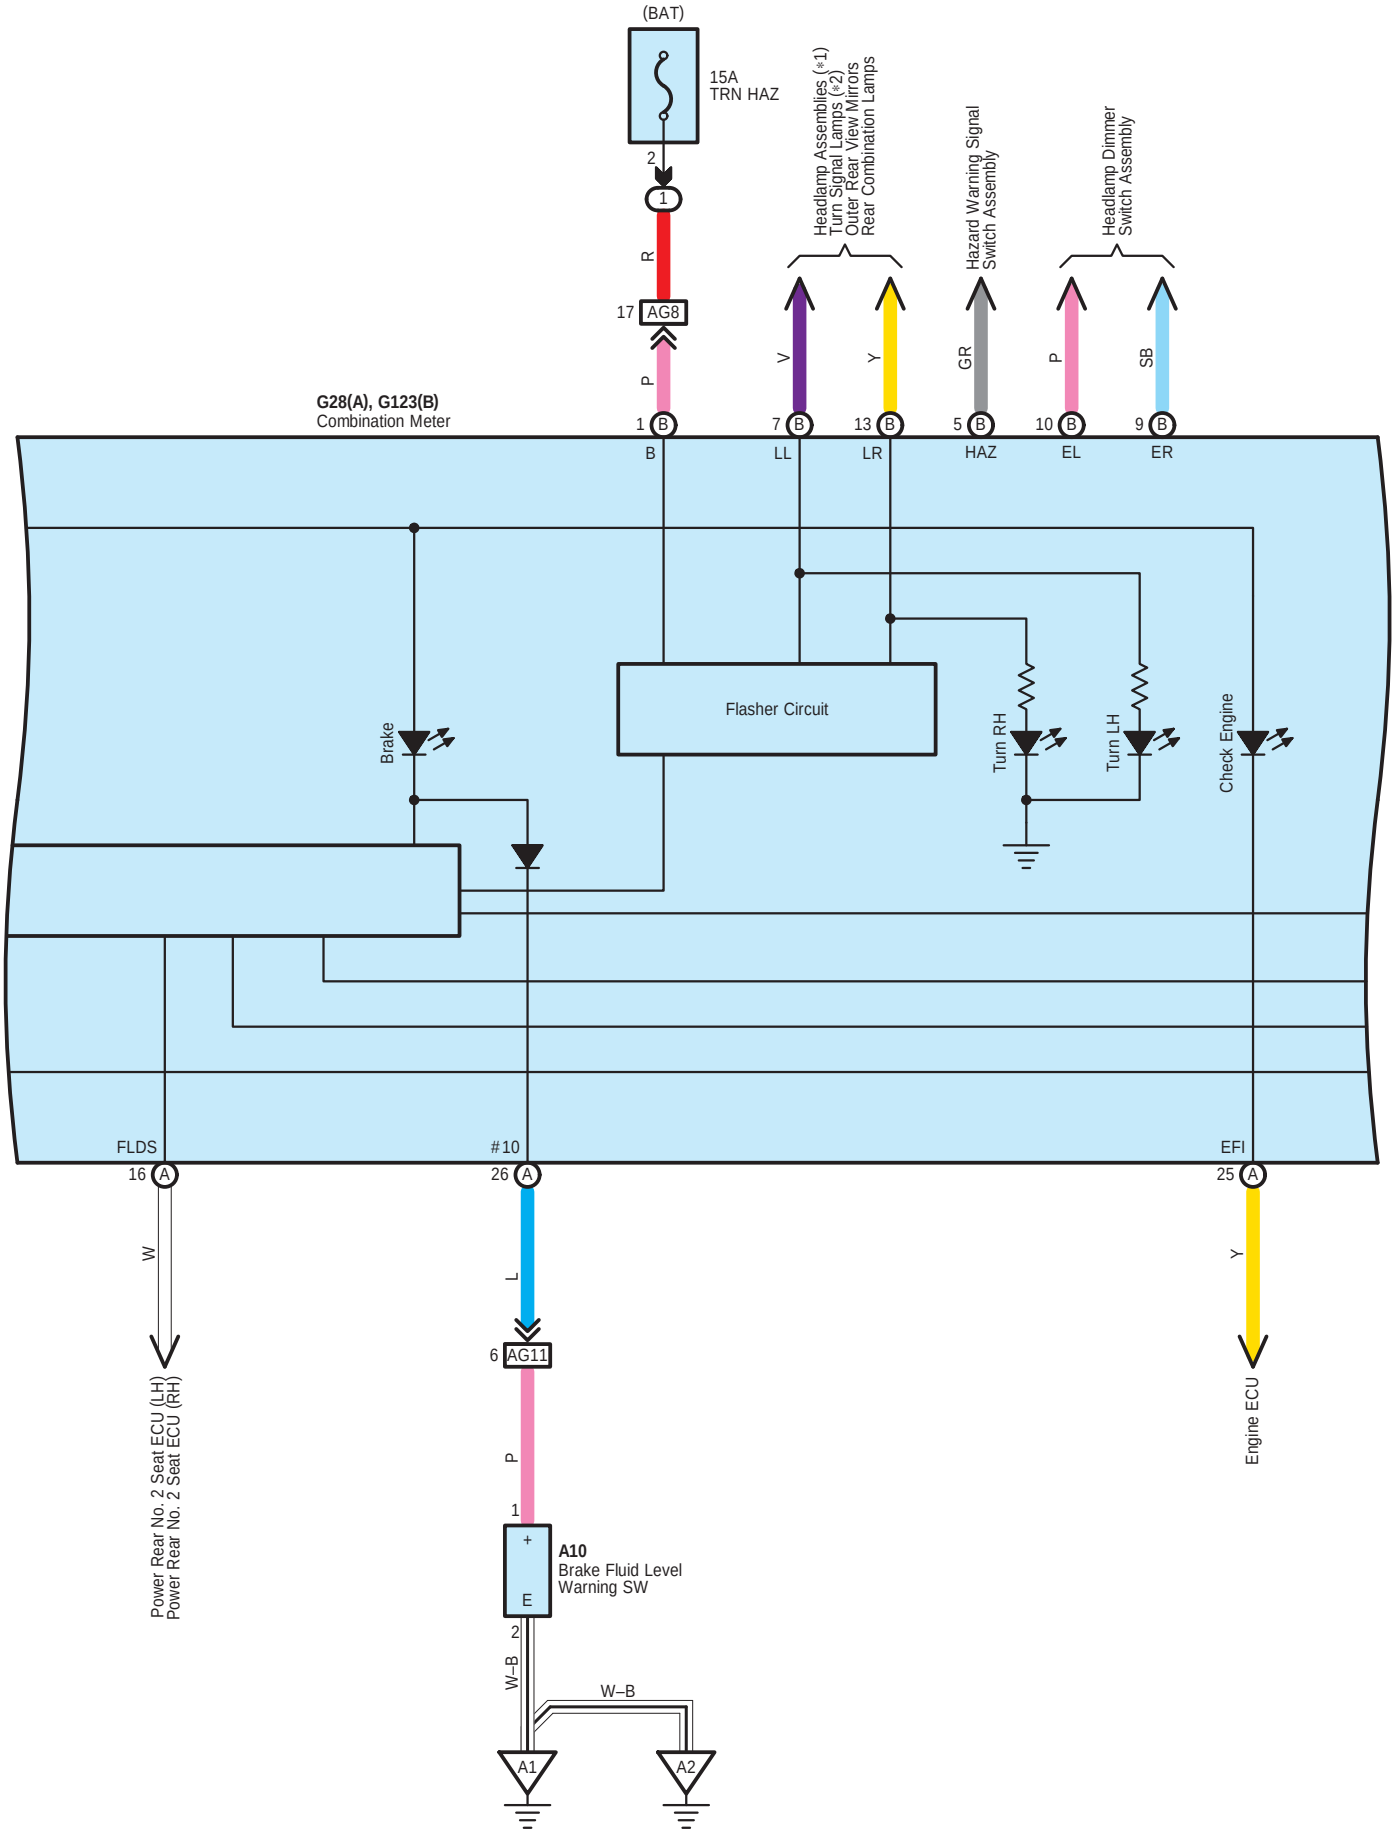
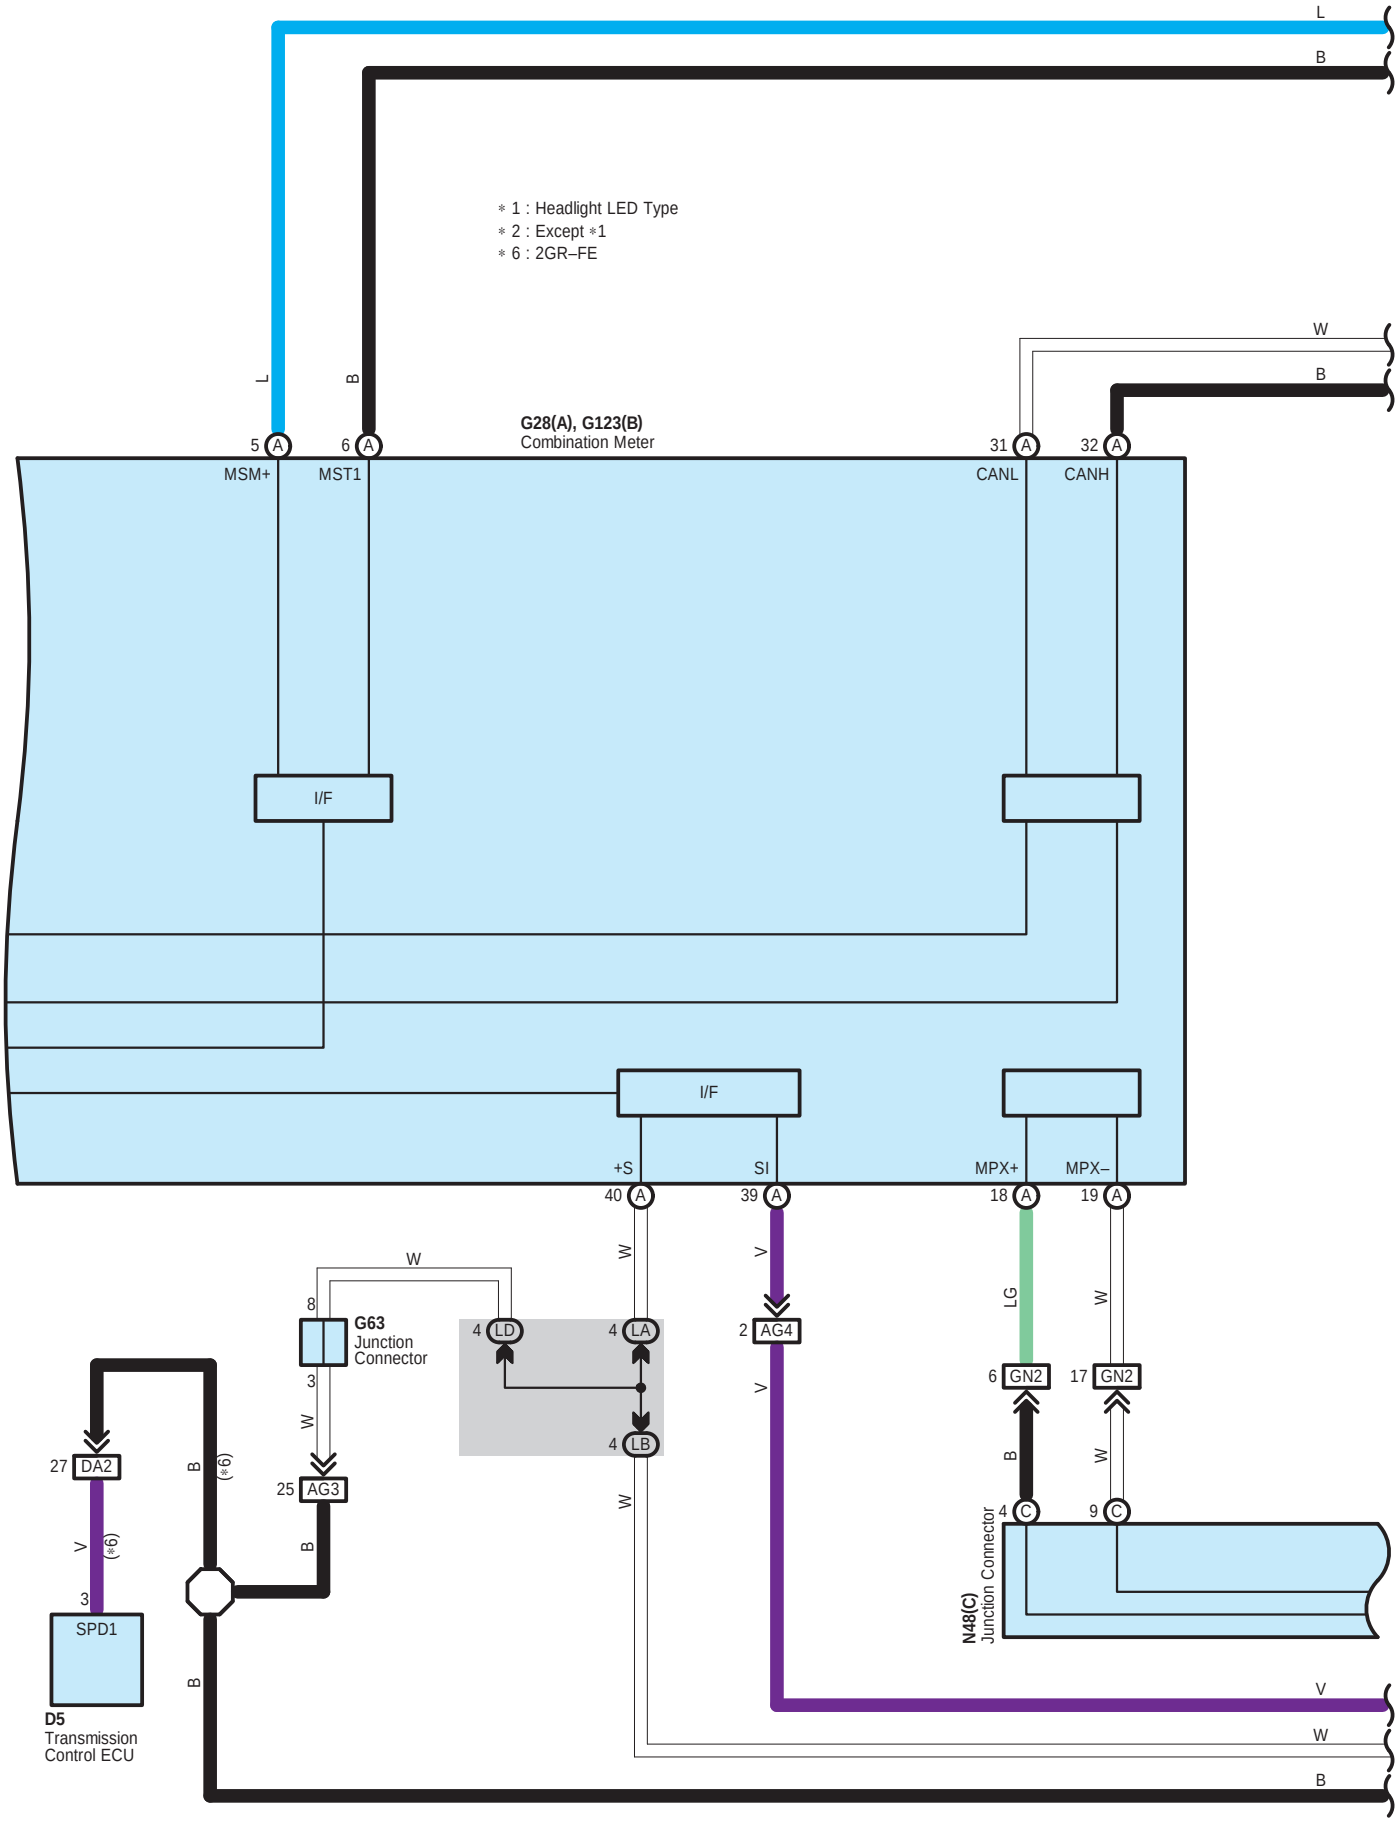
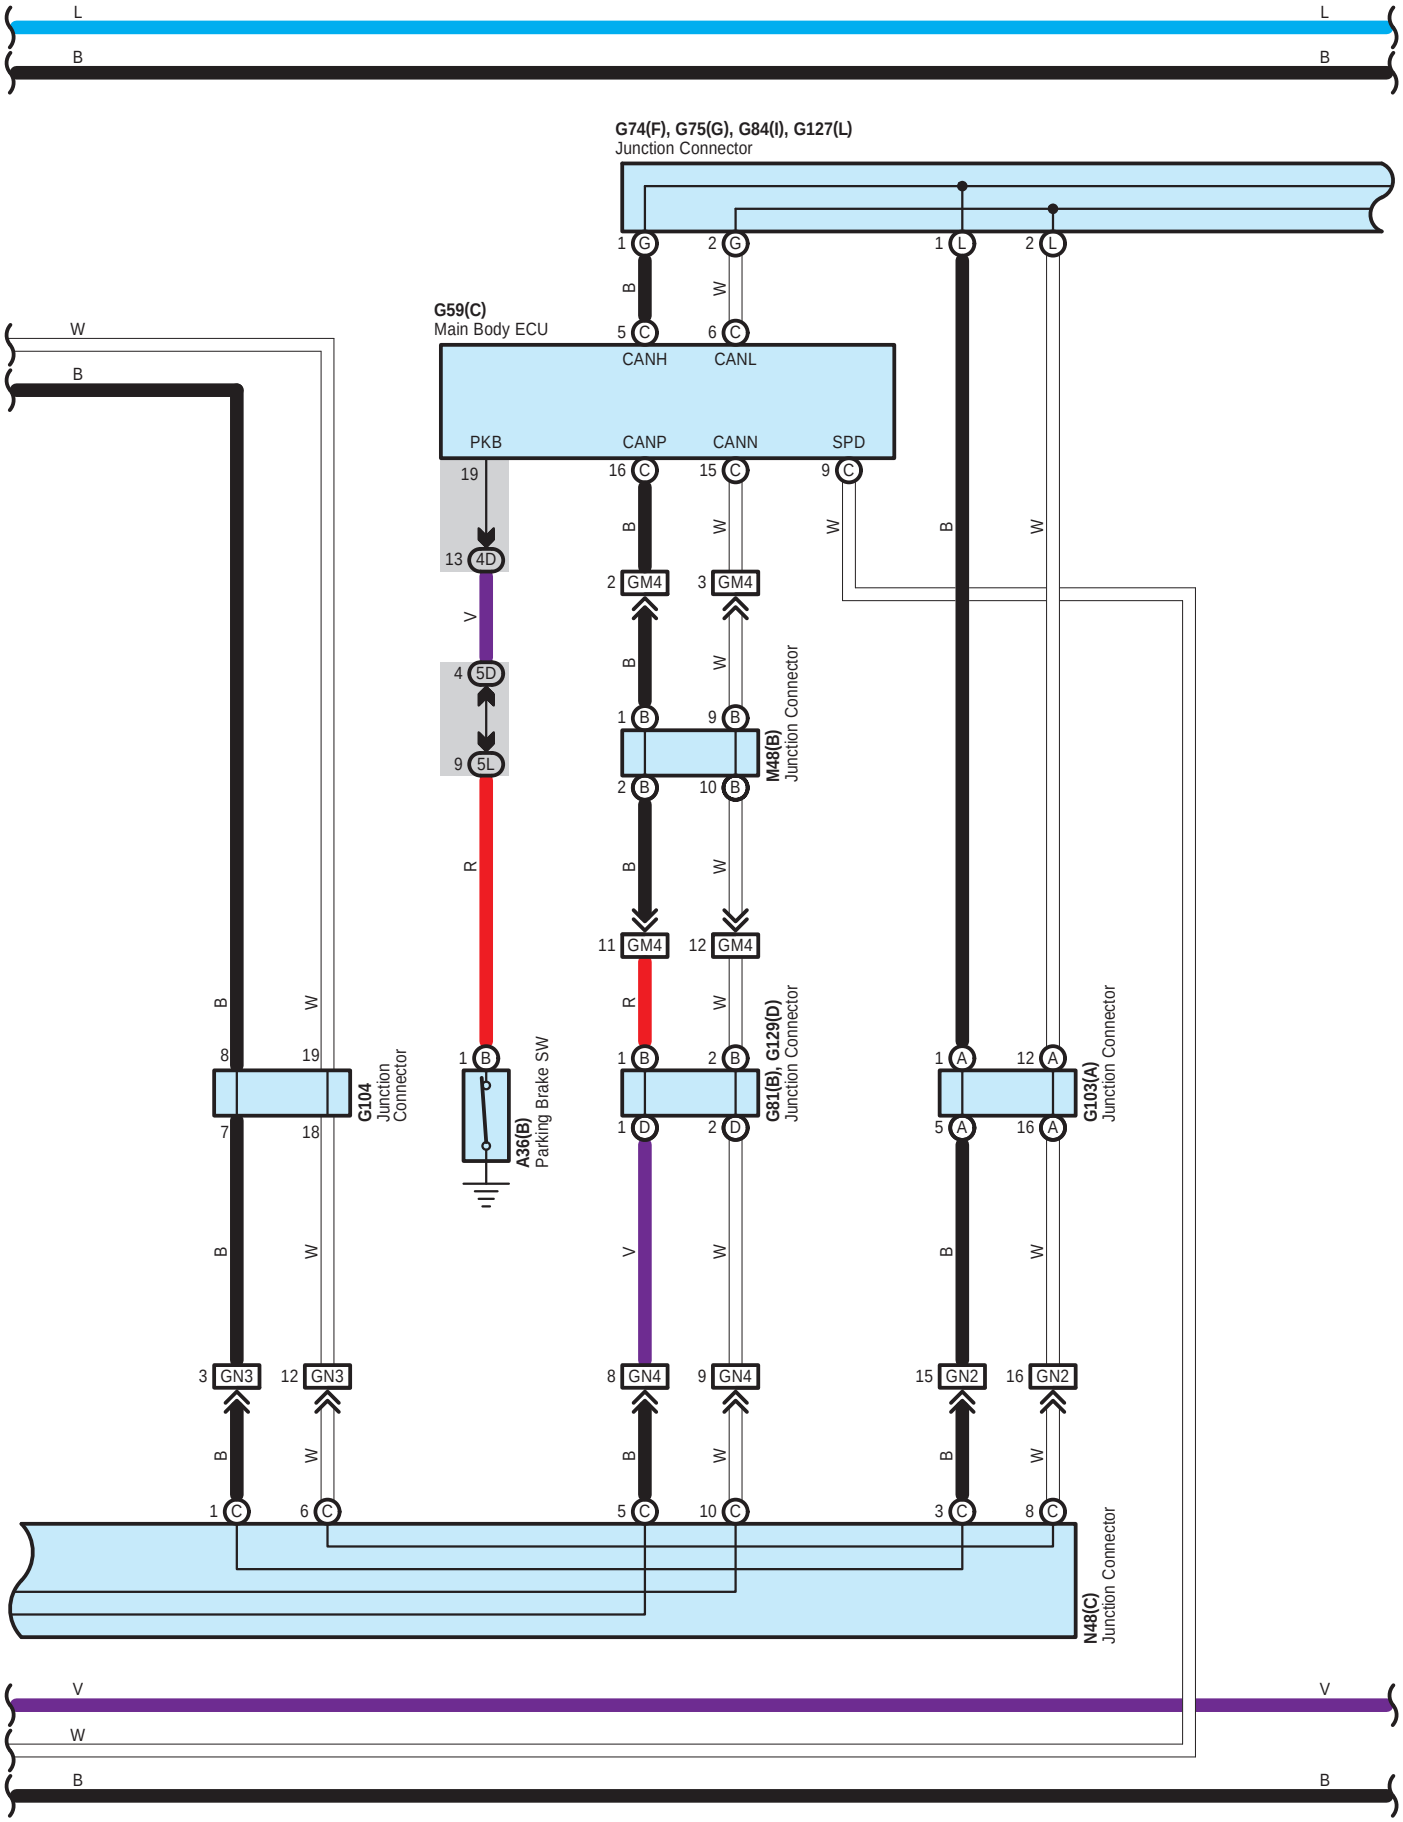
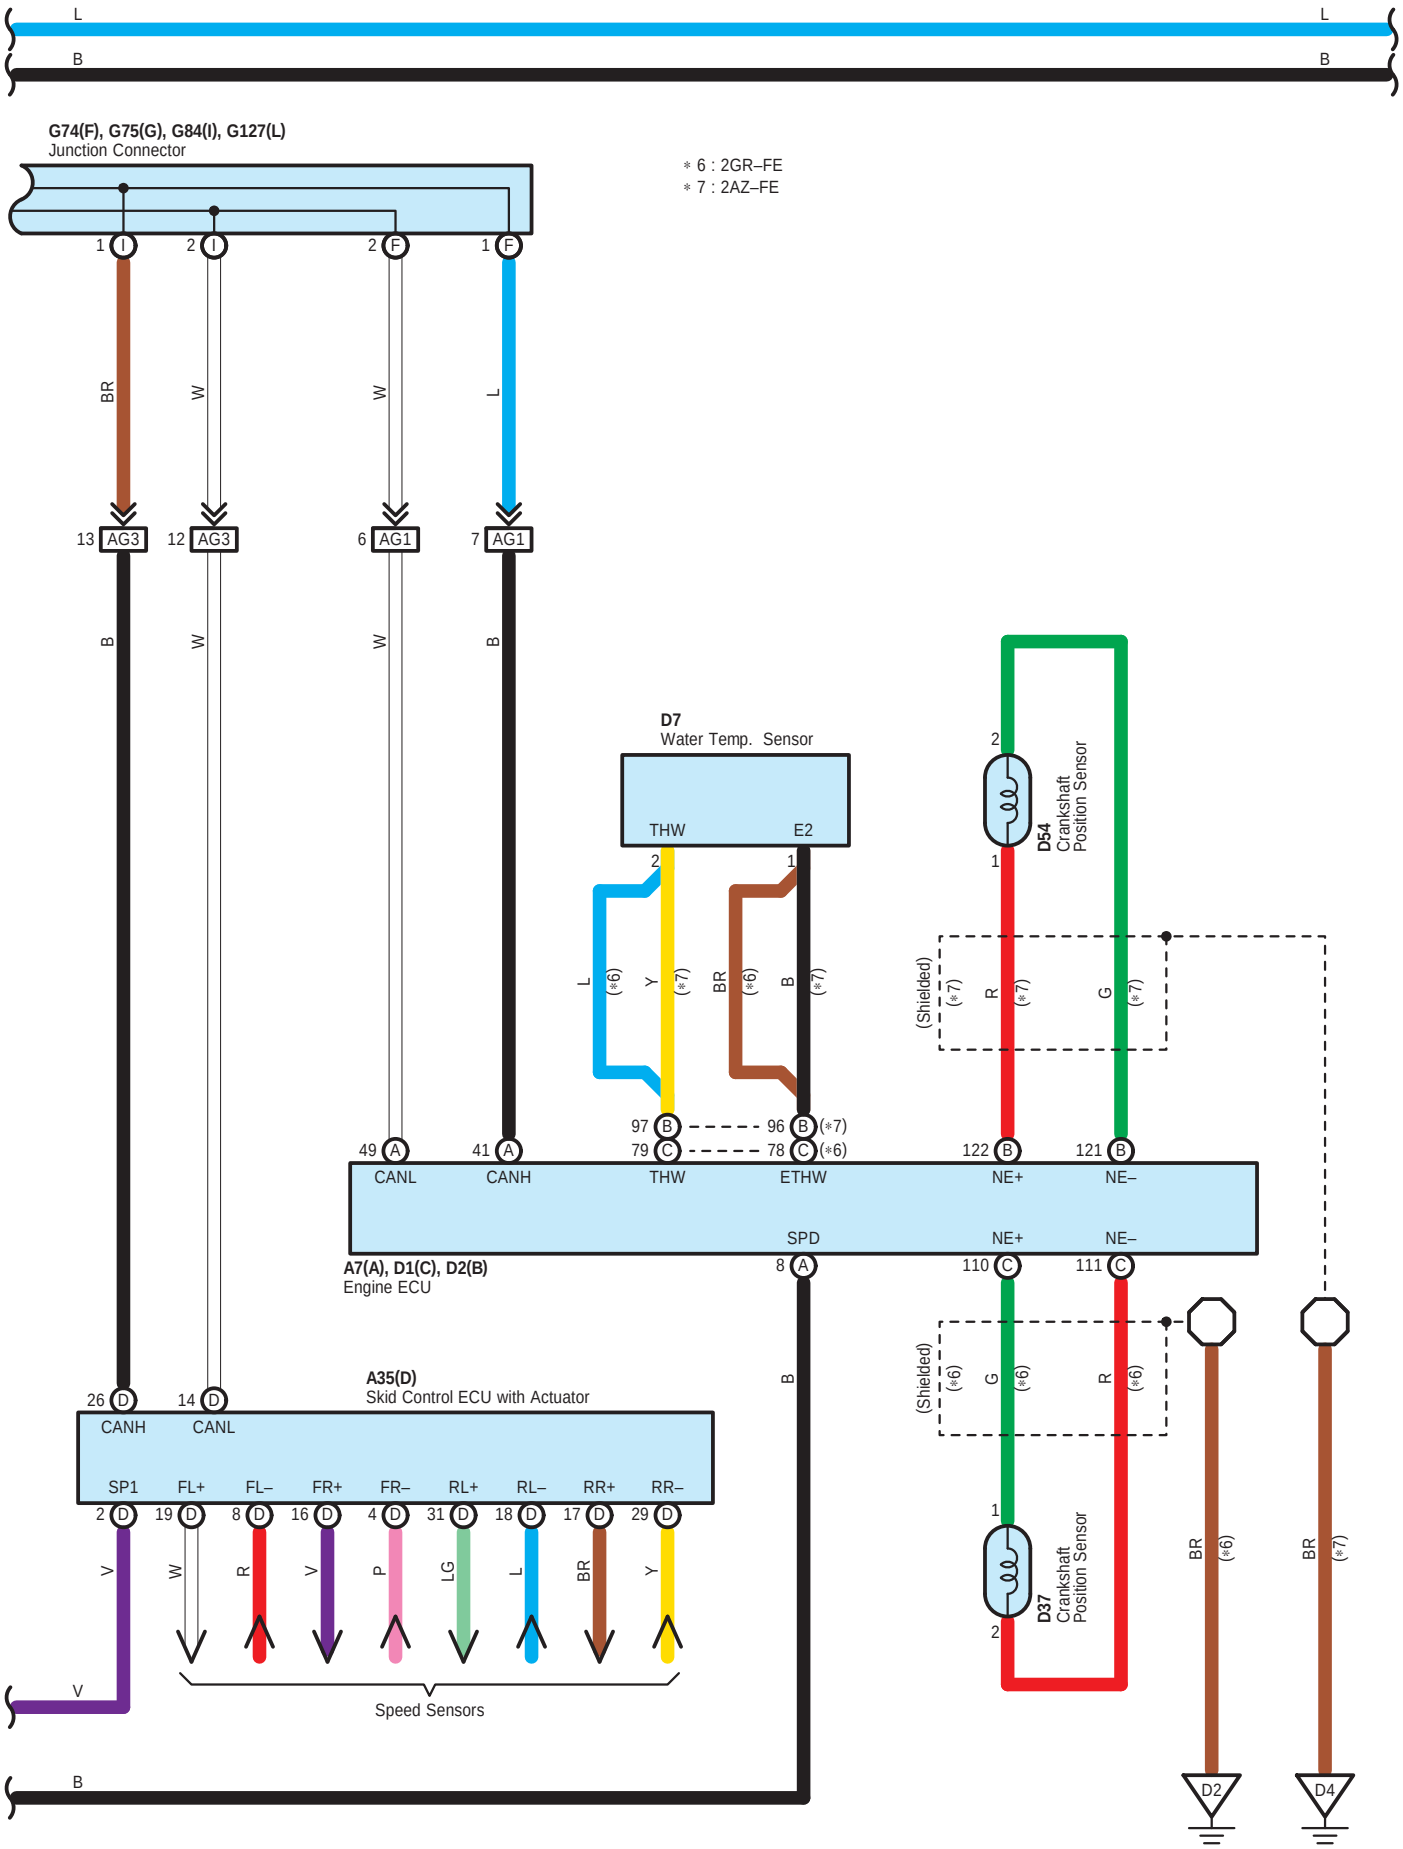

∗ 3 : w/ Front Fog Light
∗ 4 : w/ Parking Assist (TOYOTA Parking Assist–Sensor)
∗ 6 : 2GR–FE
∗ 7 : 2AZ–FE
∗ 8 : w/ Adaptive Front–Light System
∗ 9 : w/ Headlight Beam Level Control (Automatic)
(BAT)
10A
ECU–B
2
1
W
25 4D
1 4P
3 RI
2 RG
R
W
22 A
B
G28(A), G123(B)
Combination Meter
Security
High Beam
VSC OFF
Tail
Buzzer
Buzzer
Fuel
Speedometer
Tachometer
LP
EP
LVWG
L
FE
3 B
33 A
24 A
27 A
30 A
V
BR
P
(∗9)
L
BE
6 GM4
13 GM4
L
GR
2
Gage
1
M17
Fuel Suction Pump
and Gage Assembly
Certification ECU
Headlight Leveling
ECU Assembly
G3



(IG)
7. 5A
MET
25
5A
G
21
A
IG2
G28(A), G123(B)
Combination Meter
Front Seat
Inner Belt (LH)
G
29
A
P/SB
SRS
Front Fog
(*3)
(*3)
EPS
AFS OFF
(*8)
(*8)
Clearance Sonar
(*4)
(*4)
Driver' s Seat Belt
Passenger' s Seat Belt
Master
ABS
VSC
Rheostat
TFT
CHG–
13
A
S
38
A
LG
GR
Alternator
8
AG4
V
15
DA2
(*6)
8
DA2
(*7)
V
(*7)
L
(*6)
1
D38
Engine Oil
Pressure SW


(BAT)
15A
TRN HAZ
2
1
R
17 AG8
P
Headlamp Assemblies (*1)
Turn Signal Lamps (*2)
Outer Rear View Mirrors
Rear Combination Lamps
Hazard Warning Signal
Switch Assembly
Headlamp Dimmer
Switch Assembly
V
Y
GR
P
SB
G28(A), G123(B)
Combination Meter
1 B
7 B
13 B
5 B
10 B
9 B
B
LL
LR
HAZ
EL
ER
Flasher Circuit
Brake
Turn RH
Turn LH
Check Engine
FLDS
#10
EFI
16 A
26 A
25 A
W
L
Y
6 AG11
P
1
+
E
A10
Brake Fluid Level
Warning SW
2
W–B
W–B
A1
A2
Power Rear No. 2 Seat ECU (LH)
Power Rear No. 2 Seat ECU (RH)
Engine ECU



L
B
∗ 1 : Headlight LED Type
∗ 2 : Except ∗1
∗ 6 : 2GR–FE
W
B
L
B
G28(A), G123(B)
Combination Meter
5 A
MSM+
6 A
MST1
31 A
CANL
32 A
CANH
I/F
I/F
+S
SI
MPX+
MPX–
40 A
39 A
18 A
19 A
W
V
LG
W
8
G63
Junction
Connector
3
W
25 AG3
B
4 LD
4 LA
4 LB
W
2 AG4
V
6 GN2
17 GN2
B
W
4 C
9 C
N48(C)
Junction Connector
27 DA2
B
(∗6)
V
(∗6)
3
SPD1
B
D5
Transmission
Control ECU
V
W
B


L
B
G74(F), G75(G), G84(I), G127(L)
Junction Connector
G59(C)
Main Body ECU
CANH
CANL
PKB
CANP
CANN
SPD
W
V
R
G104
Junction Connector
A36(B)
Parking Brake SW
M48(B)
Junction Connector
G81(B), G129(D)
Junction Connector
G103(A)
Junction Connector
N48(C)
Junction Connector
GM4
GN3
GN4
GN2
4D
5D
5L


L
B
L
B
G74(F), G75(G), G84(I), G127(L)
Junction Connector
* 6 : 2GR–FE
* 7 : 2AZ–FE
1 I
2 I
2 F
1 F
BR
W
W
L
13 AG3
12 AG3
6 AG1
7 AG1
B
W
W
B
D7
Water Temp. Sensor
THW
E2
2
1
L (*6)
Y (*7)
BR (*6)
B (*7)
2
D54
Crankshaft Position Sensor
1
(Shielded)
R (*7)
G (*7)
97 B
96 B (*7)
79 C
78 C (*6)
49 A
41 A
122 B
121 B
CANL
CANH
THW
ETHW
NE+
NE–
SPD
NE+
NE–
A7(A), D1(C), D2(B)
Engine ECU
8 A
110 C
111 C
B
(Shielded)
G (*6)
R (*6)
1
D37
Crankshaft Position Sensor
2
BR (*6)
BR (*7)
A35(D)
Skid Control ECU with Actuator
26 D
14 D
CANH
CANL
SP1
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
2 D
19 D
8 D
16 D
4 D
31 D
18 D
17 D
29 D
V
W
R
V
P
LG
L
BR
Y
V
Speed Sensors
B
D2
D4

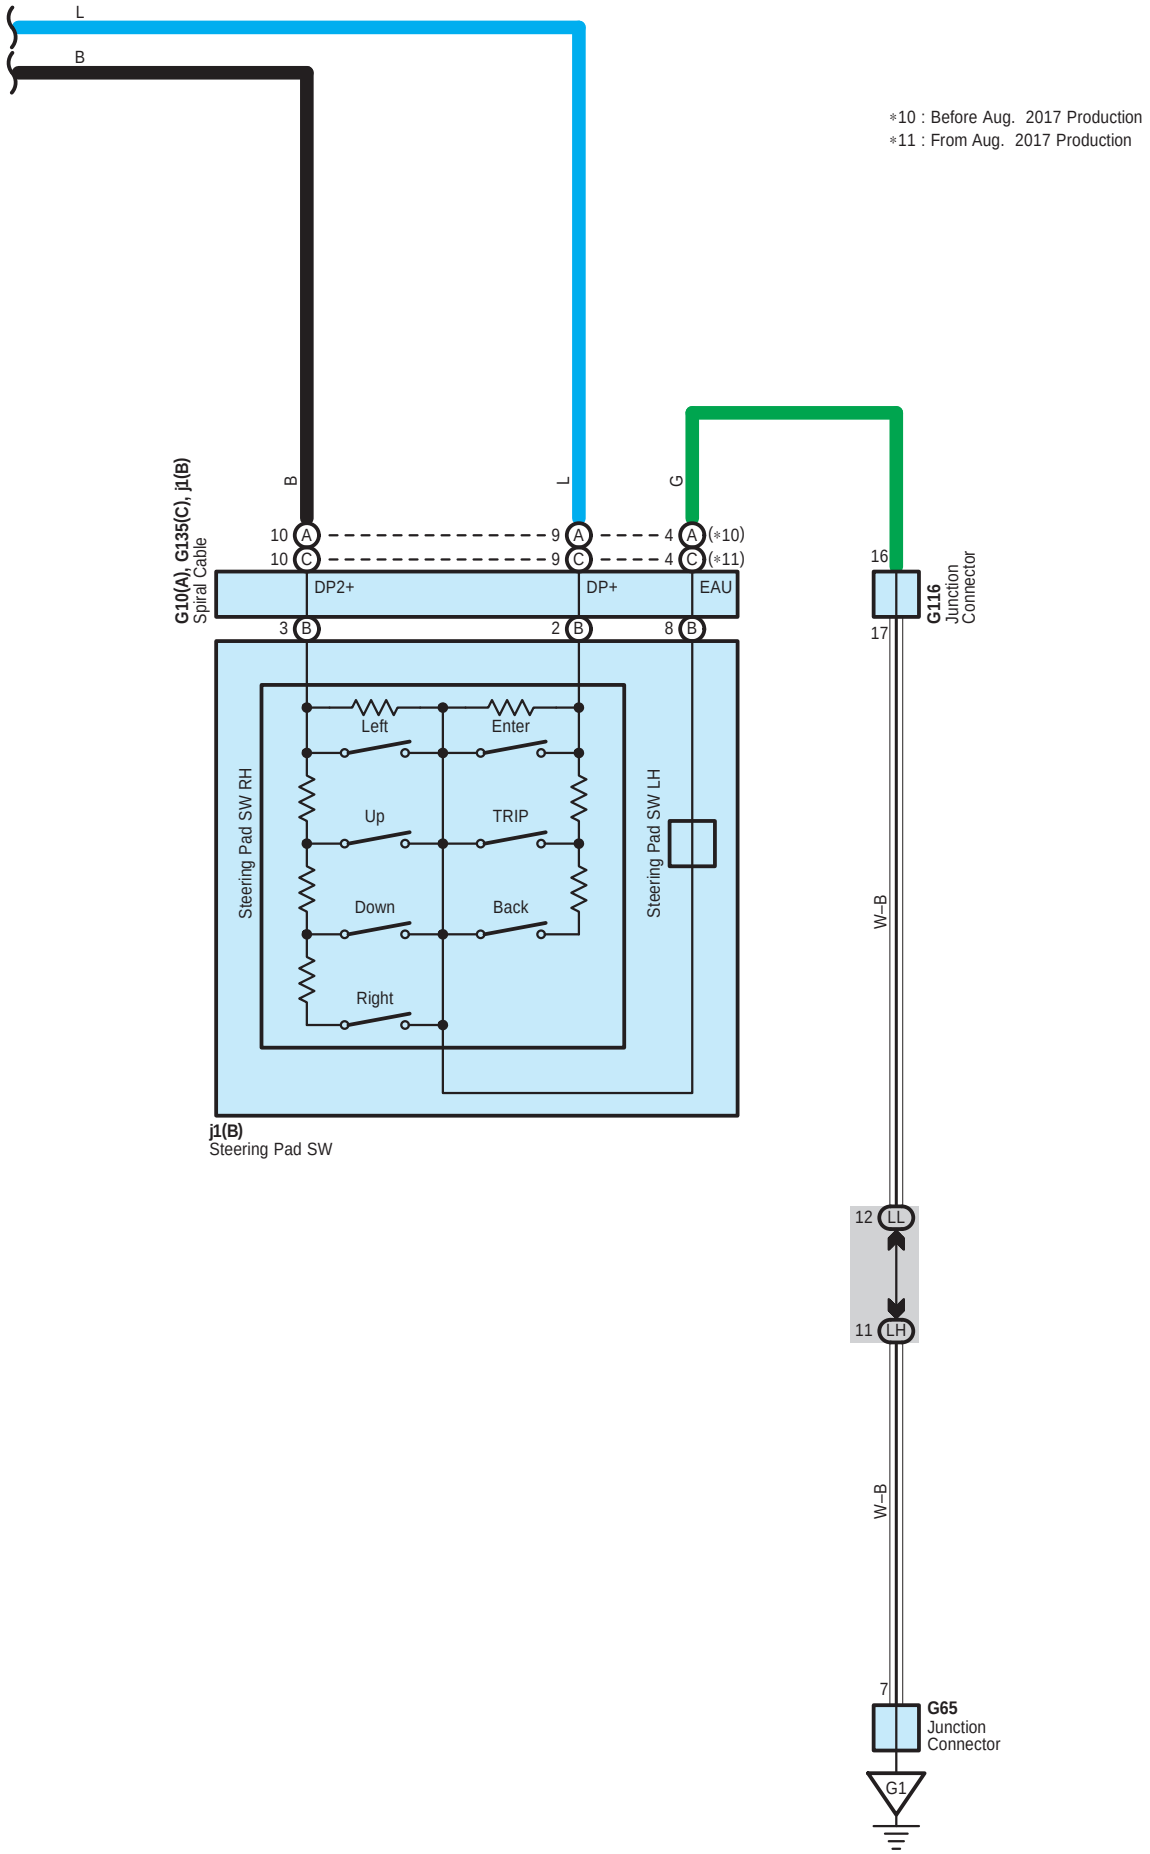
L
B
∗10 : Before Aug. 2017 Production
∗11 : From Aug. 2017 Production
B
L
G
G10(A), G135(C), j1(B)
Spiral Cable
10 A
10 C
9 A
9 C
4 A (∗10)
4 C (∗11)
DP2+
DP+
EAU
3 B
2 B
8 B
Left
Enter
Up
TRIP
Down
Back
Right
Steering Pad SW RH
Steering Pad SW LH
j1(B)
Steering Pad SW
16
17
G116
Junction
Connector
W–B
12 LL
11 LH
W–B
7
G65
Junction
Connector
G1


A 7
Black

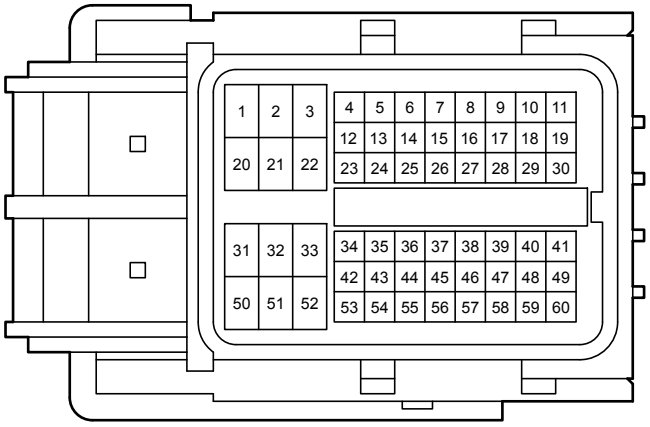

A 10
Gray




A 35
Black

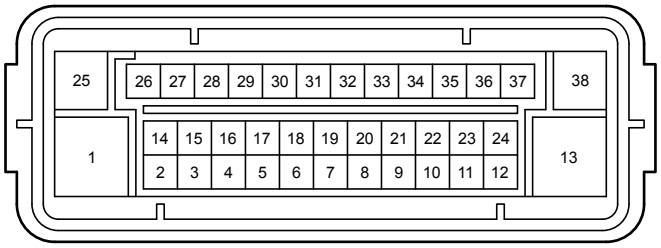


A 36
White




D 1
Black

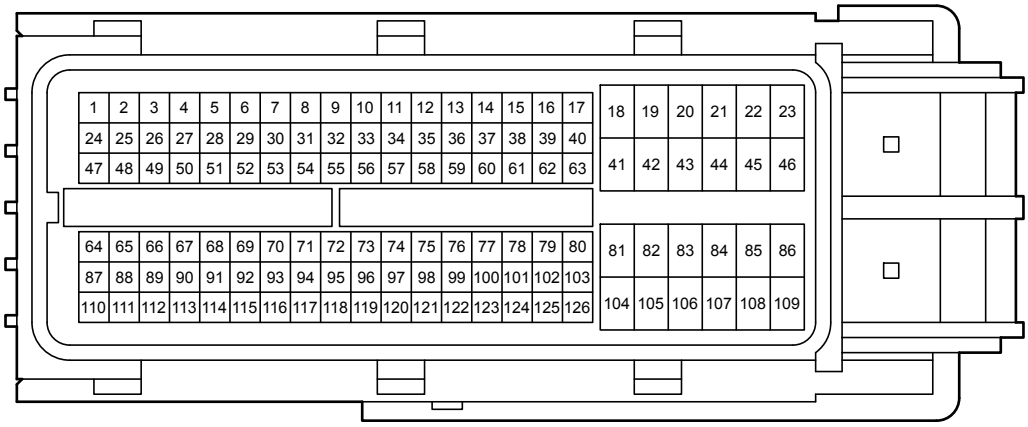

D 2
Black

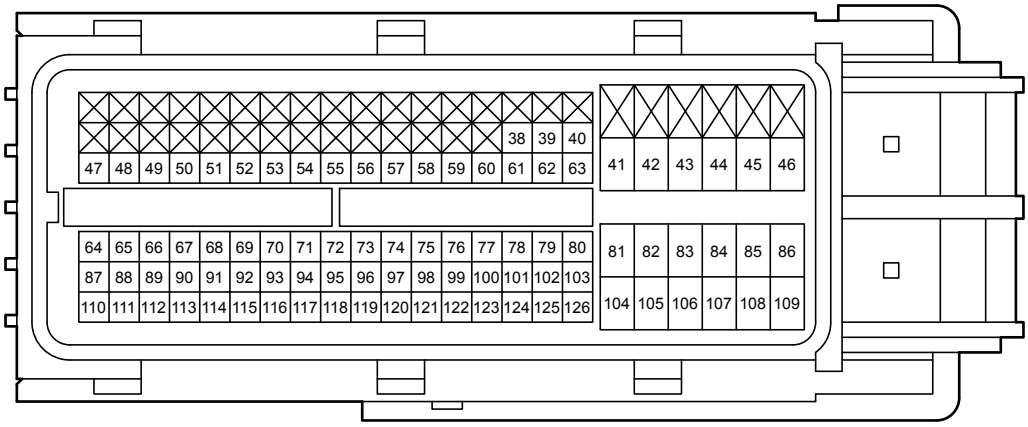


D 5
Black

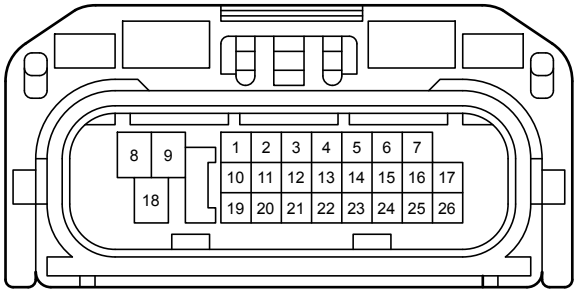

D 7
Black



D 37
Black

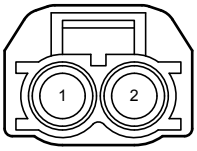


D 38
Gray




D 54
Gray




G 10
Black

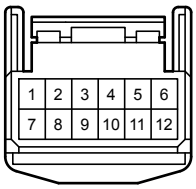


G 28
White

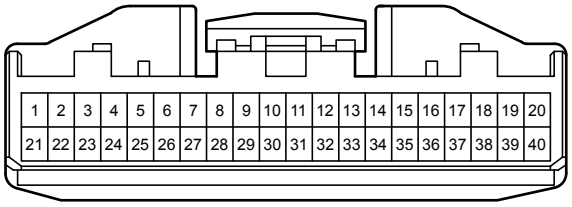


G 59
White

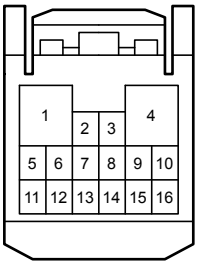


G 63
Blue

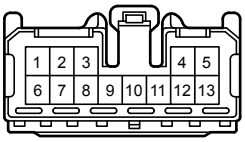


G 65
Black

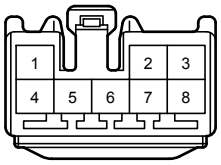


G 74
White




G 75
White




G 81
White




G 84
White




G103
Black

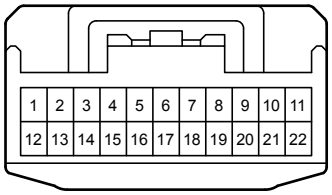


G104
Black

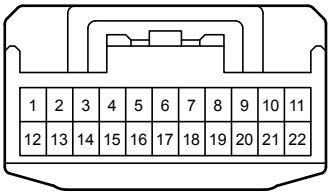


G116
Blue

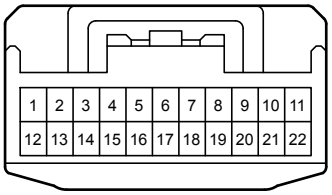


G123
Black

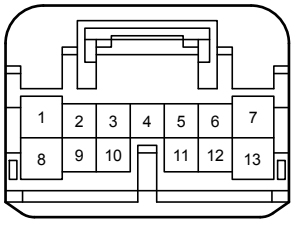


G127
Black



G129
Black




G135
Black

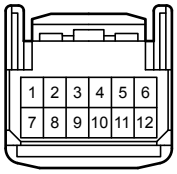


M 17
White




M 48
White




N 48
Black




j 1
White

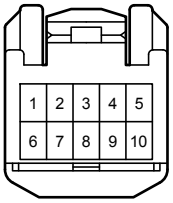

4D
White

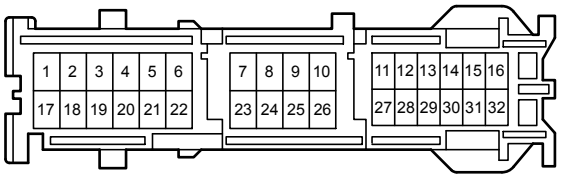


4P
Blue

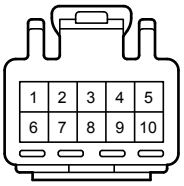


(From May 2016 Production)


5A
White

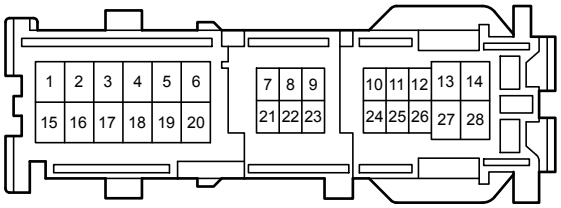

5D
White

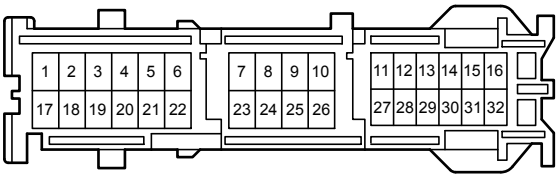


5L
Gray

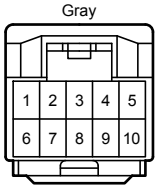


(Before Dec. 2008 Production)

5L
White

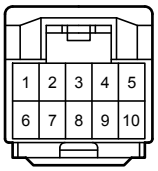


(From Dec. 2008 Production until May 2016 Production, From May 2016 Production)


LA
White




LB
Gray




LD
Gray




LH
Gray




LL
Gray




RG
White




RI
White




AG1
White

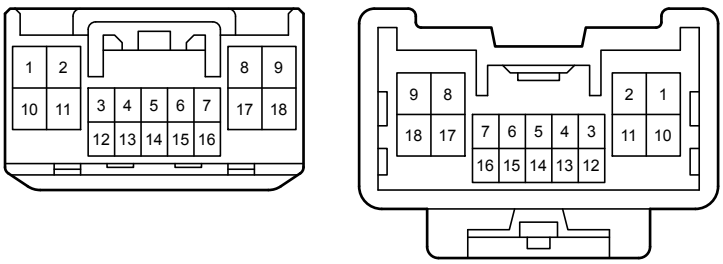


AG3
Gray

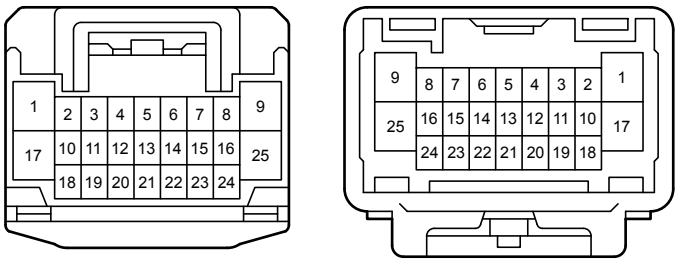


AG4
Blue

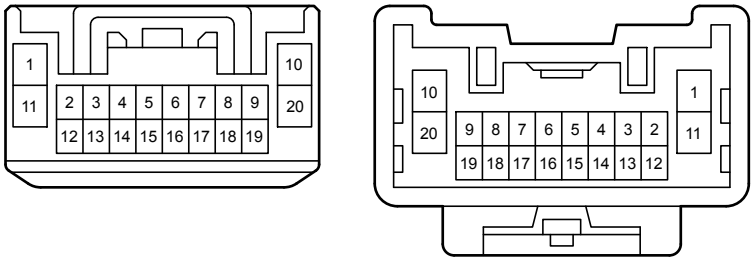


AG8
Gray

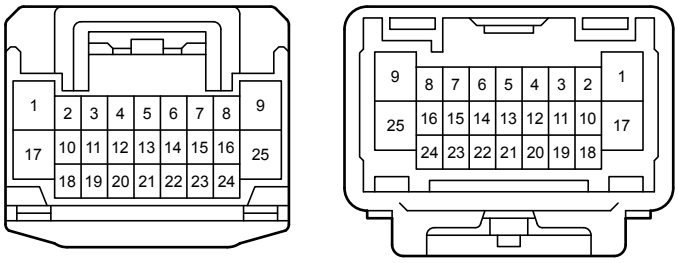


AG11
White

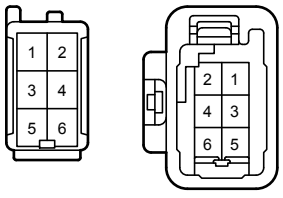


DA2
White

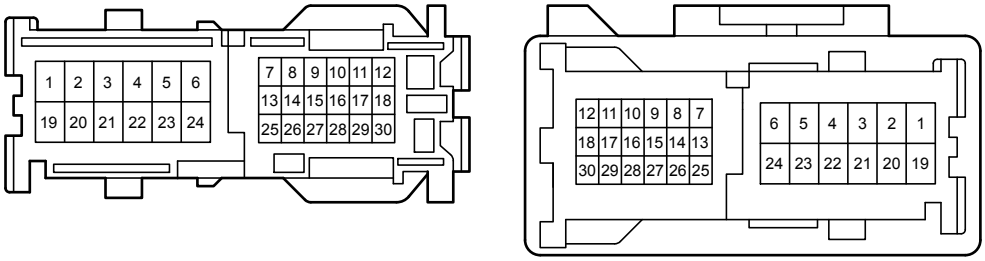


GM4
White

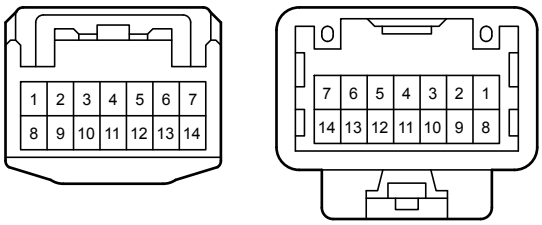

GN2
White

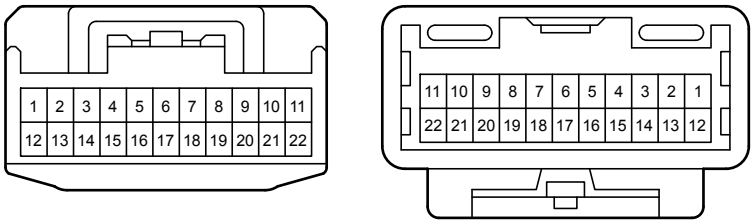

GN3
White

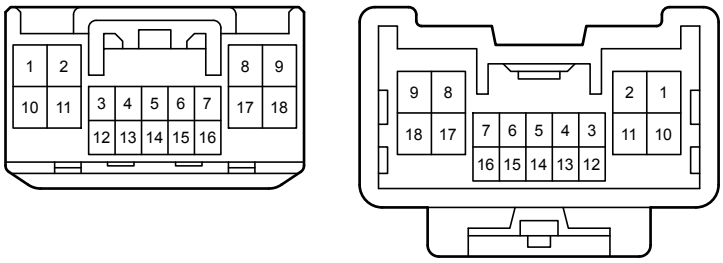

GN4
White

