




(IG)
10A
LH ECU–IG
11 4G
L
10
M52
Junction
Connector
11
L
1
IG
TC
SIL
13
7
L
LG
12
4
G116
Junction
Connector
14
3
L
LG
10 GM1
7 GM4
L
LG
3
10
TC
SIL
G15
DLC3
W
11 GM1
W
P
2
SPD
M44
Tire Pressure Warning ECU
and Receiver
GND
CLSW
IND
12
W–B
7
W–B
5
B
14 GM1
15 GM1
W–B
1
INT
E
G110
Tire Pressure Warning
Reset Switch
B
5
M50
Junction
Connector
6
2
W–B
12 LH
10 LL
W–B
7
G65
Junction
Connector
W–B
M3
G1
B


(BAT)
10A
ECU–B
2
1
(IG)
7. 5A
MET
25 5A
1 4P
25 4D
4 LL
3 LA
4 RC
3 RH
W
R
G
40
22
21
+S
B
IG2
I/F
Tire Pressure
G28
Combination Meter
SI
TIRE
EP
ES
39
36
33
20
V
B
BR
W–B
2 AG4
11 LJ
10 LL
A35(D)
Skid Control ECU with Actuator
2 D
SP1
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
19 D
8 D
16 D
4 D
31 D
18 D
17 D
29 D
W
R
V
P
LG
L
BR
Y
Speed Sensors
B
7
G65
Junction
Connector
G3
G1


A 35
Black

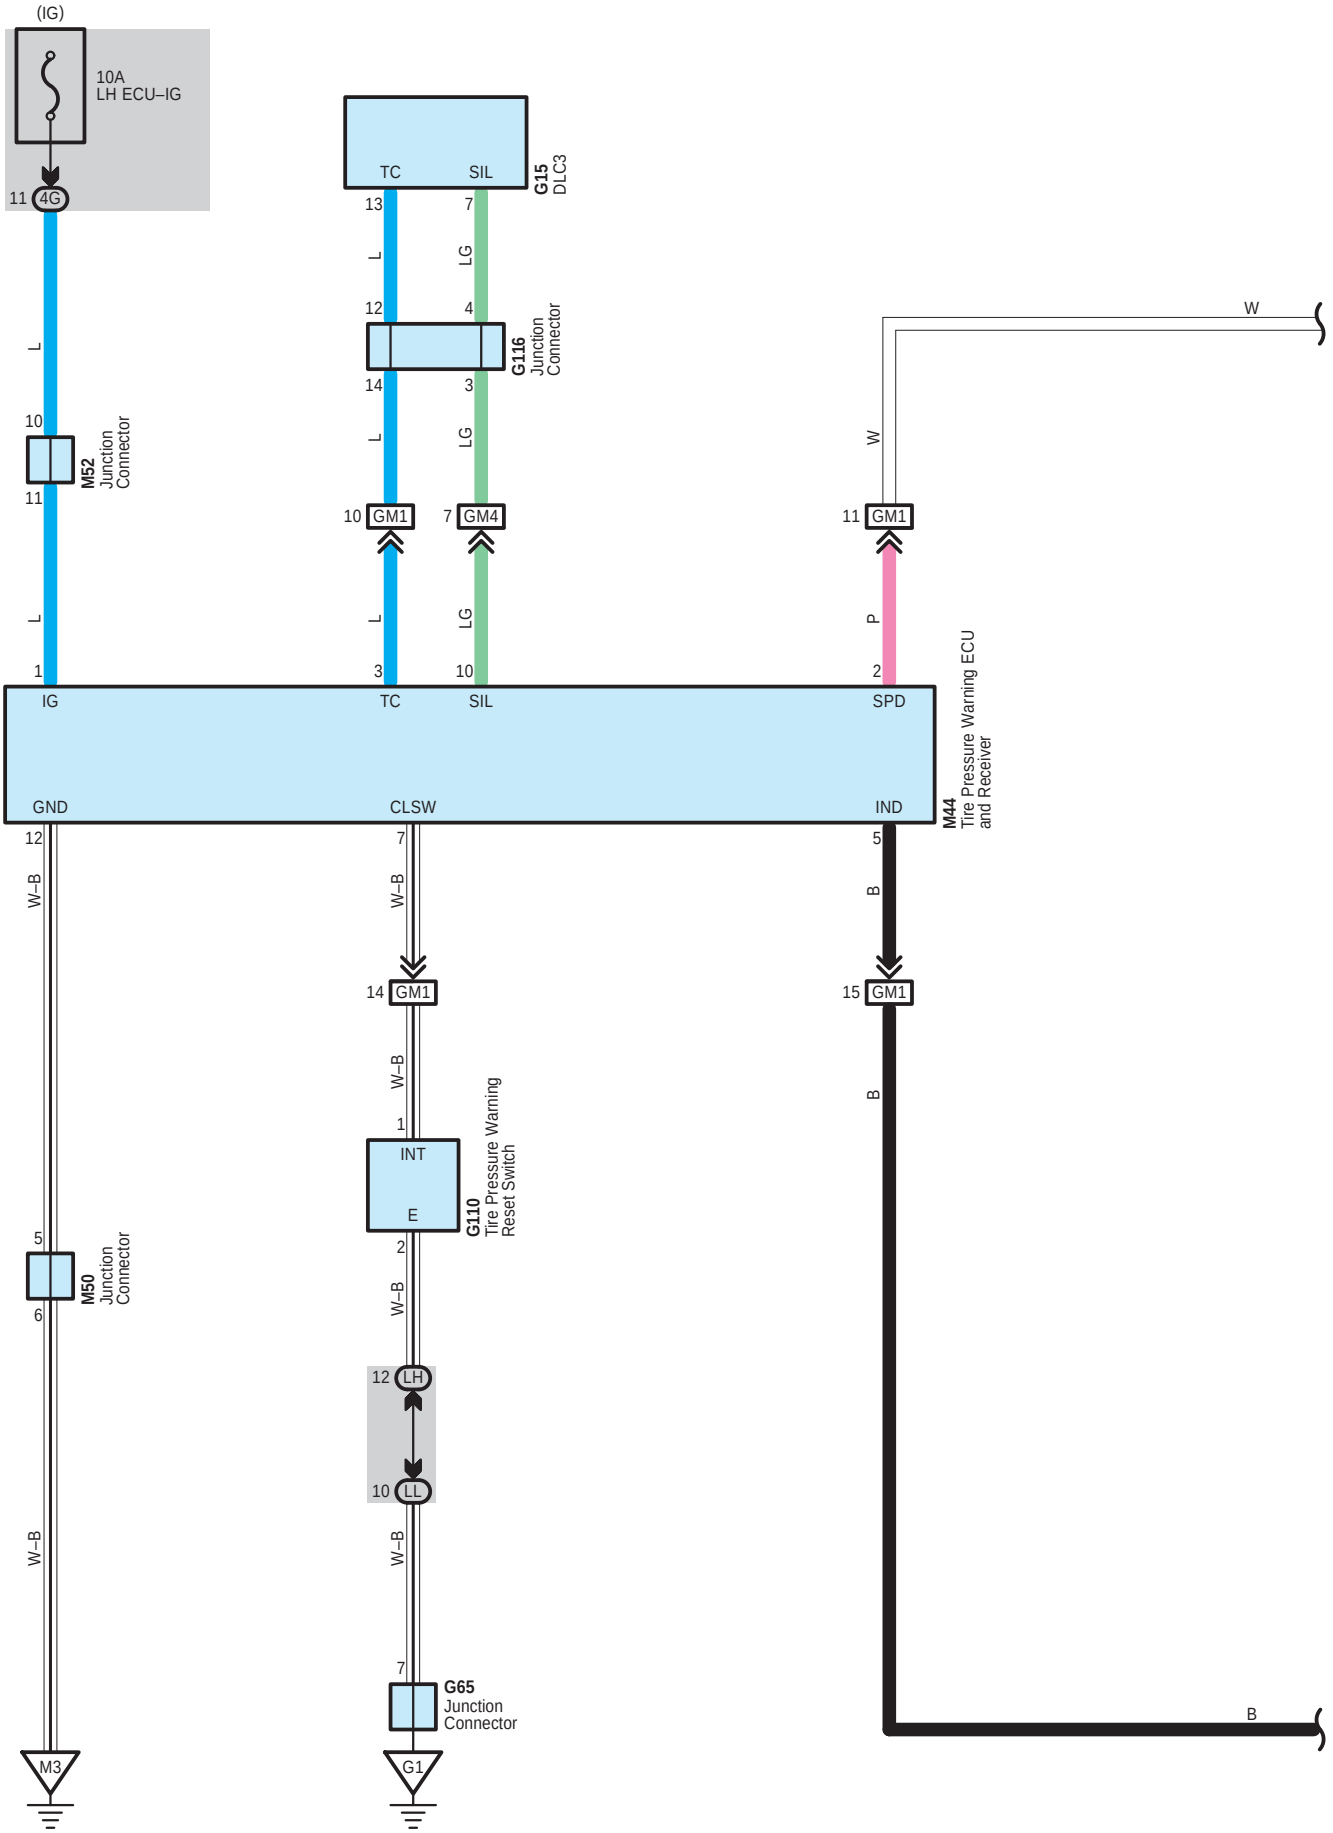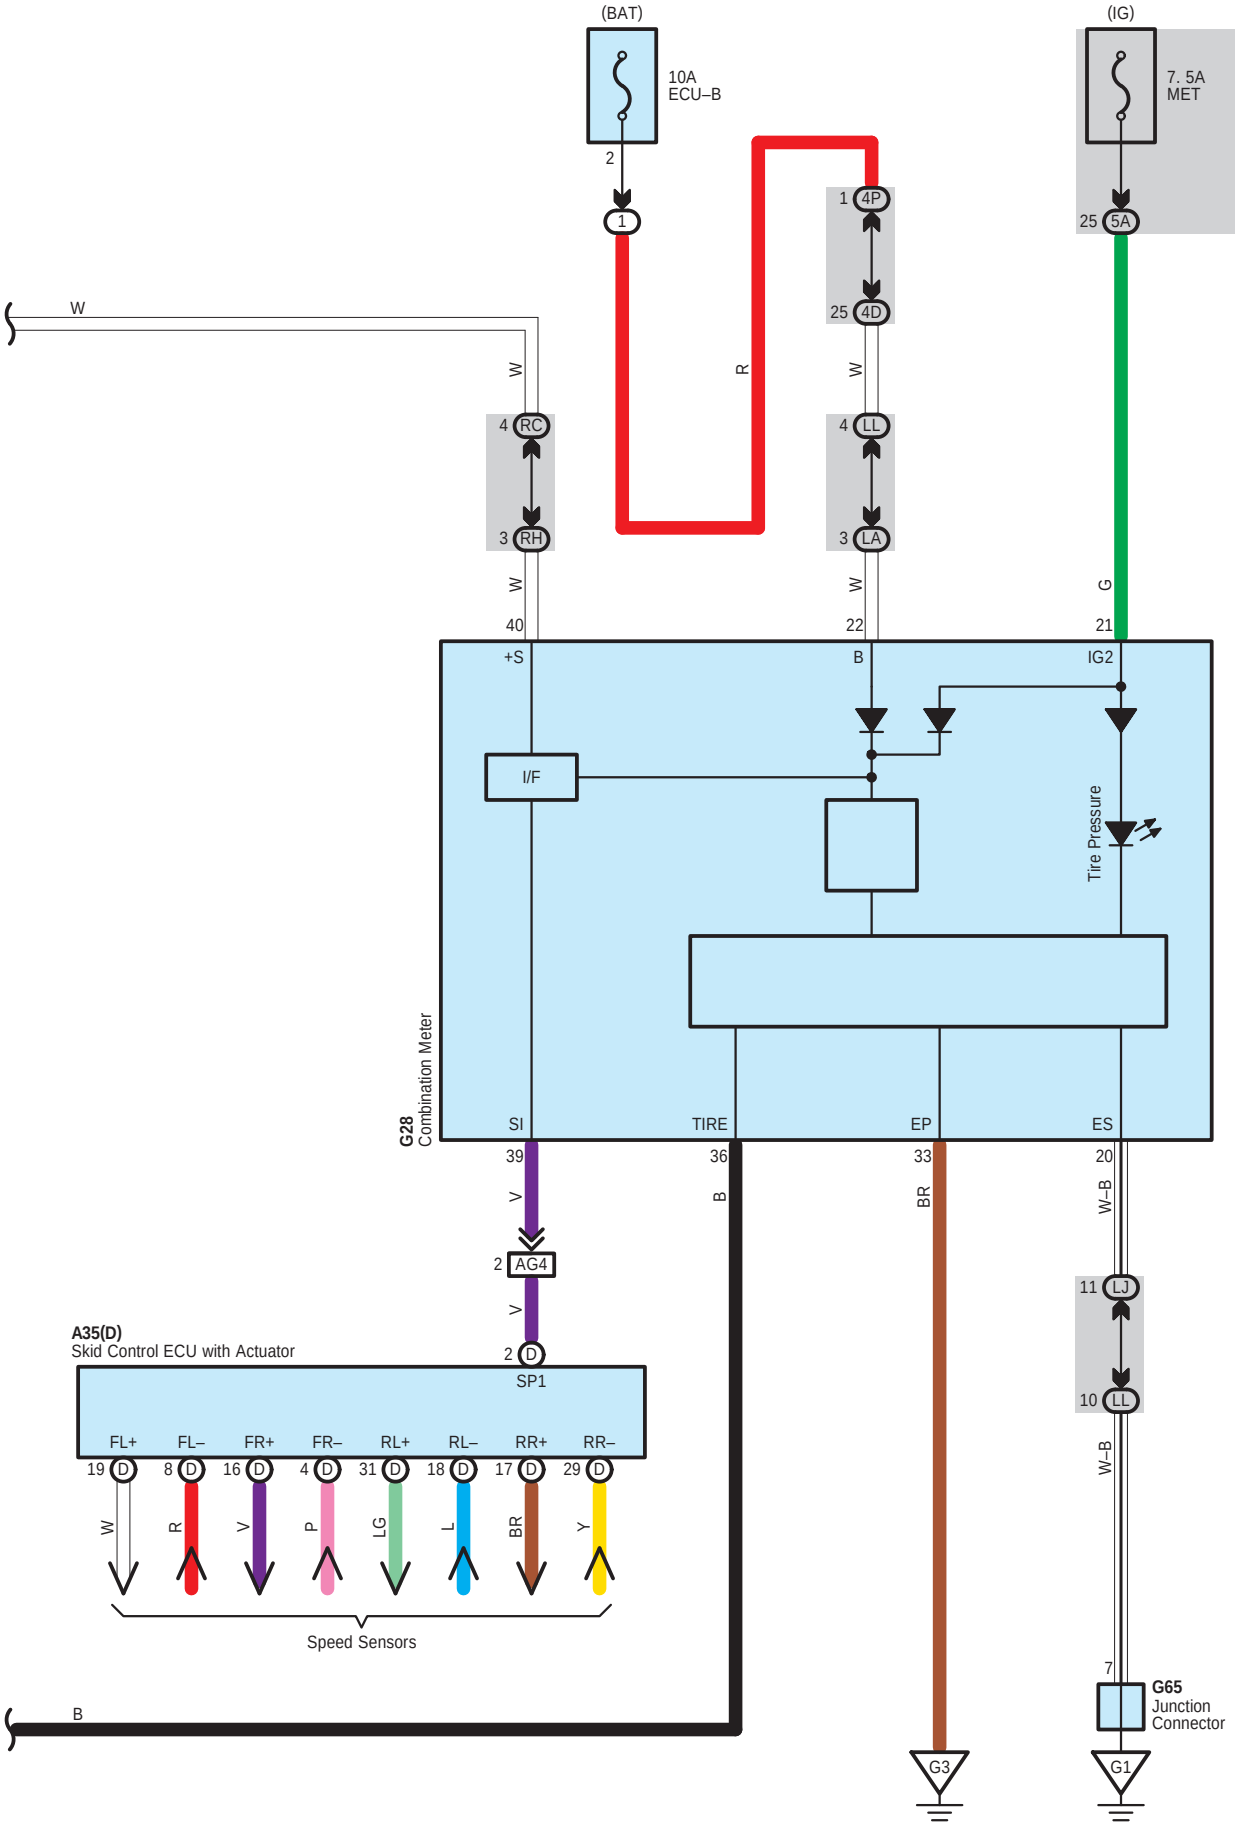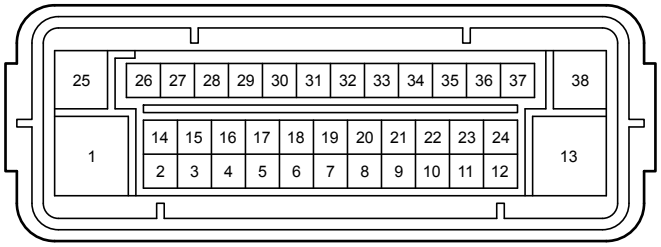


G 15
White

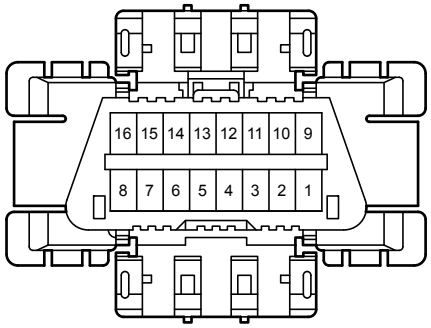


G 28
White

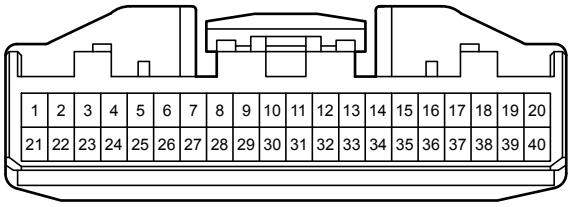


G 65
Black

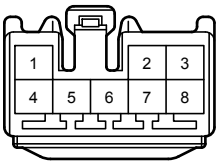


G110
Black




G116
Blue

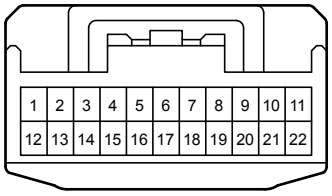


M 44
Black

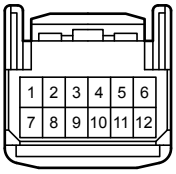


M 50
Blue

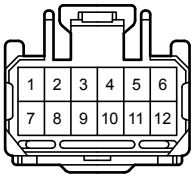


M 52
Gray

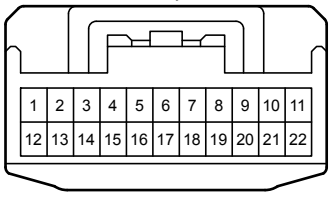


4D
White

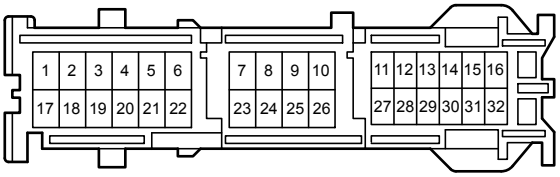

4G
White

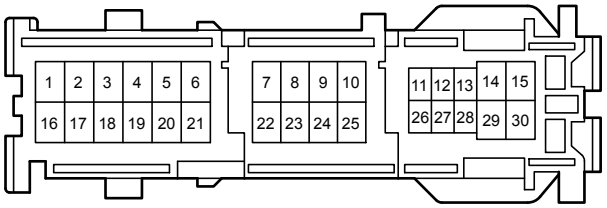


4P
Blue

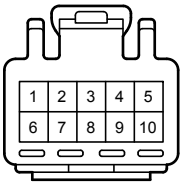



(From May 2016 Production)

5A
White

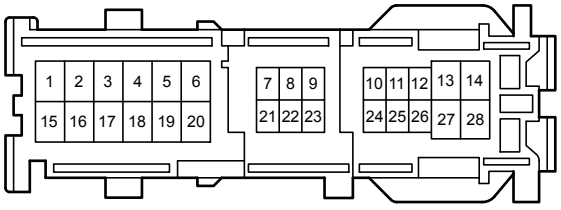

LA
White



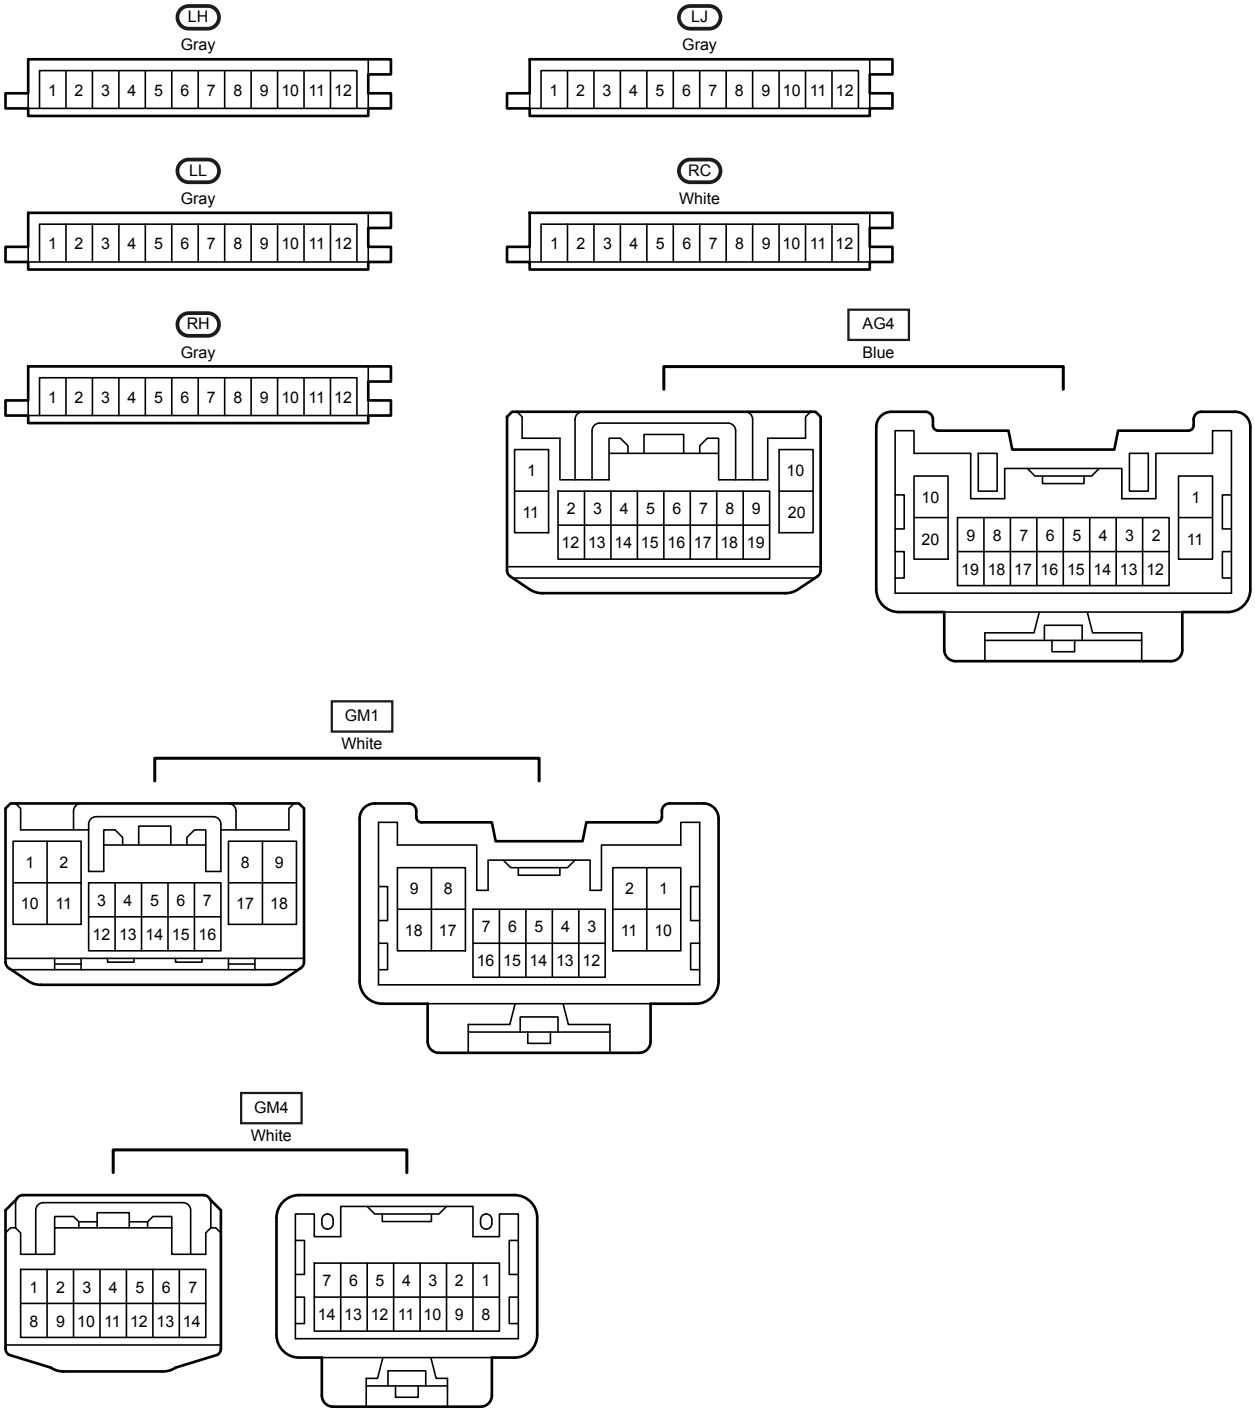
LH
Gray
1 2 3 4 5 6 7 8 9 10 11 12
LJ
Gray
1 2 3 4 5 6 7 8 9 10 11 12
LL
Gray
1 2 3 4 5 6 7 8 9 10 11 12
RC
White
1 2 3 4 5 6 7 8 9 10 11 12
RH
Gray
1 2 3 4 5 6 7 8 9 10 11 12
AG4
Blue
1 10 11 2 3 4 5 6 7 8 9 20 12 13 14 15 16 17 18 19
10 1 20 9 8 7 6 5 4 3 2 11 19 18 17 16 15 14 13 12
GM1
White
1 2 8 9 10 11 3 4 5 6 7 17 18 12 13 14 15 16
9 8 2 1 18 17 7 6 5 4 3 11 10 16 15 14 13 12
GM4
White
1 2 3 4 5 6 7 8 9 10 11 12 13 14
7 6 5 4 3 2 1 14 13 12 11 10 9 8