RADIATOR SIDE SUPPORT (ASSY)




F25273A

With the radiator upper support removed.

Symbol meaning	
REMOVAL	▲ M ▲ : Remove Weld Points
INSTALLATION	⊙ : Spot Weld ■ M I : Plug Weld

F44952B

REMOVAL·INSTALLATION

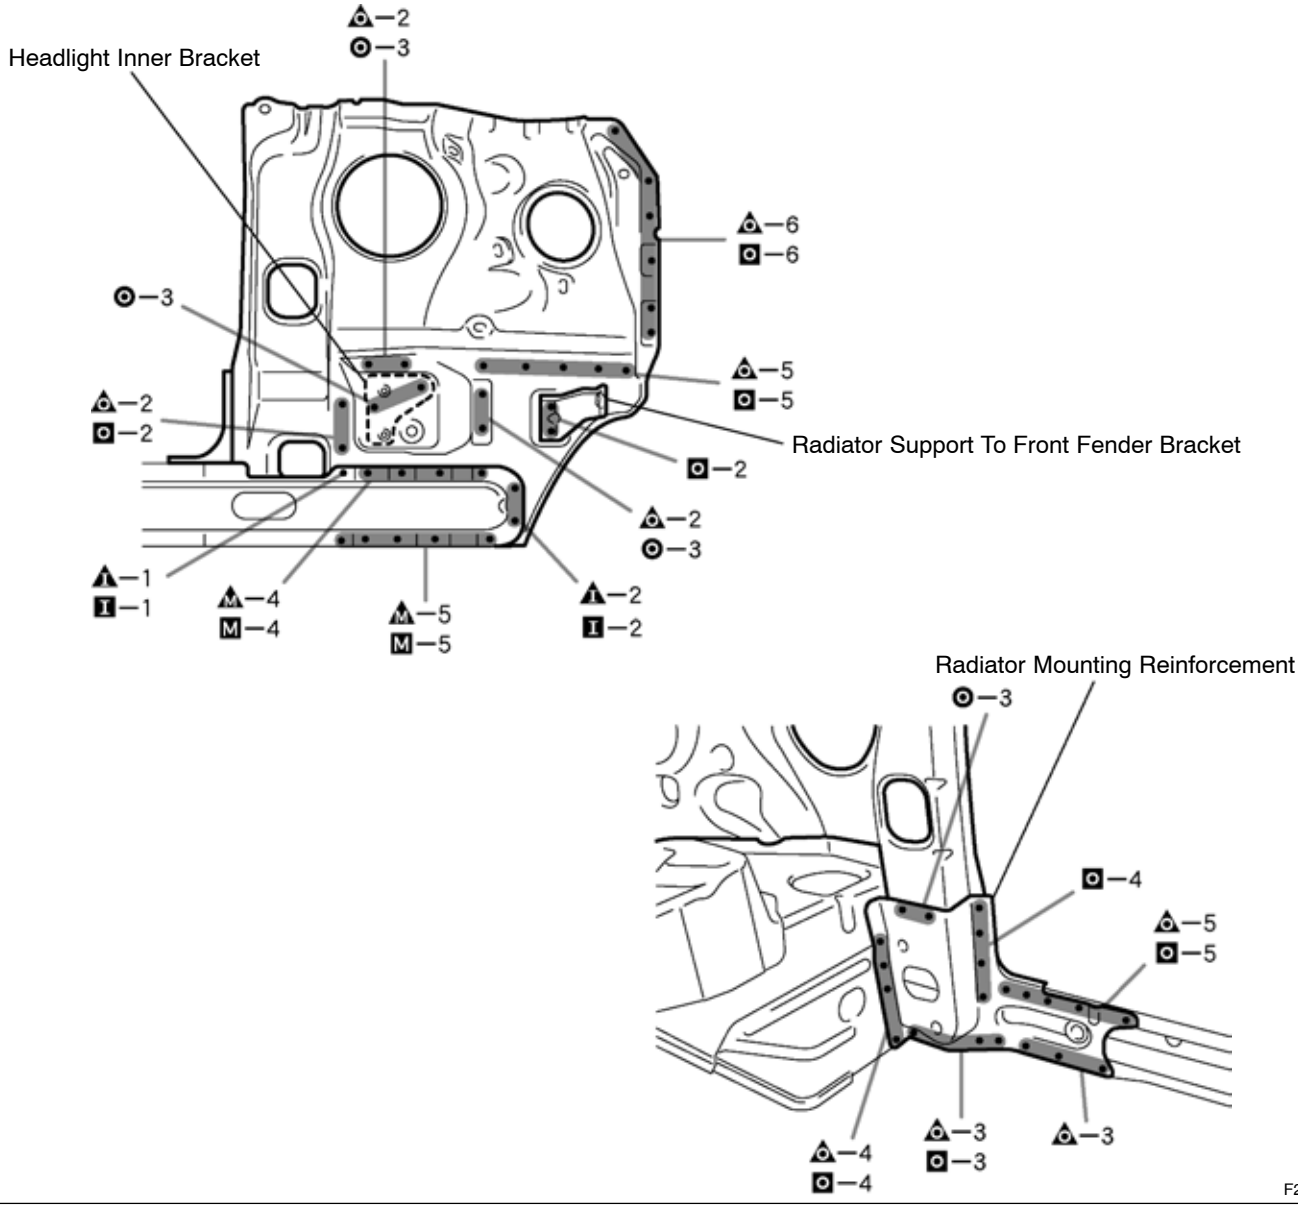

F25273

REMOVAL POINT

1 Remove the radiator mounting reinforcement at the same time.

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer to the corresponding parts. (See the paint·coating)