RADIATOR SUPPORT (ASSY)




F25275A

Symbol meaning

REMOVAL	▲ : Remove Weld Points	
INSTALLATION	⊙ : Spot Weld	◘ : Plug Weld

F44954B

REMOVAL·INSTALLATION

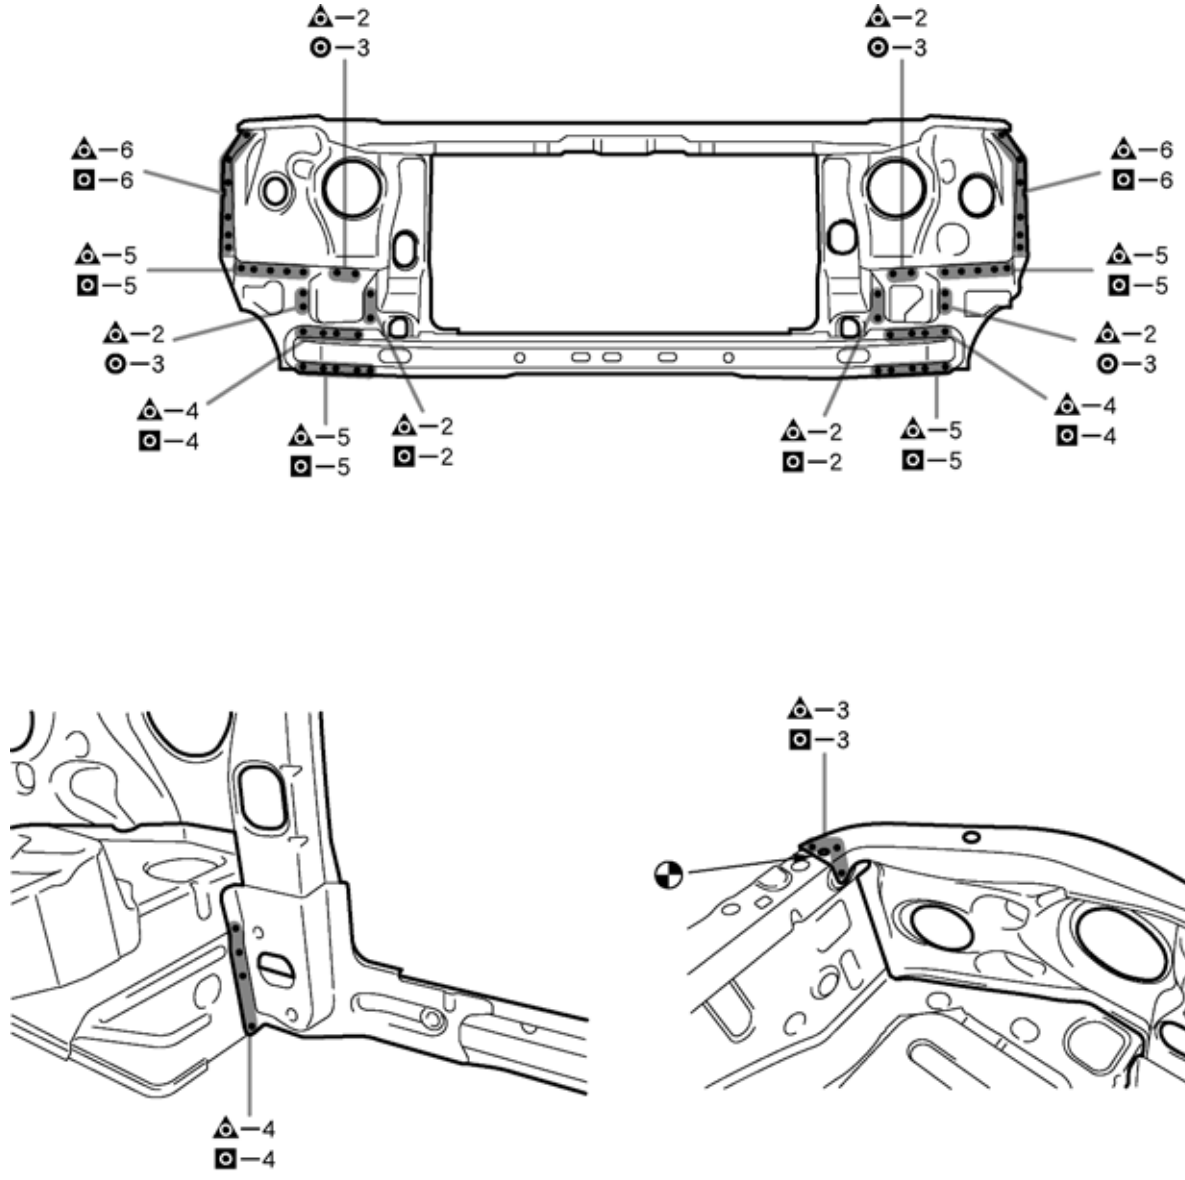

F25275

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer to the corresponding parts. (See the paint·coating)