COWL TOP SIDE INNER (ASSY)



F25279A


With the cowl top to apron brace removed.


Symbol meaning

REMOVAL	A M A : Remove Weld Points
INSTALLATION	O M I : Plug Weld

F44958B

REMOVAL·INSTALLATION

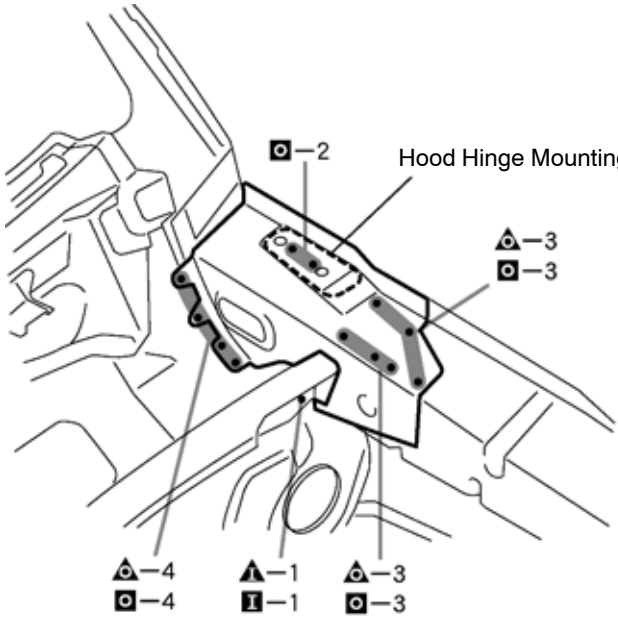

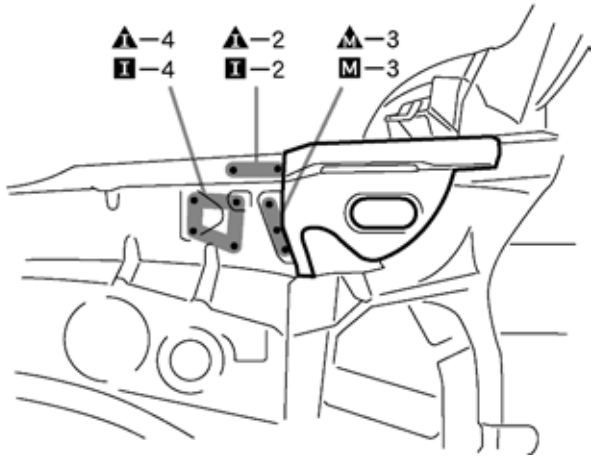

F25279

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.