ROCKER OUTER PANEL (CUT)




F25289A

Symbol meaning

REMOVAL	: Remove Weld Points	: Cut Location for Supply Parts
INSTALLATION	: Plug Weld	: Butt Weld

F44960B

REMOVAL·INSTALLATION

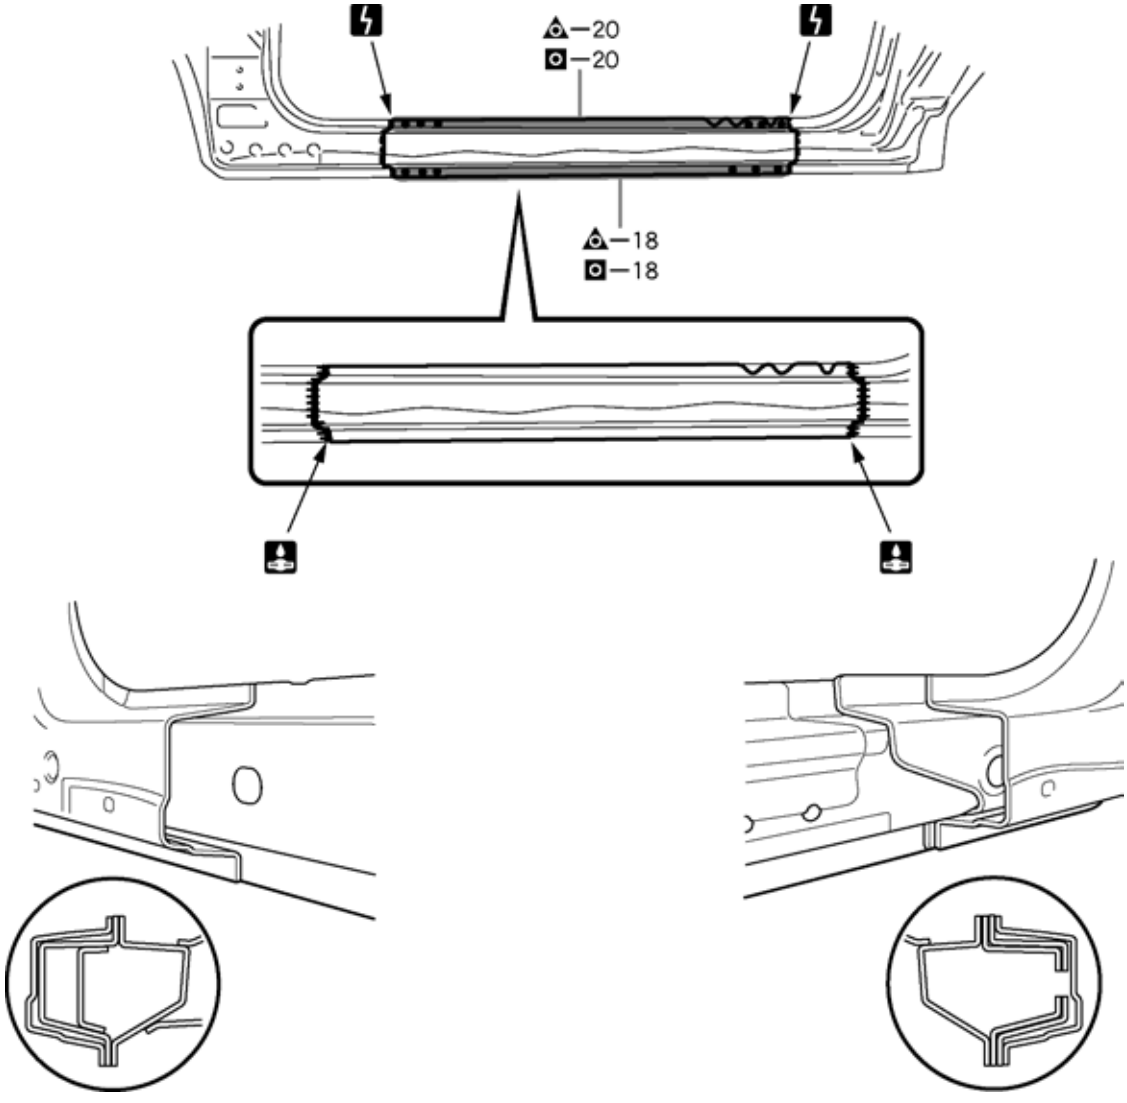

F25289

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.